

CONTROLLERS FOR MULTIPLEXED CABINETS

XM660K- XM669K

CONTENTS

CONTENTS	1
1. GENERAL WARNING	1
2. GENERAL DESCRIPTION	1
3. USER INTERFACE	1
4. FAST ACCESS MENU	2
5. THE SECTION MENU	2
6. REAL TIME CLOCK FUNCTIONS (if present)	2
7. ELECTRONIC EXPANSION VALVE MENU (ONLY FOR XM669K)	2
8. CONTROLLING LOADS	2
9. PARAMETER LIST	3
10. DIGITAL INPUTS	5
11. INSTALLATION AND MOUNTING	5
12. ELECTRICAL CONNECTIONS	5
13. RS485 SERIAL LINE	5
14. USE OF THE PROGRAMMING "HOT KEY"	6
15. ALARM SIGNALS	6
16. TECHNICAL DATA	6
17. CONNECTIONS	6
18. DEFAULT SETTING VALUES	6

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

1.2 SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.p.A." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

2. GENERAL DESCRIPTION

The **XM660K/XM669K** are high level microprocessor based controllers for multiplexed cabinets suitable for applications on medium or low temperature. It can be inserted in a LAN of up to 8 different sections which can operate, depending on the programming, as stand alone controllers or following the commands coming from the other sections. The **XM660K/XM669K** are provided with 4 relay outputs to control the solenoid valve, defrost - which can be either electrical or hot gas - the evaporator fans, the lights and with one output to drive **pulsed electronic expansion valves (only XM669K)**. The devices are also provided with four probe inputs, one for temperature control, one to control the defrost end temperature of the evaporator, the third for the display and the fourth can be used for application with virtual probe or for inlet/outlet air temperature measurement. The model **XM669K** is provided by other two probes that have to be used for superheat measurement and regulation. Finally, the **XM660K/XM669K** are equipped with two digital inputs (free contact) fully configurable by parameters.

The instruments are equipped with the HOTKEY connector that permits to be programmed in a simple way. Direct serial output **RS485 ModBUS-RTU** compatible permits a simple XWEB interfacing. **RTC** are available as options. The HOTKEY connector can be used to connect **X-REP** display (Depending on the model).

3. USER INTERFACE



SET



To display and modify target set point; in programming mode it selects a parameter or confirm an operation.

By holding it pressed for 3s when max or min temperature is displayed it will be erased.

In programming mode it browses the parameter codes or increases the displayed value.

By holding it pressed for 3s the give access to the "Section" menu.

By pressing and releasing this key you get the access to fast access menu



in programming mode it browses the parameter codes or decreases the displayed value.

By pressing and releasing this key you can activate or deactivate the auxiliary output

By holding it pressed for 3s the defrost is started.

Switch ON and OFF the room light.

By pressing for about 3s switch ON and OFF the instrument.

Measurement unit

Measurement unit

Measurement unit

Measurement unit

BAR
PSI

KEY COMBINATIONS



To lock and unlock the keyboard.



To enter the programming mode.



To exit the programming mode.

3.1 USE OF LEDS

Each LED function is described in the following table.

LED	MODE	FUNCTION
	ON	Compressor and valve regulation enabled, to see valve opening percentage you should see the fast access menu
	Flashing	Anti-short cycle delay enabled
	ON	Defrost enabled
	Flashing	Drip time in progress
	ON	An alarm is occurring
	ON	Energy saving enabled
	ON	The fan is running
	Flashing	Door opened or delay to restart fan after defrost
AUX	ON	The auxiliary relay is ON
°C/°F/Bar/PSI	ON	Measurement unit
°C/°F/Bar/PSI	Flashing	Programming phase
	ON	The controller is working in "ALL" mode
	Flashing	The controller is working in remote virtual display mode
	Flashing	During the CLOCK modification (if clock is present)

3.2 HOW TO ENTER INTO FAST ACCESS MENU



- Press and release the key.
- First Label will be displayed. By pressing the or keys it's possible to navigate the menu

3.3 HOW TO SEE THE MAX AND MIN TEMPERATURE RECORDED



- Press and release the key.
- First Label will be displayed. By pressing the or keys it's possible to navigate the menu. Search the L't label and press SET to see minimum temperature; search the H't label and press SET to see maximum temperature;

3.4 HOW TO SEE AND MODIFY THE SET POINT



- Push for about 3 seconds the **SET** key: the display will show the Set point value;
- The measurement unit starts blinking;
- To change the Set value push the or arrows within 10s.
- To store the new set point value push the **SET** key again or wait 10s.

3.5 HOW TO START A MANUAL DEFROST



Push the **DEF** key for more than 3 seconds and a manual defrost will start.

3.6 TO ENTER IN PARAMETERS LIST "PR1"

To enter the parameter list "Pr1" (user accessible parameters) operate as follows:



- Enter the Programming mode by pressing the **SET** and **DOWN** key for few seconds (measurement unit starts blinking).
- The instrument will show the first parameter present in "Pr1"

3.7 TO ENTER IN PARAMETERS LIST "PR2"

To access parameters in "Pr2":

- Enter the "Pr1" level.
 - Select "Pr2" parameter and press the **"SET"** key.
 - The **"PAS"** flashing message is displayed, shortly followed by "0 -" with a flashing zero.
 - Use or to input the security code in the flashing digit; confirm the figure by pressing **"SET"**. The security code is "321".
 - If the security code is correct the access to "Pr2" is enabled by pressing **"SET"** on the last digit.
- Another possibility is the following: after switching ON the instrument the user can push Set and DOWN keys within 30 seconds.

NOTE: each parameter in "Pr2" can be removed or put into "Pr1" (user level) by pressing "SET" + ∇ . When a parameter is present in "Pr1" LED () is on.

3.8 HOW TO CHANGE THE PARAMETER VALUE

1. Enter the Programming mode.
 2. Select the required parameter with \blacktriangle or \blacktriangledown .
 3. Press the "SET" key to display its value (measurement unit starts blinking).
 4. Use \blacktriangle or \blacktriangledown to change its value.
 5. Press "SET" to store the new value and move to the following parameter.
- To exit:** Press SET + UP or wait 15s without pressing a key.

NOTE: the new programming is stored even when the procedure is exited by waiting the time-out.

3.9 ON/OFF FUNCTION



By pushing the ON/OFF key, the instrument shows "OFF". During the OFF status, all the relays are switched OFF and the regulations are stopped; if a monitoring system is connected, it does not record the instrument data and alarms.

N.B. During the OFF status the Light and AUX buttons are active.

4. FAST ACCESS MENU

FAST ACCESS MENU

- HM Fast access to Clock settings;** (if present)
An Fast access to analog output reading; (if present)
SH Superheat: shows the actual superheat value; (Only XM669K)
oPP Valve opening percentage: shows actual opening percentage of the valve; (Only XM669K)
dP1 Probe 1 value displaying shows the temperature measured by probe 1;
dP2 Probe 2 value displaying shows the temperature measured by probe 2;
dP3 Probe 3 value displaying shows the temperature measured by probe 3;
dP4 Probe 4 value displaying shows the temperature measured by probe 4;
dP5 Probe 5 value displaying shows the temperature value measured by probe 5; (Only XM669K)
dP6 Probe 6 value displaying shows the temperature measured by probe 6; (Only XM669K)
dPP Pressure probe value shows the value of pressure measured by pressure transducer; (Only XM669K)
rPP Remote pressure probe value show the value of pressure received by remote pressure probe connected to other XM600K device; (Only XM669K)
L^{nt} minimum measured temperature shows the minimum temperature read by the regulation probe;
H^{nt} Maximum measured temperature shows the maximum temperature read by the regulation probe;
dPr Virtual regulation probe value shows the value measured by virtual regulation probe;
dPd Virtual defrost probe value shows the value measured by virtual defrost probe;
dPF Virtual fans probe value shows the value measured by virtual fan probe;
rSE Real set point: shows the set point used during the energy saving cycle or during the continuous cycle.

5. THE SECTION MENU

This menu allows the user to access to a particular feature of the XM series related to the LAN (Local Area Network) of controllers. A single keyboard, depending on the programming of this menu, is able to control either the module of the local section of the LAN or ALL. The possibilities are: **LOC:** the keyboard controls and display the value, the status and the alarms of the local section of the LAN; **ALL:** the command given by the keyboard are effective on all the sections of the LAN.

1. Push the \blacktriangle key for more than 3 seconds
2. The label corresponding to the section controlled by the keyboard will be displayed.
3. With \blacktriangle or \blacktriangledown key select the section you want to control.
4. Press "Set" key to confirm and exit

6. REAL TIME CLOCK FUNCTIONS (IF PRESENT)

The following functions are available only if the Real Time Clock is present. To get access to real time clock submenu:



1. Enter the Programming mode by pressing the SET and DOWN key for few seconds (measurement unit starts blinking).
2. The instrument will show RTC label;
3. Press SET. You are in RTC function menu;

6.1 TO SET CURRENT TIME AND DAY

- Hur Current hour** (0 + 23 h)
Min Current minute (0 + 59min)
dAY Current day (Sun + SAT)
Hd1 First weekly holiday (Sun + nu) Set the first day of the week which follows the holiday times.
Hd2 Second weekly holiday (Sun + nu) Set the second day of the week which follows the holiday times.
Hd3 Third weekly holiday (Sun + nu) Set the third day of the week which follows the holiday times.

N.B. Hd1,Hd2,Hd3 can be set also as "nu" value (Not Used).

6.2 TO SET ENERGY SAVING TIMES

- ILE Energy Saving cycle start during workdays:** (0 + 23h 50 min.) During the Energy Saving cycle the set point is increased by the value in HES so that the operation set point is SET + HES.
dLE Energy Saving cycle length during workdays: (0 + 24h 00 min.) Sets the duration of the Energy Saving cycle on workdays.
ISE Energy Saving cycle start on holidays. (0 + 23h 50 min.)
dSE Energy Saving cycle length on holidays (0 + 24h 00 min.)
HES Temperature increase during the Energy Saving cycle (-30+30°C / -54+54°F) sets the increasing value of the set point during the Energy Saving cycle.

6.3 TO SET TIMED DEFROST PARAMETERS

- Ld1+Ld6 Workday defrost start** (0 + 23h 50 min.) These parameters set the beginning of the eight programmable defrost cycles during workdays. Ex. When Ld2 = 12.4 the second defrost starts at 12.40 during workdays.

Sd1+Sd6 Holiday defrost start (0 + 23h 50 min.) These parameters set the beginning of the eight programmable defrost cycles on holidays. Ex. When Sd2 = 3.4 the second defrost starts at 3.40 on holidays.

To disable a defrost cycle set it to "nu"(not used). Ex. If Ld6=nu; the sixth defrost cycle is disabled

7. ELECTRONIC EXPANSION VALVE MENU (ONLY FOR XM669K)



1. Enter the Programming mode by pressing the SET and DOWN key for few seconds (measurement unit starts blinking).
2. Press arrows until the instrument shows EEV label;
3. Press SET. You are now in EEV function menu;

8. CONTROLLING LOADS

8.1 THE SOLENOID VALVE


The regulation is performed according to the temperature measured by the thermostat probe that can be physical probe or virtual probe obtained by a weighted average between two probes (see parameters table description) with a positive differential from the set point. If the temperature increases and reaches set point plus differential the solenoid valve is opened and then it is closed when the temperature reaches the set point value again.

In case of fault in the thermostat probe the opening and closing time of solenoid valve is configured by "Con" and "CoF" parameters.

8.2 STANDARD REGULATION AND CONTINUOUS REGULATION

The regulation can be performed in two ways: the goal of the first way (**standard regulation**) is reaching the best superheat via a classic temperature regulation obtained using hysteresis. The second way, permits to use the valve to realise an high performance temperature regulation with a good factor of superheat precision. **This second possibility, it can be used only in centralized plants and it is available only with electronic expansion valve** by selecting CrE=Y parameter.


In any case, the regulation is performed via PI regulator that gives the opening percentage to the valve via PWM modulation explained as follow. Opening percentage is obtained from average of Opening Time respect to CyP time period like following diagram:

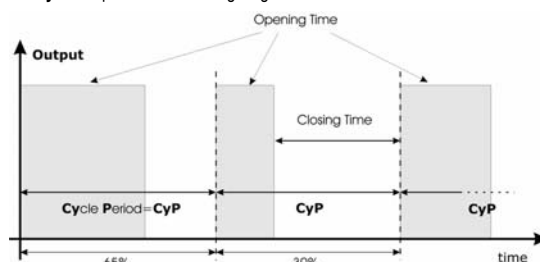

With opening percentage we mean percentage of cycle period where valve is open. For example, if **CyP=6s** (standard value) by saying: "The valve is opened at 50%"; this means that the valve is opened for 3s during cycle period.


First kind of regulation:

In this case, the **Hy** parameter is the differential for standard ON/OFF regulation. In this case the **int** parameter is neglected. The regulation follow this diagram:

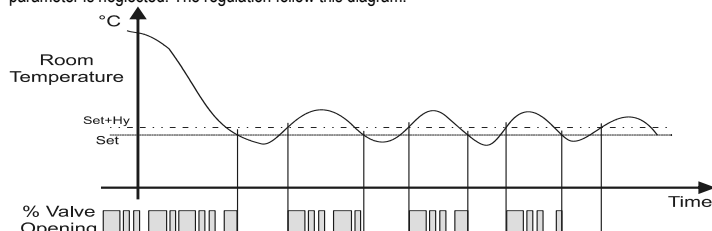

Second kind of regulation – Continuous regulation (only XM669K):

In this case, the **Hy** parameter is the proportional band of PI in charge of room temperature regulation and we advise to used at least **Hy=5.0°C/10°F**. The **int** parameter is the integral time of the same PI regulator. Increasing **int** parameter the PI regulator become slow in reaction and of course is true vice versa. To disable the integral part of regulation you should set **int=0**.

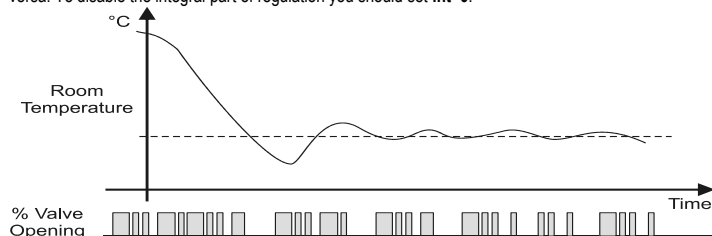

8.3 DEFROST

Defrost starting

In any case, the device check the temperature read by configured defrost probe before starting defrost procedure, after that:

- (if RTC is present) Two defrost modes are available through the "tdF" parameter: defrost with electrical heater and hot gas defrost. The defrost interval is controlled by parameter "EdF": (EdF = rtc) defrost is made in real time depending on the hours set in the parameters Ld1...Ld6 in workdays and in Sd1...Sd6 on holidays; (EdF = in) the defrost is made every "tdF" time;
- defrost cycle starting can be operated locally (manual activation by means of the keyboard or digital input or end of interval time) or the command can come from the Master defrost unit of the LAN. In

this case the controller will operate the defrost cycle following the parameters it has programmed but, at the end of the drip time, will wait that all the other controllers of the LAN finish their defrost cycle before to re-start the normal regulation of the temperature according to **dEM** parameter;

- Every time any of the controller of the LAN begin a defrost cycle it issue the command into the network making all the other controllers start their own cycle. This allows a perfect synchronisation of the defrost in the whole multiplexed cabinet according to **LMD** parameter;
- Selecting **dPA** and **dPb** probes and by changing the **dtP** and **ddP** parameters the defrost can be started when the difference between dPA and dPb probes is lower than dtP for all ddP time. This is useful to start defrost when a low thermal exchange is detected. If **ddP=0** this function is disabled;

Defrost ending

- When defrost is started via **rtc**, the maximum duration of defrost is obtained from **Md** parameter and the defrost end temperature is obtained from **dTE** parameter (and **dtS** if two defrost probes are selected).
- If **dPA** and **dPb** are present and **d2P=y** the instrument stops the defrost procedure when **dPA** is higher than **dTE** temperature and **dPb** is higher than **dtS** temperature;

At the end of defrost the drip time is controlled through the "**Fdt**" parameter.

8.4 FANS


CONTROL WITH RELAY

The fan control mode is selected by means of the "**FnC**" parameter:

- C-n** = running with the solenoid valve, OFF during the defrost;
- C-y** = running with the solenoid valve, ON during the defrost;
- O-n** = continuous mode, OFF during the defrost;
- O-y** = continuous mode, ON during the defrost;

An additional parameter "**FSI**" provides the setting of temperature, detected by the evaporator probe, above which the fans are always OFF. This can be used to make sure circulation of air only if his temperature is lower than set in "**FSI**".

CONTROL WITH ANALOG OUTPUT (if present)

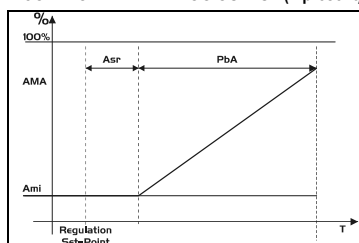


The modulating output (**trA=rEG**) works in proportional way (excluding the first **AMt** seconds where the fans speed is the maximum). The regulation set point is relative to regulation set point and is indicated by **ASr**, the proportional band is always located above **SET+ASr** value and its value is **PbA**. The fan are at minimum speed (**AMi**) when the temperature read by fan probe is **SET+ASr** and the fan is at maximum speed (**AMA**) when the temperature is **SET+ASr+PbA**.

8.5 ANTI SWEAT HEATERS (IF PRESENT)

This control is performed when **trA=AC**. In this case, there is two way to control the anti-sweat heaters:

- Without real dew-point information: in this case the default value for dew-point is used (**SdP** parameter).
- Receiving dew-point from XWEB5000 system: the **SdP** parameter is overwritten when valid value for dew-point is received from XWEB.

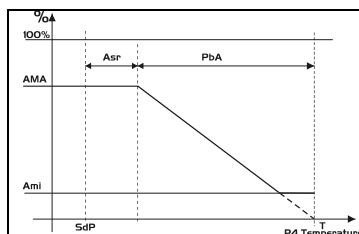

The P4 probe is used to perform the regulation and it should be placed on the showcase glass. In case of P4 error or if P4 is absent the output is at **AMA** value for the **AMt** time then the output is at 0 value for the time **255-AMt** time performing a simple PWM modulation.

9. PARAMETER LIST

REGULATION

- rtC** Access to **CLOCK** submenu (if present);
- EEU** Access to **EEV** submenu (only **XM669K**);
- Hy** **Differential**: (0.1÷25.5°C; 1÷45°F): Intervention differential for set point, always positive. Solenoid valve Cut IN is Set Point Plus Differential (**Hy**). Solenoid valve Cut OUT is when the temperature reaches the set point.
- Int** **Integral time for room temperature regulation** (Only **XM669K**): (0 ÷ 255 s) integral time for room temperature PI regulator. 0= no integral action;
- CrE** **Continuous regulation activation** (Only **XM669K**): (n÷Y) n= standard regulation; Y= continuous regulation. Use it only in centralized plants;
- LS** **Minimum set point limit**: (-55.0°C÷SET; -67°F÷SET) Sets the minimum acceptable value for the set point.
- US** **Maximum set point limit**: (SET+150°C; SET+302°F) Set the maximum acceptable value for set point.
- OdS** **Outputs activation delay at start up**: (0÷255 min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter. (AUX and Light can work)
- AC** **Anti-short cycle delay**: (0÷60 min) interval between the solenoid valve stop and the following restart.
- CCt** **Compressor ON time during continuous cycle**: (0.0÷24.0h; resolution 10min) Allows to set the length of the continuous cycle: compressor stays on without interruption for the **CCt** time. Can be used, for instance, when the room is filled with new products.
- CCS** **Set point for continuous cycle**: (-55÷150°C / -67÷302°F) it sets the set point used during the continuous cycle.
- Con** **solenoid valve ON time with faulty probe**: (0÷255 min) time during which the solenoid valve is active in case of faulty thermostat probe. With **Con=0** solenoid valve is always OFF.
- CoF** **solenoid valve OFF time with faulty probe**: (0÷255 min) time during which the solenoid valve is off in case of faulty thermostat probe. With **CoF=0** solenoid valve is always active.

DISPLAY

- CF** **Temperature measurement unit**: °C=Celsius; °F=Fahrenheit. !!! **WARNING** !!! When the measurement unit is changed the parameters with temperature values **have to be checked**.
- PrU** **Pressure mode**: (rEL or AbS) it defines the mode to use the pressure. !!! **WARNING** !!! the setting of **PrU** is used for all the pressure parameters. If **PrU=rEL** all pressure parameters are in relative pressure unit, if **PrU=AbS** all pressure parameters are in absolute pressure unit. (Only **XM669K**)
- PMU** **Pressure measurement unit**: (bAr – PSI – MPa) it selects the pressure measurement units. MPa= the value of pressure measured by kPa*10. (Only **XM669K**)
- PMd** **Way of displaying pressure**: (tEM – PrE) it permits showing the value measured by pressure probe with **tEM**= temperature or by **PrE**= pressure; (Only **XM669K**)
- rES** **Resolution** (for °C): (in = 1°C; dE = 0.1 °C) allows decimal point display;
- Lod** **Instrument display**: (nP; P1; P2, P3, P4, P5, P6, tEr, dEF) it selects which probe is displayed by the instrument. **P1, P2, P3, P4, P5, P6**, **tEr**= virtual probe for thermostat, **dEF**= virtual probe for defrost.
- red** **Remote display**: (nP; P1; P2, P3, P4, P5, P6, tEr, dEF) it selects which probe is displayed by the X-REP. **P1, P2, P3, P4, P5, P6**, **tEr**= virtual probe for thermostat, **dEF**= virtual probe for defrost.
- dLy** **Display delay**: (0 ÷ 24.0 m; resolution 10s) when the temperature increases, the display is updated of 1 °C/1°F after this time.
- rPA** **Regulation probe A**: (nP; P1; P2, P3, P4, P5) first probe used to regulate room temperature. If **rPA=nP** the regulation is performed with real value of **rPb**.
- rPb** **Regulation probe B**: (nP; P1; P2, P3, P4, P5) second probe used to regulate room temperature. If **rPb=nP** the regulation is performed with real value of **rPA**.
- rPE** **Regulation virtual probe percentage**: (0 ÷ 100%) it defines the percentage of the **rPA** respect to **rPb**. The value used to regulate room temperature is obtained by:

$$\text{value_for_room} = (\text{rPA} \cdot \text{rPE} + \text{rPb} \cdot (100 - \text{rPE})) / 100$$

ELECTRONIC EXPANSION VALVE SUBMENU (Only **XM669K**)

- FtY** **Kind of gas** (R22, 134, 404, 407, 410, 507, CO2): Type of gas used by plant. **Fundamental parameter for correct functioning of all system**.
- SSH** **Superheat set point**: (0.1°C ÷ 25.5°C) [1°F ÷ 45°F] it's the value used to regulate superheat
- CyP** **Cycle Period**: (1 ÷ 15s) it permits to set cycle time;
- Pb** **Proportional band**: (0.1 ÷ 60.0 / 1÷108°F) PI proportional band;
- rS** **Band Offset**: (-12.0 ÷ 12.0°C / -21÷21°F) PI band offset;
- inC** **Integration time**: (0 ÷ 255s) PI integration time;
- PEO** **Probe Error opening percentage**: (0÷100%) if a temporary probe error occurs, valve opening percentage is **PEO** until **PEd** time is elapsed;
- PEd** **Probe Error delay before stopping regulation**: (0÷239 sec. – On=unlimited) if probe error duration is bigger than **PEd** then valve totally closes. **Pf** message is showed. If **PEd=On** valve opening is **PEO** until probe error finishes;
- OPE** **Start opening Percentage**: (0÷100%) Opening valve percentage when start function is active. This phase duration is **Sfd** time;
- Sfd** **Start Function duration**: (0.0 ÷ 42.0 min: resolution 10s) It sets start function duration and post-defrost duration. **During this phase the alarms are neglected**;
- OPd** **Opening Percentage after defrost phase**: (0÷100%) Opening valve percentage when after defrost function is active. This phase duration is **Pdd** time;
- Pdd** **Post Defrost Function duration**: (0.0 ÷ 42.0 min: resolution 10s) It sets start function duration and post-defrost duration. **During this phase the alarms are neglected**;
- MnF** **Maximum opening percentage at normal Functioning**: (0÷100%) during regulation it sets the maximum valve opening percentage;
- dCL** **Delay before stopping valve regulation**: (0 ÷ 255s) When the cooling request goes off, the electronic valve regulation can go on for the **dCL** time in order to prevent uncontrolled superheat variation;
- Fot** **Forced opening percentage**: (0÷100% - nu) it permits to force the valve opening to the specified value. This value overwrite the value calculated by PID algorithm. !!! **WARNING** !!! to obtain the correct superheat regulation you have to set **Fot=nu**;
- tPP** **Type of Pressure Transducer**: (**PP** – **LAN**) it sets type of pressure transducer to use: **PP**= 4÷20mA pressure transducer or ratiometric transducer 0÷5V depending on **P5C** parameter, **LAN**= the pressure signal arrives from another **XM600K**; **Referred to Pb5**
- PA4** **Probe value At 4mA or At 0V**: (-1.0 ÷ P20 bar / -14 ÷ PSI / -10 ÷ P20 kPa*10) pressure value measured by probe at 4mA or at 0V (related to **PrM** parameter) **Referred to Pb5**
- P20** **Probe value 20mA or At 5V**: (PA4 ÷ 50.0 bar / 725 psi / 500 kPa*10) pressure value measured by probe at 20mA or at 5V (related to **PrM** parameter) **Referred to Pb5**
- LPL** **Lower Pressure Limit for superheat regulation**: (PA4 ÷ P20 bar / psi / kPa*10) when suction pressure comes down to **LPL** the regulation is performed with a **LPL** fixed value for pressure, when pressure comes back to **LPL** the normal pressure value is used. (related to **PrM** parameter)
- MOP** **Maximum Operating Pressure threshold**: (PA4 ÷ P20 bar / psi / kPa*10) if suction pressure exceeds maximum operating pressure value, instrument signals situation with **MOP** alarm. (related to **PrM** parameter)
- LOP** **Lowest Operating Pressure threshold**: (PA4 ÷ P20 bar / psi / kPa*10) if the suction pressure comes down to this value a low pressure alarm is signalled with **LOP** alarm. (related to **PrM** parameter)
- dML** **delta MOP-LOP**: (0 ÷ 100%) when a **MOP** alarm occurs valve will close of the **dML** percentage every cycle period until **MOP** alarm is active. When **LOP** occurs valve will open of the **dML** percentage every cycle period until **LOP** alarm is active.
- MSH** **Maximum Superheat alarm**: (LSH ÷ 80.0°C / LSH ÷ 144°F) when superheat exceeds this value an high superheat alarm is signalled after interval **SHd**
- LSH** **Lowest Superheat alarm**: (0.0 ÷ MSH °C / 0÷MSH °F) when superheat goes down to this value a low superheat alarm is signalled after interval **SHd**
- SHy** **Superheat alarm Hysteresis**: (0.1÷25.5°C/1÷45°F) hysteresis for superheat alarm deactivation
- SHd** **Superheat alarm activation delay**: (0.0 ÷ 42.0 min: resolution 10s) when a superheat alarm occurs, the time **SHd** have to pass before signalling alarm;
- FrC** **Fast-recovery Constant**: (0÷100 s) permits to increase integral time when **SH** is below the set-point. If **FrC=0** fast recovery function is disabled.

DEFROST

dPA	defrost Probe A: (nP; P1, P2, P3, P4, P5) first probe used for defrost. If rPA=nP the regulation is performed with real value of dPb.
dPb	defrost Probe B: (nP; P1, P2, P3, P4, P5) second probe used for defrost. If rPB=nP the regulation is performed with real value of dPA.
dPE	defrost virtual probe percentage: (0÷100%) it defines the percentage of the dPA respect to dPb. The value used to regulate room temperature is obtained by: $\text{value_for_defrost} = (\text{dPA} \cdot \text{dPE} + \text{dPb} \cdot (100 - \text{dPE})) / 100$
tdF	Defrost type: (EL – in) EL = electrical heater; in = hot gas;
EdF	Defrost mode: (rtc – in) (only if RTC is present) rtc= defrost activation via RTC; in= defrost activation with idf.
Srt	Heater set point during defrost: (-55.0 ÷ 150.0°C; -67 ÷ 302°F) if tdF=EL during the defrost the defrost relay perform an ON/OFF regulation with Srt as set point.
Hyr	Differential for heater: (0.1°C ÷ 25.5°C ; 1°F ÷ 45°F) the differential for heater;
tod	Time out for heater: 0 ÷ 255 (min.) if the defrost probe temperature is bigger than Srt for all tod time the defrost ends although the defrost probe temperature is lower than dTE or dtS. It permits to reduce defrost duration;
dtP	Minimum temperature difference to start defrost: [0.1°C ÷ 50.0°C] [1°F ÷ 90°F] if the difference between the two defrost probes stays lower than dtP for all ddP time the defrost is activated;
ddP	Delay before starting defrost (related to dtP): (0 ÷ 60 min) delay related to dtP.
d2P	Defrost with two probes: (n – Y) n= only the dPA probe is used to defrost management; Y= defrost is managed with dPA probe and dPb probe. Defrost can performed only if both probe value are lower than dTE for dPA probe and dtS for dPb probe;
dTE	Defrost termination temperature (Probe A): (-55.0÷50.0°C; -67÷122°F) (Enabled only when the evaporator probe is present) sets the temperature measured by the evaporator probe dPA which causes the end of defrost;
dtS	Defrost termination temperature (Probe B): (-55.0÷50.0°C; -67÷122°F) (Enabled only when the evaporator probe is present) sets the temperature measured by the evaporator probe dPb which causes the end of defrost;
IdF	Interval between defrosts: (0÷120h) Determines the time interval between the beginning of two defrost cycles;
MdF	Maximum duration of defrost: (0÷255 min) When dPA and dPb aren't present, it sets the defrost duration, otherwise it sets the maximum duration for defrost;
dSd	Start defrost delay: (0 ÷ 255 min) This is useful when different defrost start times are necessary to avoid overloading the plant.
dFd	Display during defrost: rt = real temperature; it = temperature reading at the defrost start; Set = set point; dEF = "dEF" label;
dAd	Defrost display time out: (0÷255 min) Sets the maximum time between the end of defrost and the restarting of the real room temperature display.
Fdt	Drain down time: (0÷255 min.) time interval between reaching defrost termination temperature and the restoring of the control's normal operation. This time allows the evaporator to eliminate water drops that might have formed due to defrost.
dPo	First defrost after start-up: y = Immediately; n = after the IdF time
dAF	Defrost delay after continuous cycle: (0÷23.5h) time interval between the end of the fast freezing cycle and the following defrost related to it.

FAN

FPA	Fan probe A: (nP; P1, P2, P3, P4, P5) first probe used for fan. If FPA=nP the regulation is performed with real value of FPB;
FPB	Fan probe B: (nP; P1, P2, P3, P4, P5) second probe used for defrost. If FPB=nP the regulation is performed with real value of FPB;
FPE	Fan virtual probe percentage: (0÷100%) it defines the percentage of the FPA respect to FPB. The value used to regulate room temperature is obtained by: $\text{value_for_defrost} = (\text{FPA} \cdot \text{FPE} + \text{FPB} \cdot (100 - \text{FPE})) / 100$
FnC	Fan operating mode: C-n = running with the solenoid valve, OFF during the defrost; C-y = running with the solenoid valve, ON during the defrost; O-n = continuous mode, OFF during the defrost; O-y = continuous mode, ON during the defrost;
Fnd	Fan delay after defrost: (0÷255 min) The time interval between the defrost end and evaporator fans start.
Fct	Temperature differential avoiding short cycles of fans (0.0°C ÷ 50.0°C; 0°F ÷ 90°F) If the difference of temperature between the evaporator and the room probes is more than the value of the Fct parameter, the fans are switched on;
FSt	Fan stop temperature: (-50÷110°C; -58÷230°F) setting of temperature, detected by evaporator probe, above which the fan is always OFF.
FHy	Differential to restart fan: (0.1°C ÷ 25.5°C) (1°F ÷ 45°F) when stopped, fan restarts when fan probe reaches FSt-FHy temperature;
Fod	Fan activation time after defrost: (0 ÷ 255 min.) it forces fan activation for indicated time;
Fon	Fan ON time: (0÷15 min) with Fnc = C_n or C_y, (fan activated in parallel with compressor). it sets the evaporator fan ON cycling time when the compressor is off. With Fon = 0 and FoF ≠ 0 the fan are always off, with Fon=0 and FoF = 0 the fan are always on.
Fof	Fan OFF time: (0÷15 min) with Fnc = C_n or C_y, (fan activated in parallel with compressor). it sets the evaporator fan off cycling time when the compressor is off. With Fon = 0 and FoF ≠ 0 the fan are always off, with Fon=0 and FoF = 0 the fan are always on.

MODULATING OUTPUT (AnOUT) if present

trA	Kind of regulation with PWM output: (UAL – rEG – AC) it selects the functioning for the PWM output if CoM isn't equal to OA7. UAL= the output is at FSA value; rEG= the output is regulated with fan algorithm described in fan section; AC= anti-sweat heaters control (require the XWEB5000 system);
SOA	Fixed value for analog output: (0 ÷ 100%) value for the output if trA=UAL;
SdP	Default value for Dew point: (-55.0÷50.0°C; -67÷122°F) default value of dew point used when there is no supervising system (XWEB5000). Used only when trA=AC;
ASr	Dew-point offset (trA=AC) / Differential for modulating fan regulation (trA=rEG): (-25.5°C ÷ 25.5°C) (-45°F ÷ 45°F);
PbA	Differential for anti-sweat heaters: (0.1°C ÷ 25.5°C) (1°F ÷ 45°F)
Ami	Minimum value for analog output: (0÷AMA)
AMA	Maximum value for analog output: (Ami + 100)
AMt	Anti-sweat heaters cycle period (trA=AC) / Time with fan at maximum speed (trA=rEG): (0÷255 s) when the fan starts, during this time the fan is at maximum speed;

ALARMS

rAL	Probe for temperature alarm: (nP - P1 - P2 - P3 - P4 - P5 - tEr) it selects the probe used to signal alarm temperature
ALC	Temperature alarm configuration: rE = High and Low alarms related to Set Point; Ab = High and low alarms related to the absolute temperature.
ALU	High temperature alarm setting: (ALC= rE, 0 ÷ 50°C or 90°F / ALC= Ab, ALL ÷ 150°C or 302°F) when this temperature is reached and after the ALd delay time the HA alarm is enabled.
ALL	Low temperature alarm setting: (ALC = rE, 0 ÷ 50 °C or 90°F / ALC = Ab, - 55°C or - 67°F + ALU) when this temperature is reached and after the ALd delay time, the LA alarm is enabled.
AHy	Differential for temperature alarm: (0.1°C ÷ 25.5°C / 1°F ÷ 45°F) Intervention differential for recovery of temperature alarm;
ALd	Temperature alarm delay: (0÷255 min) time interval between the detection of an alarm condition and the corresponding alarm signalling.
dLU	High temperature alarm (defrost probe): (ALC= rE, 0 ÷ 50°C or 90°F / ALC= Ab, ALL ÷ 150°C or 302°F) when this temperature is reached and after the ddA delay time the HAd alarm is enabled.
dLL	Low temperature alarm (defrost probe): (ALC = rE, 0 ÷ 50 °C or 90°F / ALC = Ab, - 55°C or - 67°F + ALU) when this temperature is reached and after the ALd delay time, the LAd alarm is enabled.
dAH	Differential for temperature alarm (defrost probe): (0.1°C ÷ 25.5°C / 1°F ÷ 45°F) Intervention differential for recovery of temperature alarm;
dda	Temperature alarm delay (defrost probe): (0÷255 min) time interval between the detection of an alarm condition and the corresponding alarm signalling.
FLU	High temperature alarm (defrost probe): (ALC= rE, 0 ÷ 50°C or 90°F / ALC= Ab, ALL ÷ 150°C or 302°F) when this temperature is reached and after the FAd delay time the HAF alarm is enabled.
FLL	Low temperature alarm (defrost probe): (ALC = rE, 0 ÷ 50 °C or 90°F / ALC = Ab, - 55°C or - 67°F + ALU) when this temperature is reached and after the FAd delay time, the LAF alarm is enabled.
FAH	Differential for temperature alarm (defrost probe): (0.1°C ÷ 25.5°C / 1°F ÷ 45°F) Intervention differential for recovery of temperature alarm;
FAd	Temperature alarm delay (defrost probe): (0÷255 min) time interval between the detection of an alarm condition and the corresponding alarm signalling.
dAO	Delay of temperature alarm at start-up: (0min÷23h 50min) time interval between the detection of the temperature alarm condition after the instrument power on and the alarm signalling.
EdA	Alarm delay at the end of defrost: (0÷255 min) Time interval between the detection of the temperature alarm condition at the end of defrost and the alarm signalling.
dot	Temperature alarm exclusion after door open:
Sti	Stop regulation interval (Only XM669K): (0.0÷24.0 hours: tens of minutes) after regulating continuously for Sti time, the valve closes for Std time in order to prevent ice creation.
Std	Stop duration (Only XM669K): (0÷60 min.) it defines stop regulation time after Sti. During this stop display shows StP message

OPTIONAL OUTPUT (AnOUT) if present

OA7	Modulating output configuration (if CoM=OA7): (CPr - dEF - FAn - ALr - LiG - AUS - db) it selects the functioning of the modulating output in case of CoM=OA7: CPr= compressor; dEF= defrost; FAn= Fan; ALr= Alarm; LiG= Light; AUS= auxiliary; db= neutral zone (not available with CrE=Y);
CoM	Type of functioning modulating output: <ul style="list-style-type: none"> For models with PWM / O.C. output → PM5= PWM 50Hz; PM6= PWM 60Hz; OA7= two state, it can be used as an open collector output; For models with 4÷20mA / 0÷10V output → Cur= 4÷20mA current output; tEn= 0÷10V voltage output;

DIGITAL INPUTS

i1P	Digital input 1 polarity: (cL – oP) CL: the digital input is activated by closing the contact; OP: the digital input is activated by opening the contact.
i1F	Digital input 1 function: (EAL – bAL – PAL – dor – dEF – AUS – LiG – OnF – Htr – FHU – ES – Hdy) EAL= external alarm; bAL= serious external alarm; PAL= pressure switch activation; dor= door open; dEF= defrost activation; AUS= auxiliary activation; LiG= light activation; OnF= switch on/off the instrument; Htr= change type of action ; FHU= not used; ES= activate energy saving; Hdy= activate holiday function;
d1d	Time interval/delay for digital input alarm: (0÷255 min.) Time interval to calculate the number of the pressure switch activation when i1F=PAL. If i1F=EAL or bAL (external alarms), "d1d" parameter defines the time delay between the detection and the successive signalling of the alarm. If i1F=dor this is the delay to activate door open alarm
i2P	Digital input 2 polarity: (cL – oP) CL : the digital input is activated by closing the contact; OP: the digital input is activated by opening the contact.
i2F	Digital input 2 function: (EAL – bAL – PAL – dor – dEF – AUS – LiG – OnF – Htr – FHU – ES – Hdy) EAL= external alarm; bAL= serious external alarm; PAL= pressure switch activation; dor= door open; dEF= defrost activation; AUS= auxiliary activation; LiG= light activation; OnF= switch on/off the instrument; Htr= change type of action ; FHU= not used; ES= activate energy saving; Hdy= activate holiday function;
d2d	Time interval/delay for digital input alarm: (0÷255 min.) Time interval to calculate the number of the pressure switch activation when i2F=PAL. If i2F=EAL or bAL (external alarms), "d2d" parameter defines the time delay between the detection and the successive signalling of the alarm. If i2F=dor this is the delay to activate door open alarm
nPS	Pressure switch number: (0 ÷15) Number of activation of the pressure switch, during the "d#" interval, before signalling the alarm event (i2F= PAL). If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.
odc	Compressor and fan status when open door: no = normal; Fan = Fan OFF; CPr = Compressor OFF; F_C = Compressor and fan OFF.
rrd	Outputs restart after doA alarm: no = outputs not affected by the doA alarm; yES = outputs restart with the doA alarm;

RTC SUBMENU (if present)

CbP	Clock Presence (n+y): it permits to disable or enable the clock;
Hur	Current hour (0 ÷ 23 h)
Min	Current minute (0 ÷ 59min)
dAY	Current day (Sun ÷ SAT)
Hd1	First weekly holiday (Sun ÷ nu) Set the first day of the week which follows the holiday times.
Hd2	Second weekly holiday (Sun ÷ nu) Set the second day of the week which follows the holiday times.

Hd3	Third weekly holiday (Sun + nu) Set the third day of the week which follows the holiday times.
ILE	Energy Saving cycle start during workdays: (0 ÷ 23h 50 min.) During the Energy Saving cycle the set point is increased by the value in HES so that the operation set point is SET + HES.
dLE	Energy Saving cycle length during workdays: (0 ÷ 24h 00 min.) Sets the duration of the Energy Saving cycle on workdays.
ISE	Energy Saving cycle start on holidays: (0 ÷ 23h 50 min.)
dSE	Energy Saving cycle length on holidays (0 ÷ 24h 00 min.)
HES	Temperature increase during the Energy Saving cycle (-30÷30°C / -54÷54°F) sets the increasing value of the set point during the Energy Saving cycle.
Ld1+Ld6	Workday defrost start (0 ÷ 23h 50 min.) These parameters set the beginning of the eight programmable defrost cycles during workdays. Ex. When Ld2 = 12.4 the second defrost starts at 12.40 during workdays.
Sd1+Sd6	Holiday defrost start (0 ÷ 23h 50 min.) These parameters set the beginning of the eight programmable defrost cycles on holidays. Ex. When Sd2 = 3.4 the second defrost starts at 3.40 on holidays.

ENERGY SAVING

ESP	Energy saving probe selection: (nP - P1 - P2 - P3 - P4 - P5 - tEr).
HES	Temperature increase during the Energy Saving cycle : (-30÷30°C / -54÷54°F) sets the increasing value of the set point during the Energy Saving cycle.
PEL	Energy saving activation when light is switched off: (n+Y) n= function disabled; Y= energy saving is activated when the light is switched off and vice versa;

LAN MANAGEMENT

LMd	Defrost synchronisation: y= the section send a command to start defrost to other controllers, n= the section don't send a global defrost command
dEM	Type of end defrost: n= the of the LAN defrost are independent; y= the end of the defrost are synchronised;
LSP	L.A.N. set-point synchronisation: y= the section set-point, when modified, is updated to the same value on all the other sections; n= the set-point value is modified only in the local section
LdS	L.A.N. display synchronisation: y= the value displayed by the section is sent to all the other sections; n= the set-point value is modified only in the local section
LOF	L.A.N. On/Off synchronisation this parameter states if the On/Off command of the section will act on all the other ones too: y= the On/Off command is sent to all the other sections; n= the On/Off command acts only in the local section
LLi	L.A.N. light synchronisation this parameter states if the light command of the section will act on all the other ones too: y= the light command is sent to all the other sections; n= the light command acts only in the local section
LES	L.A.N. energy saving synchronisation this parameter states if the energy saving command of the section will act on all the other ones too: y= the Energy Saving command is sent to all the other sections; n= the Energy Saving command acts only in the local section
LSd	Remote probe display: this parameter states if the section has to display the local probe value or the value coming from another section: y= the displayed value is the one coming from another section (which has parameter LdS = y); n= the displayed value is the local probe one.
LPP	Remote pressure probe: n= the value of pressure probe is read from local probe; Y= the value of pressure probe is sent via LAN;
StM	Solenoid activation via LAN: n= not used; Y= a generic cooling requests from LAN activate the solenoid valve connected to compressor relay;

PROBE CONFIGURATION

P1C	Probe 1 configuration: (nP - Ptc - ntc - PtM) nP= not present; Ptc= Ptc; ntc= Ptc; PtM= Pt1000;
Ot	Probe 1 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offset of the thermostat probe.
P2C	Probe 2 configuration: (nP - Ptc - ntc - PtM) nP= not present; Ptc= Ptc; ntc= Ptc; PtM= Pt1000;
OE	Probe 2 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offsets of the evaporator probe.
P3C	Probe 3 configuration: (nP - Ptc - ntc - PtM) nP= not present; Ptc= Ptc; ntc= Ptc; PtM= Pt1000;
o3	Probe 3 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offset of the probe 3.
P4C	Probe 4 configuration: (nP - Ptc - ntc - PtM) nP= not present; Ptc= Ptc; ntc= Ptc; PtM= Pt1000;
o4	Probe 4 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offset of the probe 4.
P5C	Probe 5 configuration: (nP - Ptc - ntc - PtM - 420 - 5Vr) nP= not present; PtM= Pt1000; 420= 4÷ 20mA; 5Vr= 0÷5V ratiometric; (Only XM669K)
o5	Probe 5 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offset of the probe 5. (Only XM669K)
P6C	Probe 6 configuration: (nP - Ptc - ntc - PtM) nP= not present; Ptc= Ptc; ntc= Ptc; PtM= Pt1000; (Only XM669K)
o6	Probe 6 calibration: (-12.0+12.0°C/ -21+21°F) allows to adjust possible offset of the probe 6. (Only XM669K)

SERVICE - READ ONLY

CLt	Cooling time percentage: it shows the effective cooling time calculated by XM600 during regulation;
tMd	Time to next defrost: it shows time before the next defrost if interval defrost is selected;
LSn	L.A.N. section number (1 ÷ 5) Shows the number of sections available in the L.A.N.
Lan	L.A.N. serial address (1 ÷ LSn) Identifies the instrument address inside local network of multiplexed cabinet controller.
Adr	RS485 serial address (1÷247): Identifies the instrument address when connected to a ModBUS compatible monitoring system.
Rel	Release software: (read only) Software version of the microprocessor.
Ptb	Parameter table: (read only) it shows the original code of the dixell parameter map.
Pr2	Access to the protected parameter list (read only).

10. DIGITAL INPUTS

The XM600 series can support up to 2 free of voltage contact configurable digital inputs (depending on the models). They are configurable via i#F parameter

10.1 GENERIC ALARM (EAL)

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is deactivated.

10.2 SERIOUS ALARM MODE (BAL)

When the digital input is activated, the unit will wait for "did" delay before signalling the "BAL" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is deactivated.

10.3 PRESSURE SWITCH (PAL)

If during the interval time set by "d#d" parameter, the pressure switch has reached the number of activation of the "nPS" parameter, the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF. **If the nPS activation in the d#d time is reached, switch off and on the instrument to restart normal regulation.**

10.4 DOOR SWITCH INPUT (dor)

It signals the door status and the corresponding relay output status through the "odc" parameter: no = normal (any change); Fan = Fan OFF; CPr = Compressor OFF; F_C = Compressor and fan OFF. Since the door is opened, after the delay time set through parameter "d#d", the door alarm is enabled, the display shows the message "dA" and the regulation restarts after rrd time. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

10.5 START DEFROST (DEF)

It executes a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "Mdf" safety time is expired.

10.6 RELAY LIGHT ACTUATION (LIG)

This function allows to turn ON and OFF the light relay by using the digital input as external switch.

10.7 REMOTE ON/OFF (ONF)

This function allows to switch ON and OFF the instrument.

10.8 KIND OF ACTION (HTR)

This function allows to change the kind of regulation from cooling to heating and vice versa.

10.9 FHU - NOT USED

This function allows to change the kind of regulation from cooling to heating and viceversa.

10.10 ENERGY SAVING INPUT (ES)

The Energy Saving function allows to change the set point value as the result of the SET+ HES (parameter) sum. This function is enabled until the digital input is activated.


10.11 CONFIGURABLE INPUT - HOLIDAY FUNCTION (HDY)

In Holiday function Energy saving and defrost cycles follow holiday times. (Sd1...Sd6)


10.12 DIGITAL INPUTS POLARITY

The digital inputs polarity depends on "i#P" parameters: CL : the digital input is activated by closing the contact; OP : the digital input is activated by opening the contact.

11. INSTALLATION AND MOUNTING

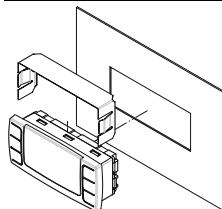

The CX660 keyboard shall be mounted on vertical panel, in a 29x71 mm hole, and fixed using the special bracket supplied. The temperature range allowed for correct operation is 0÷60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let air circulate by the cooling holes.

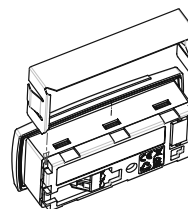

12. ELECTRICAL CONNECTIONS

XM660K/XM669K is provided with screw terminal block to connect cables with a cross section up to 1,6 mm² for all the low voltage connection: the RS485, the LAN, the probes, the digital inputs and the keyboard. Other inputs, power supply and relays connections are provided with Faston connection (5.0 mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay. **N.B.** Maximum current allowed for all the loads is 16A.

12.1 PROBE CONNECTIONS

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

13. RS485 SERIAL LINE

XM660K/XM669K is provided of a direct RS485 connection that allow the unit, to be linked to a network line ModBUS-RTU compatible with all dixell monitoring system.

14. USE OF THE PROGRAMMING "HOT KEY"

The XM units can UPLOAD or DOWNLOAD the parameter list from its own E2 internal memory to the "Hot Key" and vice-versa through a TTL connector.

14.1 DOWNLOAD (FROM THE "HOT KEY" TO THE INSTRUMENT)

- Turn OFF the instrument by means of the ON/OFF key, insert the "Hot Key" and then turn the unit ON.
- Automatically the parameter list of the "Hot Key" is downloaded into the controller memory, the "doL" message is blinking. After 10 seconds the instrument will restart working with the new parameters. At the end of the data transfer phase the instrument displays the following messages: "end" for right programming. The instrument starts regularly with the new programming. "err" for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation.

14.2 UPLOAD (FROM THE INSTRUMENT TO THE "HOT KEY")

- When the XM unit is ON, insert the "Hot key" and push α key; the "uPL" message appears.
 - The UPLOAD begins; the "uPL" message is blinking.
 - Remove the "Hot Key".
- At the end of the data transfer phase the instrument displays the following messages:
- "end" for right programming.
 - "err" for failed programming. In this case push "SET" key if you want to restart the programming again or remove the not programmed "Hot key".

15. ALARM SIGNALS

Message	Cause	Outputs
"PON"	Keyboard enabled	Outputs unchanged
"POF"	Keyboard locked	Outputs unchanged
"rst"	Alarm reset	Alarm relay reset
"nOP"	probe not present	Compressor output acc. to par. "Con" and "COF"
"P1"	First probe failure	Compressor output acc. to par. "Con" and "COF"
"P2"	Second probe failure	Defrost end is timed
"P3"	Third probe failure	Outputs unchanged
"P4"	Fourth probe failure	Outputs unchanged
"P5"	Fifth probe failure	Outputs unchanged
"P6"	Sixth probe failure	Outputs unchanged
"HA"	Maximum temperature alarm	Outputs unchanged.
"LA"	Minimum temperature alarm	Outputs unchanged.
"HAd"	Defrost high temperature	Outputs unchanged.
"LAd"	Defrost low temperature	Outputs unchanged.
"FAd"	Defrost low temperature	Outputs unchanged.
"HAF"	Fan high temperature	Outputs unchanged.
"LAF"	Fan high temperature	Outputs unchanged.
"StP"	Stop due to regulation pauses (Sti and Std parameters)	Compressor and valve OFF
"PAL"	Lock due to pressure switch	All outputs OFF.
"rtc"	RTC wrongly configured	Outputs unchanged
"rtf"	RTC failure	Outputs unchanged
"dA"	Door open	Compressor and fans restarts according to rrd and odc
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm (i#F=bAL)	All outputs OFF.
"EE"	EEPROM failure	All outputs OFF.
"LOP"	Minimum operating pressure reached	according to dML
"MOP"	Maximum operating pressure reached	according to dML
"LSH"	Minimum superheat alarm	Valve closed
"MSH"	Maximum superheat alarm	outputs unchanged

15.1 "EE" ALARM

The dixell instruments are provided with an internal check for the data integrity. Alarm "EE" flashes when a failure in the memory data occurs. In such cases the alarm output is enabled.

15.2 ALARM RECOVERY

Probe alarms : "P1" (probe1 faulty), "P2", "P3", "P4", "P5", "P6"; they automatically stop 10s after the probe restarts normal operation. Check connections before replacing the probe. Temperature alarms "HA", "LA", "HAd", "LAd", "HAF", "LAF" automatically stop as soon as the thermostat temperature returns to normal values or when the defrost starts. External alarms "EAL", "BAL" stop as soon as the external digital input is disabled.

16. TECHNICAL DATA

CX660 keyboard

Housing: self extinguishing ABS.

Case: CX660 facia 35x77 mm; depth 18mm

Mounting: panel mounting in a 29x71 mm panel cut-out

Protection: IP20; Frontal protection: IP65

Power supply: from XM600K power module

Display: 3 digits, red LED, 14,2 mm high;

Optional output: buzzer

Power modules

Case: 8 DIN

Connections: Screw terminal block $\leq 1,6 \text{ mm}^2$ heat-resistant wiring and 5.0mm Faston

Power supply: depending on the model 12Vac - 24Vac - 110Vac $\pm 10\%$ - 230Vac $\pm 10\%$ or 90-230Vac with switching power supply.

Power absorption: 9VA max.

Inputs: up to 6 NTC/PTC/Pt1000 probes

Digital inputs: 2 free of voltage

Relay outputs: **Total current on loads MAX. 16A**

Solenoid Valve: relay SPST 8 A, 250Vac

defrost: relay SPST 16 A, 250Vac

fan: relay SPST 8 A, 250Vac

light: relay SPST 16 A, 250Vac

Valve output: a.c. output up to 30W (Only XM669K)

Optional output (AnOUT) DEPENDING ON THE MODELS:

- PWM / Open Collector outputs: PWM or 12Vdc max 40mA
- Analog output: 4-20mA or 0-10V

Serial output: RS485 with ModBUS - RTU and LAN

Data storing: on the non-volatile memory (EEPROM).

Kind of action: 1B. Pollution grade: normal Software class: A. Operating temperature: 0-60 °C.

Storage temperature: -25-60 °C. Relative humidity: 20-85% (no condensing).

Measuring and regulation range:

NTC probe: -40-110°C (-58-230°F).


PTC probe: -50-150°C (-67 + 302°F)

Pt1000 probe: -100 + 100°C (-148 + 212°F)


Resolution: 0,1 °C or 1°C or 1 °F (selectable). Accuracy (ambient temp. 25°C): $\pm 0,5 \text{ °C} \pm 1 \text{ digit}$

17. CONNECTIONS

17.1 XM660K - ALL POWER SUPPLY

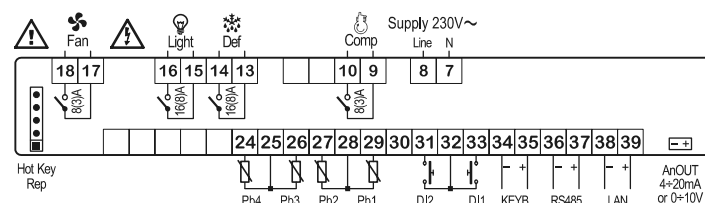


17.2 XM669K - 230/110VAC VALVE COIL

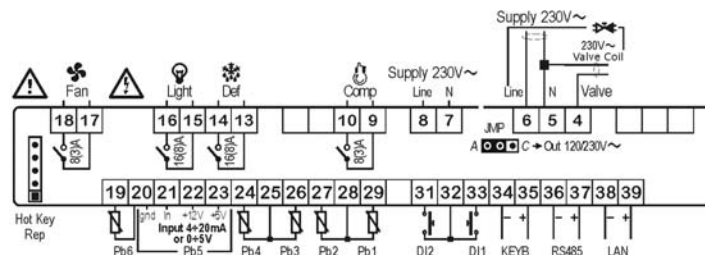

NOTE: the jumper indicated as JMP is inside the case of the controller. This jumper has to be closed only in case of driving 24Vac valve.

17.3 XM669K - 24VAC VALVE COIL

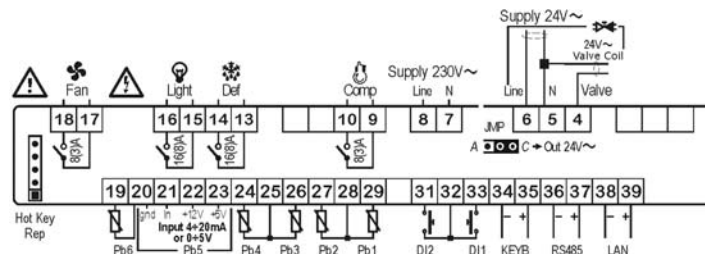

18. DEFAULT SETTING VALUES

Lab	Val	Menù	Description	Range
SEt	2.0	---	Set point	LS - US
Regulation				
Hy	2.0	Pr1	Differential	[0.1°C + 25.5°C] [1°F + 45°F]
Int	150	Pr1	Integral time for room temperature regulation	0 + 255 s
CrE	n	Pr1	Continuous regulation activation	n(0) - Y(1)
LS	-30	Pr2	Minimum set point	[-55.0°C + SET] [-67°F + SET]
US	20	Pr2	Maximum set point	[SET + 150.0°C] [SET + 302°F]
odS	0	Pr1	Outputs activation delay at start up	0 + 255 (min.)
AC	0	Pr1	Anti-short cycle delay	0 + 60 (min.)
CCt	0.0	Pr2	Continuous cycle duration	0 + 24.0(144) (hour.10min)
CCS	2.0	Pr2	Continuous cycle set point	[-55.0°C + 150.0°C] [-67°F + 302°F]
Con	15	Pr2	Compressor ON time with faulty probe	0 + 255 (min.)
CoF	30	Pr2	Compressor OFF time with faulty probe	0 + 255 (min.)

CF	°C	Pr2	Measurement unit: Celsius , Fahrenheit	°C(0) - °F(1)
PrU	rE	Pr2	Pressure Mode	rE(0) - Ab(1)
PMU	bAr	Pr2	Pressure measurement unit	bAr(0) - PSI(1) - MPA(2)
PMd	PrE	Pr2	Pressure displaying mode: temperature or pressure	tEM(0) - PrE(1)
rES	dE	Pr2	Resolution (only °C) : decimal, integer	dE(0) - in(1)
Lod	P1	Pr2	Local display: default display	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5) - P6(6) - tEr(7) - dEF(8)
rEd	P1	Pr2	Remote display: default display	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5) - P6(6) - tEr(7) - dEF(8)
dLy	0	Pr1	Display delay	0 + 24.0(144) (Min.10s)
rPA	P1	Pr1	Regulation probe A	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
rPb	nP	Pr1	Regulation probe B	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
rPE	100	Pr1	Virtual probe percentage (room temperature)	0 + 100 (100=rPA, 0=rPb)
Electronic Expansion Valve				
Fty	404	Pr1	Kind of gas	R22(0) - 134(1) - 404(2) - 407(3) - 410(4) - 507(5) - CO2(6)
SSH	8.0	Pr1	Superheat set point	[0.1°C + 25.5°C] [1°F + 45°F]
CyP	6	Pr1	Cycle Period	1 + 15 s
Pb	5.0	Pr1	Proportional band for superheat regulator	[0.1°C + 60.0 °C] [1°F + 108 °F]
rS	0.0	Pr1	Band Offset for superheat regulator	[-12.0°C + 12.0°C] [-12°C + 12°C] [-21°F + 21°F]
inC	120	Pr1	Integration time for superheat regulator	0 + 255 s
PEO	50	Pr1	Probe error opening percentage	0 + 100
PEd	On	Pr1	Probe error delay before stopping regulation	0 + 239 s - On(240)
OPE	85	Pr1	Start opening percentage	0 + 100
SFd	1.3	Pr1	Start function duration	0 + 42.0(252) (min.10sec)
OPd	100	Pr1	Opening percentage after defrost phase	0 + 100
Pdd	1.3	Pr1	Post defrost function duration	0 + 42.0(252) (min.10sec)
MnF	100	Pr1	Maximum opening percentage at normale functioning	0 + 100
dCL	0	Pr1	Delay before stopping valve regulation	0 + 255 s
Fot	nu	Pr1	Forced opening percentage	0 + 100 - "nu"(101)
tPP	PP	Pr2	Type of pressure transducer	PP(0) - LAN(1)
PA4	-0.5	Pr2	Probe value at 4 mA or at 0V	BAR : [PrM=rEL] -1.0 + P20 [PRM=Abs] 0.0 + P20 PSI : [PrM=rEL] -14 + P20 [PRM=Abs] 0 + P20 dKP : [PrM=rEL] -10 + P20 [PRM=Abs] 0 + P20
P20	11.0	Pr2	Probe value at 20 mA or at 5V	BAR : [PrM=rEL] PA4 + 50.0 [PrM=Abs] PA4 + 50.0 PSI : [PrM=rEL] PA4 + 725 [PrM=Abs] PA4 + 725 dKP : [PrM=rEL] PA4 + 500 [PrM=Abs] PA4 + 500
LPL	-0.5	Pr1	Lower pressure limit for superheat regulation	PA4 + P20
MOP	11.0	Pr1	Maximum operating pressure threshold	LOP + P20
LOP	-0.5	Pr1	Lowest operating pressure threshold	PA4 + MOP
dML	30	Pr1	Delta MOP-LOP opening variation	0 + 100
MSH	80.0	Pr1	Maximum superheat alarm threshold	[LSH + 80.0°C] [LSH + 144°F]
LSH	1.0	Pr1	Minimum superheat alarm threshold	[0.0 + MSH °C] [0 + MSH °F]
SHy	0.5	Pr1	Superheat alarm hysteresis	[0.1°C + 25.5°C] [1°F + 45°F]
SHd	3.0	Pr1	Superheat alarm activation delay	0 + 42.0(252) (min.10sec)
FrC	100	Pr1	Fast-recovery costant	0 + 100
Defrost				
dPA	P2	Pr1	Defrost probe A	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
dPb	nP	Pr1	Defrost probe B	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
dPE	100	Pr1	Virtual probe percentage (defrost temperature)	0 + 100 (100=dPA, 0=dPb)
tdF	EL	Pr1	Defrost type	EL(0) - in(0)

EdF	in	Pr1	(Only for model with RTC) Defrost mode: Clock or interval	rtc(0) - in(1)
Srt	150	Pr1	Heater set point during defrost	[-55.0°C + 150°C] [-67°F + 302°F]
Hyr	2.0	Pr1	Differential for heater	[0.1°C + 25.5°C] [1°F + 45°F]
tod	255	Pr1	Time out for heater	0 + 255 (min.)
dtP	0.1	Pr1	Minimum temperature difference to start defrost	[0.1°C + 50.0°C] [1°F + 90°F]
ddP	60	Pr1	Delay before starting defrost	0 + 60 (min.)
d2P	n	Pr1	Defrost with two probes	n(0) - Y(1)
dtE	8.0	Pr1	Defrost termination temperature (Probe A)	[-55.0°C + 50.0°C] [-67°F + 122°F]
dtS	8.0	Pr1	Defrost termination temperature (Probe B)	[-55.0°C + 50.0°C] [-67°F + 122°F]
idF	6	Pr1	Interval between defrosts	0 + 120 (hours)
MdF	30	Pr1	Defrost Maximum duration	0 + 255 (min.)
dSd	0	Pr1	Start defrost delay	0 + 255 (min.)
dFd	it	Pr1	Display during defrost	rt(0) - it(1) - SET(2) - dEF(3)
dAd	30	Pr1	Defrost display time out	0 + 255 (min.)
Fdt	0	Pr1	Drain down time	0 + 255 (min.)
dPo	n	Pr1	Defrost at start-up	n(0) - Y(1)
dAF	0.0	Pr1	Defrost delay after continuous cycle	0 + 24.0(144) (hours.10min)
Fan				
FPA	P2	Pr1	Fan probe A	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
FPb	nP	Pr1	Fan probe B	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5)
FPE	100	Pr1	Virtual probe percentage (fan management)	0 + 100 (100=FPA, 0=FPb)
FnC	O-n	Pr1	Fan operating mode	C-n(0) - O-n(1) - C-y(2) - O-y(3)
Fnd	10	Pr1	Fan delay after defrost	0 + 255 (min.)
FCt	10	Pr1	Temperature differential to avoid short cycles of fans	[0.0°C + 50.0°C] [0°F + 90°F]
FSt	2.0	Pr1	Fan stop temperature	[-55.0°C + 50.0°C] [-67°F + 122°F]
FHy	1.0	Pr1	Fan stop differential	[0.1°C + 25.5°C] [1°F + 45°F]
Fod	0	Pr1	Fan activation time after defrost (without compressor)	0 + 255 (min.)
Fon	0	Pr1	Fan ON time	0+15 (min.)
FoF	0	Pr1	Fan OFF time	0+15 (min.)
trA	UAL	Pr2	Kind of regulation for modulating output	UAL(0) - rEG(1) - AC(2)
SOA	80	Pr2	Fixed speed for fan	AMi + AMA
SdP	30.0	Pr2	Default Dew Point value	[-55.0°C + 50.0°C] [-67°F + 122°F]
ASr	1.0	Pr2	Differential for fan / offset for anti sweat heater	[-25.5°C + 25.5°C] [-45°F + 45°F]
PbA	5.0	Pr2	Proportional band for modulating output	[0.1°C + 25.5°C] [1°F + 45°F]
AMi	0	Pr2	Minimum output for modulating output	0 + AMA
AMA	100	Pr2	Maximum output for modulating output	AMi + 100
AMt	200	Pr2	Time with fan at maximum speed	0 + 255 s
Alarm				
rAL	P1	Pr1	Probe for temperature alarm	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5) - tEr(6)
ALC	Ab	Pr1	Temperature alarm configuration	rE(0) - Ab(1)
ALU	10	Pr1	High temperature alarm setting	[0.0°C + 50.0°C o ALL + 150.0°] [0°F + 90°F o ALL + 302°F]
ALL	-30	Pr1	Low temperature alarm setting	[0.0°C + 50.0°C o -55.0°C + ALU] [0°F + 90°F o -67°F + ALU°F]
AHy	1.0	Pr1	Differential for temperature alarm	[0.1°C + 25.5°C] [1°F + 45°F]
ALd	15	Pr1	Temperature alarm delay	0 + 255 (min.)
dLU	150	Pr2	High temperature alarm setting (defrost probe)	[0.0°C + 50.0°C o dLL + 150.0°] [0°F + 90°F o dLL + 302°F]
dLL	-55	Pr2	Low temperature alarm setting (defrost probe)	[0.0°C + 50.0°C o -55.0°C + dLU] [0°F + 90°F o -67°F + dLU°F]
dAH	1.0	Pr2	Differential for temperature alarm (defrost probe)	[0.1°C + 25.5°C] [1°F + 45°F]
ddA	15	Pr2	Temperature alarm delay (defrost probe)	0 + 255 (min.)

FLU	150	Pr2	High temperature alarm setting (fan probe)	[0.0°C + 50.0°C o FLL + 150.0°] [0°F + 90°F o FLL + 302°F]
FLL	-55	Pr2	Low temperature alarm setting (fan probe)	[0.0°C + 50.0°C o -55.0°C + FLU] [0°F + 90°F o -67°F + FLU°F]
FAH	1.0	Pr2	Differential for temperature alarm (fan probe)	[0.1°C + 25.5°C] [1°F + 45°F]
FAd	15	Pr2	Temperature alarm delay (fan probe)	0 ÷ 255 (min.)
dAo	1.3	Pr1	Delay of temperature alarm at start-up	0 + 24.0(144) (hours.10min)
EdA	30	Pr1	Alarm delay at the end of defrost	0 ÷ 255 min
dot	15	Pr1	Temperature alarm exclusion after door open	0 ÷ 255 min
Sti	1.3	Pr2	Stop regulation interval	"nu"(0) + 24.0(144) (hour.10min)
Std	3	Pr2	Stop duration	1 + 255 min
oA7	ALr	Pr2	Modulating output configuration (if CoM=oA7)	CPr(0) - dEF(1) - FAn(2) - ALr(3) - LiG(4) - AUS(5) - db(6) - OnF(7)
CoM	Cur	Pr2	Modulating output configuration	CUr(0) - tEn(1) - PM5(2) - PM6(3) - oA7(4)
Digital Inputs				
i1P	cL	Pr1	Digital input 1 polarity	OP(0) - CL(1)
i1F	dor	Pr1	Digital input 1 configuration	EAL(0) - bAL(1) - PAL(2) - dor(3) - dEF(4) - AUS(5) - LiG(6) - OnF(7) - Htr(8) - FHU(9) - ES(10) - Hdy(11)
d1d	15	Pr1	Digital input 1 activation delay	0 + 255 (min.)
i2P	cL	Pr1	Digital input 2 polarity	OP(0) - CL(1)
i2F	LiG	Pr1	Digital input 2 configuration	EAL(0) - bAL(1) - PAL(2) - dor(3) - dEF(4) - AUS(5) - LiG(6) - OnF(7) - Htr(8) - FHU(9) - ES(10) - Hdy(11)
d2d	5	Pr1	Digital input 2 activation delay	0 + 255 (min.)
nPS	15	Pr1	Number of pressure switch activation before lock	0 ÷ 15
OdC	F-C	Pr1	Compressor and fan status when open door	no(0) - FAn(1) - CPr(2) - F-C(3)
rrd	30	Pr1	Outputs restart after door open alarm	0 + 255 (min.)
Clock				
CbP	Y	Pr1	Clock presence	n(0) - Y(1)
Hur	---	Pr1	Current hour	---
Min	---	Pr1	Current minutes	---
dAY	---	Pr1	Current day	Sun(0) - SAT(6)
Hd1	nu	Pr1	First weekly day	Sun(0) - SAT(6) - nu(7)
Hd2	nu	Pr1	Second weekly day	Sun(0) - SAT(6) - nu(7)
Hd3	nu	Pr1	Third weekly day	Sun(0) - SAT(6) - nu(7)
ILE	0.0	Pr1	Energy saving cycle start during workdays	0 - 23.5(143) (hours.10min)
dLE	0.0	Pr1	Energy saving cycle length during workdays	0 + 24.0(144) (hours.10min)
ISE	0.0	Pr1	Energy saving cycle start during holidays	0 - 23.5(143) (hours.10min)
dSE	0.0	Pr1	Energy saving cycle length during holidays	0 + 24.0(144) (hours.10min)
HES	0.0	Pr1	Temperature increasing during Energy Saving cycle	[-30.0°C + 30.0°C] [-54°F + 54°F]
Ld1	nu	Pr1	Workdays First defrost start	0.0 + 23.5(143) - nu(144) (hours.10min)
Ld2	nu	Pr1	Workdays Second defrost start	Ld1 + 23.5(143) - nu(144) (hours.10min)
Ld3	nu	Pr1	Workdays Third defrost start	Ld2 + 23.5(143) - nu(144) (hours.10min)
Ld4	nu	Pr1	Workdays Fourth defrost start	Ld3 + 23.5(143) - nu(144) (hours.10min)
Ld5	nu	Pr1	Workdays Fifth defrost start	Ld4 + 23.5(143) - nu(144) (hours.10min)
Ld6	nu	Pr1	Workdays Sixth defrost start	Ld5 + 23.5(143) - nu(144) (hours.10min)
Sd1	nu	Pr1	Holidays First defrost start	0.0 + 23.5(143) - nu(144) (hours.10min)
Sd2	nu	Pr1	Holidays Second defrost start	Sd1 + 23.5(143) - nu(144) (hours.10min)
Sd3	nu	Pr1	Holidays Third defrost start	Sd2 + 23.5(143) - nu(144) (hours.10min)
Sd4	nu	Pr1	Holidays Fourth defrost start	Sd3 + 23.5(143) - nu(144) (hours.10min)
Sd5	nu	Pr1	Holidays Fifth defrost start	Sd4 + 23.5(143) - nu(144) (hours.10min)
Sd6	nu	Pr1	Holidays Sixth defrost start	Sd5 + 23.5(143) - nu(144) (hours.10min)

Energy Saving				
ESP	P1	Pr1	Energy saving probe selection	nP(0) - P1(1) - P2(2) - P3(3) - P4(4) - P5(5) - tEr(6)
HES	0.0	Pr1	Temperature increasing during Energy Saving	[-30.0°C + 30.0°C] [-54°F + 54°F]
PEL	n	Pr1	Energy saving activation when Light switched off	n(0) - Y(1)
L.A.N. Management				
LMd	y	Pr2	Defrost Synchronisation	n(0) - Y(1)
dEM	y	Pr2	Defrost end Synchronisation	n(0) - Y(1)
LSP	n	Pr2	SET-POINT Synchronisation	n(0) - Y(1)
LdS	n	Pr2	Display Synchronisation (temperature sent via LAN)	n(0) - Y(1)
LOF	n	Pr2	ON/OFF Synchronisation	n(0) - Y(1)
LLi	y	Pr2	Light Synchronisation	n(0) - Y(1)
LES	n	Pr2	Energy Saving Synchronisation	n(0) - Y(1)
LSd	n	Pr2	Remote probe displaying	n(0) - Y(1)
LPP	n	Pr2	Pressure value sent in LAN	n(0) - Y(1)
StM	n	Pr2	Cooling request from LAN enable compressor relay	n(0) - Y(1)
Probe Configurations				
P1C	NtC	Pr2	P1 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3)
ot	0.0	Pr2	P1 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
P2C	NtC	Pr2	P2 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3)
oE	0.0	Pr2	P2 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
P3C	NtC	Pr2	P3 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3)
o3	0.0	Pr2	P3 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
P4C	NtC	Pr2	P4 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3)
o4	0.0	Pr2	P4 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
P5C	420	Pr2	P5 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3) - 420(4) - 5Vr(5)
o5	0.0	Pr2	P5 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
P6C	PtM	Pr2	P6 configuration	nP(0) - Ptc(1) - ntc(2) - PtM(3)
o6	0.0	Pr2	P6 calibration	[-12.0°C + 12.0°C] [-21°F + 21°F]
Service				
CLt	---	Pr1	ON/OFF percentage (C.R.O.)	(read only)
tMd	---	Pr1	Time remaining before next defrost activation (only for interval defrost)	(read only)
LSn	---	Pr1	Number of devices in LAN	1 + 8 (read only)
LAN	---	Pr1	List of address of LAN devices	1 + 247 (read only)
Other				
Adr	1	Pr1	Modbus address	1 + 247
rEL	---	Pr1	Firmware release	(read only)
Ptb	---	Pr1	Parameter table	(read only)
Pr2	---	Pr1	PR2 menu access	(read only)

dixell s.p.a.

Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY
tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13
<http://www.dixell.com> E-mail: dixell@dixell.com