iCHill



IC200CX EVO (rel. firmware 4.3)

INDEX

| 1. | GENERAL WARNING | 4 |
|------------|---|----|
| 2. | IC206CX/IC208CX FEATURES | 5 |
| 3. | USER INTERFACE | 6 |
| 4. | REMOTE TERMINAL VICX620 EVO | 12 |
| 5 . | FIRST INSTALLING | 12 |
| 6. | PARAMETER PROGRAMMING | 13 |
| 7. | DISPLAY LAYOUT | 18 |
| 8. | SET POINT VISUALIZATION | 19 |
| 9. | FUNCTION MENU " MENU" | 20 |
| 10. | DISPLAY VISUALIZATION OF VISOGRAPH REMOTE TERMINAL | 25 |
| 11. | HOW TO SWITCH ON / SWITCH OFF THE UNIT | 50 |
| 12. | SWITCH ON / SWITCH OFF THE CONDENSING UNIT BY DIGITAL INPUT | 51 |
| 13. | CHILLER / HEAT PUMP SELECTION | 52 |
| 14. | COMPRESSOR REGULATION | 53 |
| 15. | COMPRESSORS MANAGEMENT | 57 |
| 16. | COMPRESSORS ROTATION | 58 |
| 17. | CAPACITY STEP CONTROL | 58 |
| 18. | COMPRESSOR INVERTER CONTROLLED | 60 |
| 19. | COMPRESSOR RACK | 63 |
| 20. | COMPRESSORS WITH DIFFERENT CAPACITY POWER | 64 |
| 21. | MAXIMUM OPERATION TIME OF THE COMPRESSOR | 64 |
| 22. | CIRCUIT MANAGEMENT: SATURATION OR BALANCING | 64 |
| 23. | PUMP DOWN | 65 |
| 24. | UNLOADING | 66 |
| 25. | SOLENOID VALVE FOR LIQUID INJECTION | 68 |
| 26. | CONDENSING UNIT OPERATION | 68 |
| 27. | EVAPORATOR WATER PUMP / SUPPLY FAN (AIR/AIR UNIT) | 70 |
| 28. | WATER PUMP OF CONDENSER SIDE | 72 |
| 29. | CYCLIC OPERATION OF THE WATER PUMPS | 73 |
| <i>30.</i> | HOT START | 73 |
| 31. | LOAD MAINTENANCE | 74 |
| 32. | CONDENSER FAN REGULATION | 74 |
| 33. | ANTI FREEZE HEATERS, INTEGRATION HEATING OR BOILER | 78 |
| 34. | ENERGY SAVING | 80 |

| <i>35.</i> | DYNAMIC SETPOINT | 82 |
|------------|---|---------|
| 36. | AUXILIARY RELAYS | 83 |
| 37. | AUXILIARY PROPORTIONAL OUTPUTS | 85 |
| 38. | PROBE SELECTION FOR REGULATION WITH SELECTABLE PROBE | 88 |
| 39. | DEFROST CYCLE | 88 |
| 40. | PRODUCTION OF DOMESTIC HOT WATER | 94 |
| 41. | SOLAR PANEL MANAGEMENT | 101 |
| 42. | UNIT WITH HYBRID EXCHANGERS (AIR / WATER UNIT) | 102 |
| 43. | GEOTHERMAL FREE COOLING | 104 |
| 44. | HEAT RECOVERY FUNCTION | 107 |
| <i>45.</i> | MASTER / SLAVE FUNCTION | 111 |
| 46. | OPERATION RELATED TO THE REAL TIME CLOCK | 111 |
| 47. | MESSAGES - ALARM CODES | 111 |
| 48. | MANUAL ALARMS | 130 |
| 49. | ALARMS LIST | 131 |
| <i>50.</i> | ANALOG AND DIGITAL OUTPUT CONFIGURATION | 135 |
| 51. | TABLE OF PARAMETERS | 144 |
| <i>52.</i> | BLACK-OUT | 169 |
| <i>53.</i> | WIRING CONNECTIONS | 169 |
| <i>54.</i> | PWM OUTPUT FOR CONDENSING FAN SPEED CONTROL | 172 |
| <i>55.</i> | REMOTE KEYBOARS CONNECTION (VI620CX EVO OR V2I820) | 176 |
| 56. | I/O EXPANSION CONNECTION | 177 |
| <i>57.</i> | IEV ELECTRONIC EXPANSION VALVE CONNECTION | 178 |
| 58. | I/O EXPANSION AND IEV ELECTRONIC EXPANSION VALVE CONNECTION | V . 180 |
| 59. | INSTALLING AND MOUNTING | 182 |
| 60. | ELECTRICAL CONNECTIONS | 183 |
| 61. | ACCESSORIES | 184 |
| 62. | TECHNICAL DATA | 186 |

1. GENERAL WARNING

1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- · Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

1.2 **A** SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (See address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining; do not use the same electrical conduit to install high voltage cabling and low voltage cabling.
- The ground connection of the secondary coil of the transformer that powers the device can result in a bad performance; where possible, this connection should be avoided.
- Fit the probe where it is not accessible by the end user.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.
- The symbol alerts the user of non-insulated "dangerous voltage" within the product area that is sufficiently high to constitute a risk of electric shock to persons.
- The symbol alerts the user of important operating and maintenance (assistance) instructions found in the documentation attached to the device.

1.3 PRODUCT DISPOSAL (WEEE)

With reference to Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 and to the relative national legislation, please note that:

- There lies the obligation not to dispose of electrical and electronic waste as municipal waste but to separate the waste.
- Public or private collection points must be used to dispose of the goods in accordance with local laws. Furthermore, at the end of the product's life, it is also possible to return this to the retailer when a new purchase is made.
- This equipment may contain hazardous substances. Improper use or incorrect disposal can have adverse effects on human health and the environment.
- The symbol shown on the product or the package indicates that the product has been placed on the market after 13 August 2005 and must be disposed of as separated waste.

Should the product be disposed of incorrectly, sanctions may be applied as stipulated in applicable local regulations regarding waste disposal.


2. IC206CX/IC208CX FEATURES

| CHARACTERISTICS | IC206CX | IC208CX |
|---|--------------|--------------|
| N° KEYS | | |
| 6 | • | • |
| RELAYS | | |
| 6 | • | |
| 8 | | • |
| DIGITAL INPUTS | | |
| 11 | Configurable | Configurable |
| ANALOG INPUTS | | |
| 4 NTC – PTC | Configurable | Configurable |
| 2 NTC - PTC - 4÷20mA - 0 ÷ 5Volt | Cornigurable | Cornigurable |
| PROPORTIONAL OUTPUTS | | |
| 2 configurables (signal 0÷10V) | Configurable | Configurable |
| 2 configurables (signal 0÷10V, PWM) | Configurable | Configurable |
| SERIAL OUTPUTS | | |
| TTL with Mod-BusRtu protocol | • | • |
| Remote Keyboard VICX620 (up to 2 remote | • | • |
| keyboards with probe on board) | • | |
| POWER SUPPLY | | |
| 12 Vac/dc (+15%;-10%) | • | • |
| 24 Vac/dc (± 10%) | Opt | Opt |
| MAIN DISPLAY (UPPER DISPLAY) | | |
| ± 4 digits with decimal point | • | • |
| SECONDARY DISPLAY (LOWER DISPLAY) | | |
| ± 4 digits with decimal point | • | • |
| OTHER | | |
| Clock on board | Opt | Opt |
| Buzzer | Opt | Opt |

- Opt = optional = default

3. USER INTERFACE

Meaning of the LEDs

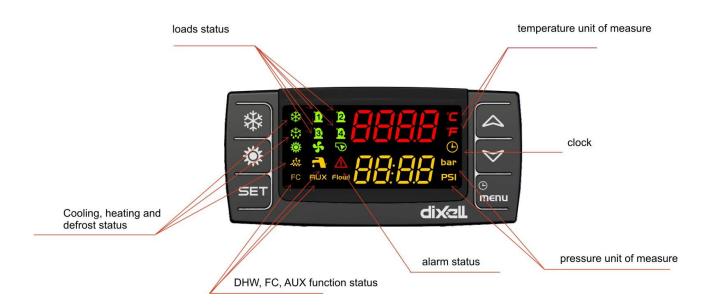

Display and Icons

| ICON | MEANING / FUNCTIONNING | | |
|---------------------|--|--|--|
| °C °F BAR PSI | ON when a temperature or pressure is visualized | | |
| 11 12 13 14 | ON when the compressor is active Blinking = when a compressor activation is delayed (minimum OFF time, delay after water pump activation, etc.) | | |
| \triangle | General alarm: blinking in case of alarm | | |
| *** | Anti freeze heaters/ integration heating / boiler: ON if the heaters are switched ON | | |
| Flow! | Water flow alarm / supply fan overload (air / air unit): blinking in case of water flow alarm or supply fan overload alarm | | |
| (| Real time clock: ON when the bottom display show the RTC ON during the programming with time based parameter value In function menu indicates the defrost delay counting | | |
| • | Water pump: ON if at least one water pump is actives or if supply fan is active | | |
| 4 | Condenser fan: ON if at least one condenser fan is active | | |
| | Domestic hot water: ON when domestic hot water production is active | | |
| m∈nu | ON when menù button is pressed | | |

| AUX | ON when an auxiliary output is active | |
|-----|---|--|
| ** | ON if the Ichill is swithed ON in cooling or heating | |
| FC | ON when the free cooling is active | |
| ** | ON in defrost Blinking during defrost activation delay | |

3.1 UPPER & LOWER DISPLAY CUSTOMIZATION

It is possible to select wich probe has to be visualized on the upper & lower display.



Main display (upper display) Parameter dP01

| PARAMETER VALUE | DESCRIPTION | CORRESPONDING LABEL |
|--------------------|--|----------------------------------|
| 0 | no visualization | No label |
| 1 | evaporator water inlet temperature | Ein |
| 2 | evaporator water outlet 1 and 2 temperature | Out1 circuit 1 Out2 circuit 2 |
| 3 | common evaporator water outlet temperature | Eout |
| 4 | common condenser water inlet temperature | Cin |
| 5 | condenser 1 or condenser 2 water inlet temperature | Cln1 circuit 1 Cln2 circuit 2 |
| 6 | condenser 1 or condenser 2 water outlet | Cou1 circuit 1 Cou2 circuit 2 |
| 7 | common condenser water outlet | Cout |
| 8 | outlet temperature | Et |
| 9 | free cooling temperature | FCIN |

| 10 | remote terminal 1 (VICX620) temperature or temperature measured by Visograph internal sensor | trE1 |
|----|--|----------------------------------|
| 11 | remote terminal 2 temperature or temperature measured by Visograph remote sensor | trE2 |
| 12 | combined defrost tempereature | dEF1 circuit 1 dEF2 circuit 2 |
| 13 | domestic hot water temperature 1 | SAn1 |
| 14 | domestic hot water temperature 2 | SAn2 |
| 15 | solar panel temperature | SoLE |
| 16 | Recovery temperature | Rec |
| 17 | condenser temperature | Cdt1 circuit 1 Cdt2 circuit 2 |

Secondary display (lower display) Parameter dP02

| PARAMETER VALUE | DESCRIPTION | CORRESPONDING LABEL |
|--------------------|--|----------------------------------|
| 0 | no visualization | No label |
| 1 | evaporator water inlet temperature | Ein |
| 2 | evaporator water outlet 1 and 2 temperature | Out1 circuit 1 Out2 circuit 2 |
| 3 | common evaporator water outlet temperature | Eout |
| 4 | common condenser water inlet temperature | Cin |
| 5 | condenser 1 or condenser 2 water inlet temperature | CIn1 circuit 1 CIn2 circuit 2 |
| 6 | condenser 1 or condenser 2 water outlet | Cou1 circuit 1 Cou2 circuit 2 |
| 7 | common condenser water outlet | Cout |
| 8 | outlet temperature | Et |
| 9 | free cooling temperature | FCIN |
| 10 | remote terminal 1 temperature | trE1 |
| 11 | remote terminal 2 temperature | trE2 |
| 12 | combined defrost tempereature | dEF1 circuit 1 dEF2 circuit 2 |
| 13 | domestic hot water temperature 1 | SAn1 |
| 14 | domestic hot water temperature 2 | SAn2 |
| 15 | solar panel temperature | SoLE |
| 16 | Recovery temperature | REC |
| 17 | condenser temperature | Cdt1 circuit 1 Cdt2 circuit 2 |
| 18 | condenser pressure | CdP1 circuit 1 CdP2 circuit 2 |
| 19 | evaporator pressure | LP1 circuit 1 LP2 circuit 2 |

| 20 | compressor oil pressure | |
|----|-------------------------|--|
| 21 | real time clock | |

3.2 FORCED READ - OUT OF THE TOP AND BOTTOM DISPLAY

The dP03 parameter allows to have a pre-defined visualization.

dP03=0

The visualization is defined by parameters dP01 and dP02

dP03 = 1

Top display:

• Evaporator water inlet temperature, Ein label.

Bottom display:

• Evaporator 1 water outlet temperature, label Out1 or evaporator 2 water outlet temperature, label Out2

dP03 = 2

Top display:

- Condenser 1 water inlet temperature, label **Cln1 or** Condenser 2 water inlet temperature, label **Cln2 Bottom display**
- Condenser 1 water outlet temperature, label COu1 or condenser 2 water outlet temperature, label COu2

dP03 = 3

Top display of the circuit 1:

Condenser temperature Cdt1 / pressure CdP1 or Condenser temperature Cdt2 / pressure CdP2
 Bottom display of the circuit 1

Evaporator pressure probe LP1 or Evaporator pressure probe LP2

3.3 VICX620: REMOTE TERMINAL 1 VISUALIZATION

If dP04=0 the display has the same visualization of the Ichill.

If dP04=1 upper display visualizes the temperature measured by the probe mounted in the remote terminal 1 (remote terminal must have internal temperature sensor)

3.4 VICX620: REMOTE TERMINAL 2 VISUALIZATION

If dP05=0 the display has the same visualization of the Ichill.

If dP05=1 upper display visualizes the temperature measured by the probe mounted in the remote terminal 2 (remote terminal must have internal temperature sensor)

3.5 DISPLAY VISUALIZATION IN CONDENSIG UNIT

If the Ichill is used to control a condensing unit (CF03=1):

- and a digital input has to be configured as "cooling request"; in case of cooling request the display shows "OnC"
- and a digital input has to be configured as "heating request"; in case of heating request the display shows "OnH"

If the Ichill is used to control a condensing unit (CF03=1):

- and a digital input has to be configured as "regulation request"; in case of cooling request by key
 the display shows "OnC"; in STD-BY the display swows "On", when the digital input is not active
 the display shows "OFF"
- and a digital input has to be configured as "regulation request"; in case of heating request by key the display shows "OnH"; in STD-BY the display swows "On", when the digital input is not active the display shows "OFF"

3.6 DISPLAY VISUALIZATION IN REMOTE OFF

Digital input configured as remote ON/OFF: the active input sets the unit in OFF (even when the unit is a condensing unit).

The upper display shows "OF.F", the led of the decimal point is blinking.



3.7 DISPLAY VISUALIZATION IN STD-BY

It is possible to customise the visualization of the display when the unit is in STD-BY:

Parameter dP10:

0= the display shows "STD-BY"

1= the display shows what defined by parameters dP1 and dP2

2= the display shows "OFF"

dP10=0



dP10=1

The display shows what defined by parameters dP1 and dP2



dP10=2



3.8 HOW TO READ COMPRESSOR STATUS

if a compressor is disable for maintenance the display shows:

compressor 1 disabled: label c1ds compressor 2 disabled: label c2ds compressor 3 disabled: label c3ds compressor 4 disabled: label c4ds

3.9 KEY FUNCTION

| KEY | ACTION | FUNCTION |
|---------|--|--|
| | Push and release | Show chiller set point SetC and heat pump SetH |
| | Push once again | In chiller or heat pump if the Energy saving or the Dynamic setpoint are enabled it shows the real setpoint Setr. |
| | Push for 3 seconds | Set point modification |
| | During the programming: push once | To enter parameter modification or confirm a value |
| SET | Push when an alarm is showed in menù ALrM | To reset the alarm |
| | Push once with probe label showed on the bottom display (press up or down starting from default visualization) | To read probes values of circuit 1 or circuit 2 |
| | Push once | To read probes value |
| | Pushing once during the programming | To change the group of parameters, to change the parameter, to change the value of the parameter |
| | Push for 1 second during the programming when the display visualize Pr1 or Pr2 or Pr3 | 1 time shows the Pr2 programming level 2 times shows the Pr3 programming level |
| | Push once | To read probes value |
| | Pushing once during the programming | To change the group of parameters, to change the parameter, to change the value of the parameter |
| | Push once | To turn ON or turn OFF the controller (in chiller or heat pump depending from CF58 parameter) |
| | Push once | To turn ON or turn OFF the controller (in chiller or heat pump depending from CF58 parameter) |
| | Push once | To enter the function Menu |
| \odot | Push for 3 seconds | To set the clock (controller with clock on board) |
| menu | Pushing once during the programming | To exit from a group of parameter |

3.10 KEY COMBINANTION

| KEY | ACTION | FUNCTION |
|------------------|---|---|
| SET | Push for 3 seconds together | Enter the programming parameters |
| | Only in Pr3 level: push SET and DOWN key | Select the parameter level visibility Pr1 / Pr2 / Pr3 |
| | Push once together | Exit the programming parameters |
| SET ₊ | Push 5 seconds in heat pump mode | Manual defrost |
| SET (© menu | Only in Pr3 programming level: push SET and then the MENU key | In Pr3 defines if the parameter can be modified or not in the other levels. |

4. REMOTE TERMINAL VICX620 EVO

The display visualization and the button functions are the same of the Ichill, then refer to previous chapters of the quick reference guide.



5. FIRST INSTALLING

5.1 ON BOARD CLOCK (OPTIONAL)

If giving power supply the bottom display shows "**rtC**" alternated with a temperature or pressure value, It is necessary to set the internal clock.

After a power failure, clock back-up battery lasts maximum 3 or 4 days. After this period it is necessary to set the clock again.

The internal clock is an option and it is not possible to update the instrument; it is necessary to order the instrument already complete of this features.

5.2 REAL TIME CLOCK SETUP

- 1. Push **MENU** key for some seconds until the bottom display shows "**Hour**" and the top display shows its value.
- 2. Push **SET** one time: the value is blinking
- 3. Use the Up and Down keys to adjust it. Push **SET** one time to confirm; automatically the display shows next parameter

- 4. Repeat the operations 2. 3. and 4. for all the RTC parameters:
- **Min:** minutes (0÷60)
- UdAy: day of the week (Sun = Sunday, Mon = Monday, tuE = Tuesday, UEd = Wednesday, tHu = Thursday, Fri = Friday, SAt = Saturday)
- dAy: day of the month (0÷31)
- MntH: month (1÷12)yEAr: year (00÷99)

6. PARAMETER PROGRAMMING

6.1 PROGRAMMING WITH THE "HOT KEY 64"

6.1.1 Download: how to program an instrument with a programmed "Hot Key"

- 1. Power off the instrument
- 2. Insert the hot key already programmed (by software Wizmate or other instrument)
- 3. Power on the instrument
- 4. Automatically the parameters are downloaded

During the download the regulation is locked and the top display shows the "**doL**" blinking label. At the end of the download will appear:

"End" if the programming procedure is completely OK, after 30seconds the regulation starts automatically. **"Err"** if the programming procedure has found an error and the parameter have not been transferred. In this case turn off and then on the instrument supply to repeat the operation or remove the hot key, with power supply off, to restart the regulation.

6.1.2 Upload: How to program a "Hot Key" with the parameters of the instrument

- 1. Power on the instrument
- 2. Insert the hot key
- 3. Enter the function Menu
- 4. Select the **UPL** function (on the bottom display)
- **5.** Push **SET** key and immediately the instrument starts transfer the parameters into the Hot key. During the upload the regulation is locked and the top display shows the "**UPL**" blinking label. At the end of the UPLOAD will appear:

"End" if the programming procedure is completely OK, after 30seconds the regulation starts automatically.

"Err" if the programming procedure has found an error and the parameter have not been transferred. Repeat the procedure.

To exit the UPL function push the MENU key or wait the time-out (15 sec).

6.2 PROGRAMMING USING THE KEYBOARD

Through the instrument keyboard it is possible to enter the programming. In all the three accessible levels the user can show and modify both value and visibility of the parameters. To ensure an easy navigation through the different levels the common parameters have been named and grouped under a family name. The three levels of programming:

- Pr1 User level
- Pr2 Maintenance level
- Pr3 OEM level

6.2.1 Password default values

- Password level Pr1 = 1
- Password level Pr2 = 2
- Password level Pr3 = 3

Each password can be changed; the range is 0 ... 999.

Each parameter has two level: visibility and changeability. Therefore it can be configured as follow:

- The parameter can be showed and changed.
- The parameter can be showed but not changed.

6.2.2 Enter the Pr1 - Pr2 - Pr3 programming levels

Pr1 LEVEL:

Push **SET + DOWN** together for 3 seconds, the top display shows the PAS label and the bottom display shows the Pr1 label. The leds cir1/cir2 are blinking (up and down leds) to inform that you now are in PR1 programming level.

Pr2 LEVEL:

From the Pr1 level push the UP key for 2 seconds and the bottom display will show Pr2. The top display still shows PAS.

Pr3 LEVEL:

From the Pr2 level push the UP key for 2 seconds and the bottom display will show Pr3. The top display still shows PAS.

After selecting the level push the SET key and the top display will show the 0 blinking value where to insert the password .

Set the password level using the UP and DOWN keys then confirm with SET key.

Dependening on the password value there will be the different level access, if the password is wrong the instrument shows the password value again.

ATTENTION:

For all the programming levels Pr1, Pr2, Pr3 CF parametrs (configuration parameters) cannot be changed if the instrument is switched on.

During the defrost the dF parameters can't be programmed.

6.2.3 Enter the programming level Pr1

Enter Pr1 "User level":

- Push SET + DOWN keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.
- 2. Push **SET** key and the top display shows a blinking **0**; pressing **UP** or **DOWN keys** insert the Pr1 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
- 3. Select a parameter group pressing **DOWN** or **UP** keys.
- 4. Push **SET** to enter; the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the parameters belonging to this family.

Parameter status, leds and bottom display in Pr1



- If the selected parameter can not be changed the leds 1 and 2 are blinking.
- In Pr1 level the user can not see and change any parameter of Pr2 and Pr3.
- The MENU key allows to exit from a family to reselect another without exit the Pr1 level.
- •To exit completely the programming push SET + UP.

6.2.4 Enter the programming level Pr2

Enter the Pr2 "maintenance level":

- 1. Push the **SET + DOWN** keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.
- 2. Push UP key for 2 seconds and the top display will show Pr2.

- 3. Push **SET** key and the top display shows a blinking 0, with **UP** or **DOWN** insert the Pr2 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
- 4. Select a parameter family with **DOWN** or **UP** keys.
- 5. Push **SET** to enter, the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the paramters belonging to this family.

Parameter status, leds and bottom display in Pr2



- Leds 1 / 2 are blinking: the parameter can not be changed.
- All the leds are off: the parameter ca not be seen in Pr1 level.
- •Led 3 is on: the parameter can be seen in Pr1 level.
- Leds 1 / 2 are blinking and led 3 is on: the parameter can be showed and changed in Pr2, showed but not changed in Pr1.
- Leds 1 / 2 / 3 are blinking: the parameter can be showed and changed in Pr2 and in Pr21.
- In Pr2 level the user can not see and change any parameter of Pr3 level.
- The MENU key allows to exit from a family to reselect another without exit the Pr2 level.
- •The MENU key allows to pass to Pr1 starting from a family label.
- •To exit completely the programming push SET + UP.


6.2.5 Enter the programming level Pr3

Enter the Pr3 "OEM level ":

- 1. Push the **SET + DOWN** keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.
- 2. Push UP key for 2 seconds and the top display will show Pr2.
- 1. Push UP key again for 2 seconds and the top display will show Pr3
- 3. Push **SET** key and the top display shows a blinking 0, with **UP** or **DOWN** insert the Pr3 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
- 4. Select a parameter family with **DOWN** or **UP** keys.
- 5. Push **SET** to enter, the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the paramters belonging to this family.

Parameter status, leds and bottom display in Pr3

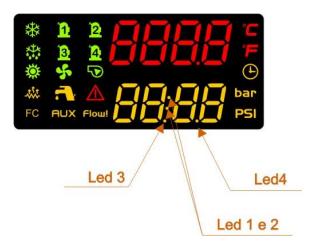

• Leds 1 / 2 are blinking: the parameter can not be changed.

All the leds are off: the parameter is available only in Pr3.
Led 4 on: the parameter can be changed also in Pr2.

• Led 4 blinking: the parameter is visible also in Pr2.

Leds 3 / 4 on: the parameter is available in Pr2 and in Pr1.
Leds 3 / 4 blinking: the parameter is visible in Pr1 and in Pr2.

• The MENU key allows to exit from a family to reselect another without exit the Pr2 level.

•The MENU key allows to pass to Pr1 starting from a family label.

•To exit completely the programming push SET + UP.

6.2.6 How to change a parameter value

Enter the programming

- 1. Push the **SET + DOWN** keys together for 3 seconds;
- 2. Select the parameter label with up and down keys;
- 3. Push **SET** to enter the parameter value;
- 4. Change the value with **UP** or **DOWN** keys;
- 5. Push "SET" to confirm, after some seconds the display shows the next parameter;
- 6. Exit: Push **SET + UP** together when a parameter label is displayed or wait 15seconds without pushing a key.

NOTE: a new parameter value is confirmed also after the 15 seconds of timeout is expired (without pushing SET key to confirm).

6.2.7 Change the Password value

Pr1 LEVEL

- 1) Enter Pr1 visibility level
- 2) Select a whatever parameter family.
- 3) Search "Pr1" label; push SET key to change the value that now is blinking.
- 4) Use the UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new
- 5) Top display blinks for some seconds and then shows the next parameter.
- 6) Exit the programming pushing SET + UP together or wait the timeout.

Pr2 LEVEL

- 1. Enter Pr2 visibility level
- 2. Select a whatever parameter family
- 3. Search "Pr2" label; push SET key to change the value that now is blinking.
- Use the UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new value.
- 5. Top display blinks for some seconds and then shows the next parameter
- 6. Exit the programming pushing SET + UP together or wait the timeout.

Inside the Pr2 level it is possible to change also the Pr1 password.

Pr3 LEVEL

- 1. Enter Pr3 level
- 2. Select a whatever parameter family

- 3. Search "Pr3" label; push SET key to change the value that now is blinking.
- 4. Use UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new value.
- 5. The top display blinks for some seconds and then shows the next parameter
- 6. Exit the programming pushing SET + UP together or wait the timeout.

Inside the Pr3 level it is possible to change also the Pr1 and Pr2 passwords.

6.2.8 Move a parameter level from Pr2 to Pr1

Enter Pr2 programming level

Select the parameter and if the led # 3 is off: the parameter is available only in Pr2.

To show the parameter also in Pr1:

- 1. Keep pushed SET key;
- 2. Push 1 time the DOWN key and the led 3 should be on, the parameter is now available in Pr1. To hide the parameter in Pr1:
- Keep pushed SET key;
- 2. Push 1 time the DOWN key and the led 3 should be off, the parameter is now removed from Pr1.

6.2.9 Move a parameter from Pr3 to Pr2 to Pr1

Enter Pr3 programming level, here the parameter are all visible:

Select the parameter, if all the leds are off the parameter is available only in Pr3.

To show the parameter also in Pr2 and Pr1:

- 1. Keep pushed SET key:
- 2. Push 1 time the DOWN key and the leds 3 and 4 should be on, the parameter is now available also in Pr2 / Pr1.

To show the parameter only in Pr2:

- 1. Keep pushed SET key;
- 2. Push 1 time the DOWN key and the leds 3 is off, the parameter is now available also in Pr2. To show the parameter only in Pr3:
- 1. Keep pushed SET key
- 2. Push 1 time the DOWN key and the leds 3 and 4 are off, the parameter is now available only in Pr3.

6.2.10 Visibility and Parameter value locked

To set the only visibility and lock the parameter value it is necessary enter Pr3 programming level. Pr1 PARAMETER VISIBILITY

Enter the Pr3 level

- 1. Select the parameter;
- 2. Keep pushed the SET key;
- 3. Push 1 time the MENU key and the led 3 change from on to blinking: the parameter is visible in Pr1 but can't be changed.

Pr2 PARAMETER VISIBILITY

Enter the Pr3 level

- 1. Select the parameter;
- 2. Keep pushed the SET kev:
- 3. Push 1 time the MENU key and the led 4 change from on to blinking the parameter is visible in Pr2 but can't be changed.

Leds 3 / 4 blinking: the parameter is visible in Pr1 and in Pr2 but in those levels now they can't be changed.

TO SET THE ORIGINAL TAG FOR THE PARAMETER Pr1 / Pr2

- 1. Keep pushed the SET key:
- 2. Push one time the **MENU** key, the leds 3 / 4 turn on, the parameter can be seen and modified in Pr1 and Pr2.

6.2.11 Programming: digital input and output polarity

The configuration parameters of:

- Digital inputs
- Digital outputs (relay)
- Proportional output configured as ON/OFF
- Analogue input configured as digital input

are composed by a letter and a number.

Letter can be:

o (open) = function associated to the input or output is active when the contact is open c (close) = function associated to the input or output is active when the contact is closed The number defines the function associated to the input or output.

Example 1:



The bottom display shows the parameter label CF36 = digital input 7 configuration:

- **7** means that the digital input is configured as "high pressure switch of circuit 1" (see digital input configuration)
- **o** means that the digital input is active for **open** contact, then the high pressure alarm is detected when the digital input is open.

Example 2:



The bottom display shows the parameter label CF36 = digital input 7 configuration:

- **7** means that the digital input is configured as "high pressure switch of circuit 1" (see digital input configuration)
- **c** means that the digital input is active for **closed** contact, then the high pressure alarm is detected when the digital input is closed.

7. DISPLAY LAYOUT

Pushing or key it is possible to read the valure of the probes connected to the instrument. Every probe is identified by a label (see display visualization table).

Example:

Fig.1: upper display shows outlet 1 evaporator temperature, the lower display shows Out1. Pressing SET key is possible to read the same probe of the second circuit (if configured).



Fig.2: upper display shows outlet 2 evaporator temperature, the lower display shows Out2. Pressing SET key is possible to read the same probe of the first circuit.

Fig.2



8. SET POINT VISUALIZATION

8.1 READ SET POINT VALUE

Push and release the **SET** key, the leds of the circuits are off and the set value is displayed. In stand-by the bottom display shows **SetC** (set chiller), by pushing SET again the next label is **SetH** (set heat pump).

If the unit is running the only set displayed is related to the running mode.

8.2 MODIFY THE SET POINT

- 1) Push **SET** key for at least **3** seconds: the leds of the circuits are off and the set value is blinking.
- 2) Use the **UP** or **DOWN** key to modify the setpoint.
- 3) Push **SET** to confirm or wait the timeout (15seconds).

8.3 READ REAL SETPOINT DURING ENERGY SAVING OR DYNAMIC SETPOINT

Chiller mode: push **SET** one time, the bottom display shows the **SEtC** (set chiller) while the top display shows the set value. Only if the Energy saving or the Dynamic Setpoint are active, pushing another time the **SET** key, the bottom display shows "**SEtr**" (real setpoint), and the top display shows the setpoint that the unit is really using for the thermoregulation.

Chiller mode: push **SET** one time, the bottom display shows the **SEtH** (set Heat pump) while the top display shows the set value. Only if the Energy saving or the Dynamic Setpoint are active, pushing another time the **SET** key, the bottom display shows "**SEtr**" (real setpoint), and the top diplay shows the setpoint that the unit is really using for the thermoregulation.

ATTENTION

The **SEtr** label appears only if the Energy saving or the Dynamic Setpoint are active.



9. FUNCTION MENU "MENU"

The function Menu is composed of the following items:

- · Read and reset the alarms ALrM
- Read and reset the alarm log ALOG
- Upload the parameter into the Hot Key UPL
- Enable disable one or the two circuits CrEn
- Enable disable one of the compressors COEn
- Read and reset the number of compressor running hour Hour
- Read and reset the number of compressor starts-up COSn
- Read the compressor discharge temperature COdt
- Read the condensing fan speed percentage of the proportional output Cond
- Read the percentage of the proportional output 0 ÷ 10 Vdc **Pout**
- Enable disable evaporator or condenser water pumps **PoEn**
- Time counting to next defrost cycle, under heat pump mode, dF
- Read the probe temperatures that enabled to control the auxiliary output uS
- Read temperature, Set point and output status of solar panel SoL
- Read temperature, Set point and output status of Free cooling FC
- Read probe temperature of the remote panels trEM
- Read temperature, pressure, set point of the electronic expansion valve 1 Et1
- Read temperature, pressure, set point of the electronic expansion valve 2 Et2
- Enable / disable recovery function (REC)

9.1 ALARM LIST: READ AND RESET

ALrM FUNCTION

Enter the function MENU pushing M key one time

- 1) Use the **UP** or **DOWN** to select the AlrM label
- 2) Push **SET** key (Nothing happens if there are no active alarm events)
- 3) Bottom display: alarm label code; Top display: label **rSt** to reset or **NO** if it is not possible.
- 4) Use the **UP** or **DOWN** to scroll the alarm list.
- 5) Pushing SET when the rSt label is displayed the corresponding alarm is reset
- 6) Then the display shows next alarm in the list; pushing SET again the alarm is reset and the display shows next alarm etc.
- 7) Nothing happens by pushing SET when the label NO is displayed, in this case push UP or DOWN to move to another alarm label.
- 8) To exit the ALrM reset function push MENU one time or wait the timeout.

By parameters AL 97 and AL 98, you can make sure that, after resetting a number of alarms with manual reset, the password is required to gain access to the menu ALARM:

- If AL97 and AL98 = 0 = 0 no password is required to access the alarm menu
- If AL97 = 1 is always prompted for a password to access the alarm menu
- If AL97 and AL98 = 0> 0 can access the alarm menu until the number of alarms is lower than AL98 reset manually, after which you must enter the password

9.2 MANUAL ALARM RESET IF PASSWORD IS REQUESTED

Enter Menu function

- 1. Use UP or DOWN key and select the alarm label on the bottom display.
- 2. Push **SET** one time, if there are active alarms the bottom display shows the alarm label (e.g. **CO1r** for overload compressor 1) while the top display shows the label **rSt** to reset the alarm or **NO** if the alarm can not be reset. Use the UP or DOWN keys to scroll all the alrm list.
- 3. Nothing happens by pushing SET when the label NO is displayed.
- 4. Pushing SET when the rSt label is displayed the corresponding alarm will be reset after the password: bottom display ArSt while the top display PAS.
- 5. Push SET and the top display blinks 0 while the bottom shows **PAS**. Insert the password using UP or DOWN key. If the password is OK the **ArSt** blinks for per 3 seconds, if the password value is not correct the top display blinks 0 while the bottom shows PAS. If within 5 seconds no value is inserted the display label come back to CO1r function.
- 6. To exit the COtr function push MENU or wait the timeout.
- 7. Repeat operation 1 5 to reset the other alarms.

9.3 COMPRESSOR OVERLOAD PASSWORD

The parameter that define the password is AL46; default value is 4.

9.4 ALARM LOG LIST

ALOG FUNCTION

Enter the function Menu

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select ALOG label
- 3. Push SET
- 4. The bottom display shows the alarm label, the top display shows the a number in the range 00 to 99.
- 5. Use the UP or DOWN keys to scroll the list.
- 6. To exit the ALOG function push MENU or wait the timeout.

9.5 ERASE THE ALARM LOG LIST

ALOG FUNCTION TO ERASE THE LOG LIST

- 1. Enter the function Menu.
- 2. Push UP or DOWN keys to select ALOG label
- 3. Push SET
- 4. Push UP or DOWN keys to search ArSt label on the bottom of the display
- 5. Push SET: the bottom display shows PAS and the top display a blinking 0
- 6. Insert the password (parameter AL46)
- 7. If the password is OK the label **ArSt** blinks for 5 seconds then the display returns to normal condition read-out (probes).
- 8. If the password is not correct the display shows **PAS** again. in any case is possible to scroll the list with **UP** or **DOWN**
- 9. To exit push the M key one time or wait the timeout.

THE ALARM LIST CONTAINS 100 EVENTS IN A FIFO STRUCTURE. WHEN THE MEMORY IS FULL, A NEW ALARM WILL ERASE THE OLDEST.

9.6 DISABLE - ENABLE A CIRCUIT

CrEn FUNCTION

- 1. Enter the function Menu.
- 2. Push UP or DOWN keys to select CrEn on the bottom display
- 3. Push SET key: the bottom display shows Cr1E, the top display shows En
- 4. Select the circuit 1 or 2 pushing UP or DOWN key (select Cr1E or Cr2E).

- 5. Push **SET** key for 3 seconds when one of the two Cr1E, Cr2E label are displayed. The top display shows the **En** blinking label
- 6. Push **UP** or **DOWN** to select **diS** (Disabled) or **En** (Enabled)
- 7. Push **SET** key to confirm the new selection. The display shows next circuit status.
- 8. To exit push MENU key or wait the timeout.

9.7 READ-OUT OF A CIRCUIT NOT ENABLED

If one circuit is disabled the bottom display shows b1dS or b2dS.

b1dS = circuit 1 disabled

b2dS = circuit 2 disabled

9.8 ENABLE OR DISABLE A SINGLE COMPRESSOR

COEn FUNCTION

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select COEn
- 3. Push SET key; the bottom display shows CO1E, the top display shows En
- 4. Push **UP** or **DOWN** to select the compressor to disable
- Push SET for 3 seconds when the label corresponds to the compressor to disable: CO1E CO2E -CO3E - CO4E
- 6. Top display shows the En blinking; push **UP** or **DOWN** key and select **diS** (Compressor disabled) or **En** (compressor enabled), then push SET to confirm
- 7. To exit the COEn function push MENU key or wait the timeout.

9.9 READ-OUT OF THE COMPRESSOR DISCHARGE TEMPERATURE PROBE

COdt FUNCTION.

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select COdt
- 3. Push SET key; the bottom display shows CO1t, top display shows the discharge temperature
- 4. Push UP or DOWN keys to scroll the list: CO1t or CO2t or CO3t or CO4t
- 5. To exit the COEn function push MENU key or wait the timeout

9.10 READ-OUT OF THE RUNNING HOURS

Hour FUNCTION

CO1H Compressor 1 running hours .. CO4H Compressor 4 running hours.

EP1H Evaporator water pump or Supply fan running hours

EP2H Support evaporator water pump running hours

CP1H Condenser water pump running hours

CP2H Support condenser water pump running hours

SAPH Domestic hot water pump running hours

PAPH Solar panel water pump running hours

FCPH Free cooling water pump running hours

The labels are displayed only if the corresponding output is present and configured.

The running hours is displayed on the top display, the resolution is x 10 hours (eg.: 2 means 20 hours, 20 means 200 hours)

Enter the function Menu

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select Hour
- Push SET key; the bottom display shows the label of the load, the top display shows the number of hours x10
- 4. Push UP or DOWN keys to scroll the list
- 5. To exit the Hour function push MENU key or wait the timeout

9.11 RESET THE RUNNING HOUR

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select Hour

- 3. Select the label of the load to reset the number of hours: CO1H, CO2H, CO3H, CO4H, EP1H, EP2H, CP1H, CP2H, SAPH, PAPH or FCPH
- 4. Push the **SET** keys for 3 seconds: the top display shows the running hours blinking value, then it shows 0 to confirm the reset. The next load label is automatically loaded
- 5. To exit the Hour function push MENU key or wait the timeout

9.12 READ-OUT OF COMPRESSOR STARTS-UP NUMBER

For each compressor is possible to show the number of starts-up.

COSn FUNCTION.

C1S number of compressor 1 starts-up .. C4S number of compressor 4 starts-up.

The labels are displayed only if the corresponding output is configured.

The number of starts-up is displayed on the top display, the resolution is x 10 (eg 2 means 20 starts, 20 means 200 starts).

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select COSn
- Push SET; the label of the first load C1S is showed on the top display, the bottom display shows the number x10.
- 4. Push **UP** or **DOWN** to scroll the compressor list.
- 5. To exit the Hour function push MENU key or wait the timeout

9.13 RESET THE STARTS-UP NUMBER

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select COSn
- Push SET; the label of the first load C1S is showed on the top display, the bottom display shows the number x10.
- 4. Select the label of the load to reset the number of starts up
- 5. Push the **SET** keys for 3 seconds to reset. The next load label is automatically loaded.
- 6. To exit the Hour function push MENU key or wait the timeout.

9.14 READ-OUT OF THE PROPORTIONAL OUTPUT PERCENTAGE OF THE CONDENSER FAN CONTROL

Cond FUNCTION.

- 1. Enter the function Menu
- 2. Push **UP** or **DOWN** keys to select **Cond**.
- 3. Push **SET** key: the bottom display shows Cnd1, the top display shows the output percentage.
- 4. Push **UP** or **DOWN** keys to select Cnd1 or Cnd2, the top display always shows the value, between 0% and 100%, of the proportional output of the selected circuit.
- 5. To exit the Hour function push MENU key or wait the timeout.

9.15 READ-OUT OF THE PROPORTIONAL OUTPUT VALUE (OUTPUTS OUT1...OUT4)

Pout FUNCTION selects the proportional outputs.

IC200CX outputs:

Pou1 Proportional output for dumper control or to drive the external relay 1

Pou2 Proportional output for dumper control or to drive the external relay 2

Pou3 Proportional output for dumper control or to drive the external relay 3

Pou4 Proportional output for dumper control or to drive the external relay 4

ICX207D outputs (I/O expansion):

PoE1 Proportional output for dumper control or to drive the external relay 1

PoE2 Proportional output for dumper control or to drive the external relay 2

PoE3 Proportional output for dumper control or to drive the external relay 3

The labels are displayed only if the corresponding output is present and configured.

TO SEE THE FOUR OUTPUT PERCENTAGE:

- 1. Enter the function Menu
- 2. Push **UP** or **DOWN** keys to select **Pout**.

- 3. Push **SET** key: the bottom display shows Pou1, the top display shows the output percentage.
- 4. Push **UP** or **DOWN** keys to select Pou1, Pou2, Pou3, etc. the top display always shows the value, between 0% and 100%, of the proportional output of the selected circuit.
- 5. To exit the Hour function push MENU key or wait the timeout.

If the proportional output Pou1 - Pou2 - Pou3 - Pou4 are configured to drive an external relay, the display will show 0=relay off or 100=relay on.

9.16 READ-OUT OF THE TIME COUNTING TO THE NEXT DEFROST

dF FUNCTION

dF1 delay time to next defrost of the circuit 1

dF2 delay time to next defrost of the circuit 2

- 1. Enter the function Menu
- 2. Push **UP** or **DOWN** keys to select **dF**
- 3. Push **SET** key: dF1 label is showed on the top display, the bottom display shows the time delay to next defrost in minutes / seconds. The ① icon is on.
- 4. Push **UP** or **DOWN** keys to select dF1 or dF2.
- 5. To exit the Hour function push MENU key or wait the timeout

9.17 READ-OUT OF THE PROBES CONFIGURED TO CONTROL FREE COOLING

Sol FUNCTION

FCP1 Free cooling probe 1 temperature

FCP2 Free cooling probe 2 temperature

FCdF Free cooling differential

FCrL Free cooling water pump status

FCAn Free cooling analog output status

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select Fc
- 3. Push SET key: FCP1 label is showed on the top display, the bottom display shows the value
- 4. Push **UP** or **DOWN** keys to select others information.
- 5. To exit the **Fc** function push MENU key or wait the timeout

9.18 READ-OUT OF THE PROBES CONFIGURED TO CONTROL SOLAR PANEL

Sol FUNCTION

SLPb Solar panel probe 1 temperature

SSP2 Solar panel probe 2 temperature

SSdi Solar panel differential

SPMP Solar panel water pump status

SLrL Solar panel valve status

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select SOL
- 3. Push SET key: SLPb label is showed on the top display, the bottom display shows the value
- 4. Push **UP** or **DOWN** keys to select others information.
- 5. To exit the **SOL** function push MENU key or wait the timeout

9.19 READ-OUT OF THE PROBES CONFIGURED TO CONTROL AN AUXILIARY OUTPUT RELAY

uS FUNCTION.

uSt1 auxiliary 1 probe valueuSt2 auxiliary 2 probe value

- 1. Enter the function Menu
- 2. Push UP or DOWN keys to select uS.

- 3. Push **SET** key: the label **uSt1** (temperature probe) or **uSP1** (Pressure probe) is showed on bottom display, the top display shows the temperature or pressure value.
- 4. Push **UP** or **DOWN** keys to select **uSt1** auxiliary 1 probe or **uSt2** auxiliary 2 probe.
- 5. To exit the Hour function push MENU key or wait the timeout.

9.20 HOW TO DISPLAY THE TEMPERATURE OF THE INTERNAL TEMPERAURE SENSOR OF THE REMOTE TERMINAL

FUNCTION trEM

trE1 value of the NTC probe of the remote #1

trE2 value of the NTC probe of the remote #2

- 1. Enter the function Menu
- 2. Push UP or DOWN to select trEM function
- 3. Push SET; trE1 or trE2 label is shown on the bottom display, the top display shows the probe value.
- 4. Push **UP** or **DOWN** keys to change beteween **trE1** or **trE2** read-out.
- 5. To exit to the normal display read-out push MENU or wait the time out time.

9.21 HOW TO ENABLE / DISABLE RECOVERY FUNCTION

FUNCTION rEC

- enable / disable recovery function:
 - o lower display shows (En /diS)
 - o press SET key for some seconds
 - En / diS blinks
 - o Press arrow keys to modify the status (enable or disable)
 - press SET key to confirm
 - by pressure of arrow keys it is possible to read the status of recovery valves (rEC1 or rEC2 depending on the circuit)

10. DISPLAY VISUALIZATION OF VISOGRAPH REMOTE TERMINAL

10.1 VISUALIZATION AFTER THE POWER ON


The display visualizes the logo Dixell as showed below.

To enter the main visualization press ENTER.




It is possible to read the main information about the firmware version and bin version by pressing .

- release firmware of the Ichill 200D
- release firmware of the Visograph V2I890
- BIN version of the Visograph V2I890
- date of the BIN of the Visograph

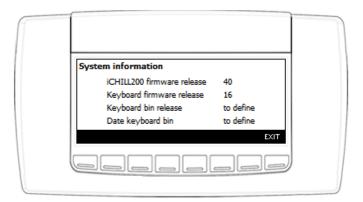

10.2 MAIN VISUALIZATION

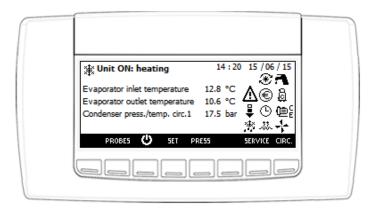

In the main visualization it is possible to read:

- · status of the unit: cooling, heating, remote OFF or STD-BY
- date and time, available if the Ichill is provided by internal clock
- 4 probes value; it is possible to manage 4 lines to visualize the probe temperature / pressure (parameters dP06..dP09):
 - 0. Not enabled
 - 1. Temperature probe PTC for compressor 1 discharge
 - 2. Temperature probe PTC for compressor 2 discharge
 - 3. Temperature probe PTC for compressor 3 discharge
 - 4. Temperature probe PTC for compressor 4 discharge
 - 5. Not used
 - 6. Not used
 - 7. Temperature probe PTC for solar panel
 - 8. Temperature probe **NTC** for evaporator inlet
 - 9. Temperature probe **NTC** for evaporator 1 outlet
 - 10. Temperature probe NTC for evaporator 2 outlet
 - 11. Temperature probe **NTC** for common evaporator outlet
 - 12. Temperature probe **NTC** for common hot water condenser / recovery inlet
 - 13. Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 inlet
 - 14. Temperature probe NTC for hot water of the condenser / recovery circuit 2 inlet
 - 15. Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 outlet
 - 16. Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 outlet
 - 17. Temperature probe **NTC** for hot water of the condenser / recovery common outlet
 - 18. Temperature probe **NTC** for free cooling water inlet circuit
 - 19. Temperature probe NTC for dynamic setpoint external air / boiler / change over

- 20. Temperature probe NTC for combined defrost circuit 1
- 21. Temperature probe **NTC** for combined defrost circuit 2
- 22. Temperature probe NTC for auxiliary output 1
- 23. Temperature probe NTC for auxiliary output 2
- 24. Temperature probe NTC domestic hot water 1
- 25. Temperature probe NTC domestic hot water 2
- 26. Temperature probe **NTC** solar panel
- 27. Temperature probe NTC recovery function
- 28. Condenser probe circuit 1 (temperature NTC / pressure 4÷20 mA / ratio-metric 0÷ 5Volt
- 29. Condenser probe circuit 2 (temperature NTC / pressure 4÷20 mA / ratio-metric 0÷ 5Volt
- 30. Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷ 5Volt)
- 31. Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷ 5Volt)
- 32. Aux 1 output probe control (4÷20 mA / ratio-metric 0÷5Volt)
- 33. Aux 2 output probe control (4:20 mA / ratio-metric 0:5 5 Volt)
- 34. Dynamic setpoint probe (4÷20 mA)
- 35. Compressor 1 or circuit 1 pressure probe
- 36. Compressor 2 or circuit 2 pressure probe
- 37. Internal temperature of the Visograph 2.0 remote terminal (sensor mounted internally)
- 38. Remote temperature of the Visograph 2.0 remote terminal (external sensor)
- 39. Internal humidity of the Visograph 2.0
- load / function status as showed below:

| | Compressor/s (blinking during the start up delay) | € | Economy function |
|-------|---|----------------|--------------------------------|
| · / 🐨 | Water pump / Supply fan | ŧ | Unloading function |
| 4- | Condenser fan | 0 | Economy or ON/OFF by timetable |
| .W. | Electric heater | * * | Defrost |
| 7 | Domestic hot water | Δ | Alarm |
| | Recovery enabled | | |

Meaning of the keys:


| PROBES | Allows to read the value of the probes configured in the Ichill | SET | Allows to read/modify the set point |
|--------|--|---------|---|
| * | Allows to switch on the Ichill in heating or cooling mode (see parameter CF78) | ALARM | Allows to read the alarms |
| * | Allows to switch on the Ichill in heating or cooling mode (see parameter CF78) | SERVICE | Allows to enter the SERVICE menù |
| Ð | Allows to put the Ichill in STD-BY | CIRC. | Allows to read the main information of the circuits (compressor status, water pump status, pressure probe value,) |

Note:

in case of alarm, press any key to silence the buzzer

10.3 PROBES VISUALIZATION

Press PROBES key to visualize the value of the probes configured in the Ichill (press to visualize all the probes).

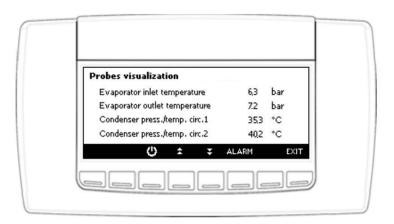


10.4 VISUALIZATION / MODIFICATION OF THE SET POINT

Press key to read the value of the set point (cooling set point if the Ichill is in cooling mode, heating set point if the Ichill is in heating mode, cooling and hating set point if the Ichill is in STD_BY or remote OFF, Domestic hot water when enabled).

It is also possible to read the status of the Energy saving, the status of the Dynamic set point and the real value of the set point if the Energy saving or Dinamic set point are active.

To modify the set point (Cooling, Heating or Domestic hot water):

- press or to select the value of the set point
- press set
- press o to modify the value
- press SET to confirm the operation

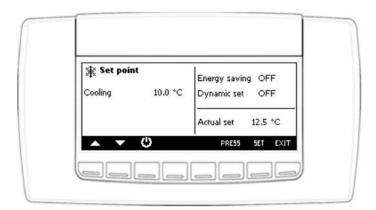

10.5 ALARM VISUALIZATION

Press ALARM key to read the alarm status; the alarm status can be:


- o Active: the alarm is still active and it is not possible to reset it
- o Reset: the alarm is not active and it is possible to reset it

Manual reset procedure:

- o press or to select the alarm;
- o press RESET to reset the alarm

In case of compressor overload alarm when the password is requested, follow this step:

- o press o to select the compressor overload alarm
- o press RESET
- press
 press
 or
 to insert the password value (parameter AL46)
- o press SET to confirm the operation

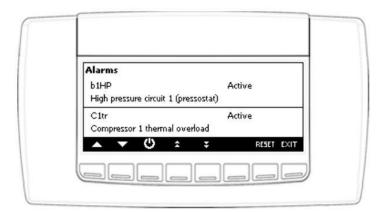



10.6 MENU SERVICE

Pressing **SERVICE** it is possible to read the following information:

| 漱 | Parameter programming | | |
|----------------|---|--|--|
| XII | Programming clock | | |
| UI UI | Energy saving and ON/OFF scheduling | | |
| | Compressor maintenance | | |
| * <u>'</u> | It is possible to disable the compressor for maintenance, | | |
| + <u>b.</u> _} | read the working hours and number of start up (and reset | | |
| | them) | | |
| | Water pump maintenance | | |
| | It is possible to read / reset the working hours | | |
| @ | Circuit maintenance | | |
| A | Visualization and reset of the alarms | | |
| | Visualization and reset of the alarm log | | |
| **** | Defrost status | | |

| +0=₩0+ | Valves status | |
|-------------------|---|--|
| 40 | I/O status | |
| | Screw compressor information | |
| 4₩ -##- | Auxiliary output and heaters status | |
| REC蹇 爲SAN | Heat recovery and domestic hot water status | |
| FC/[] | Free cooling and Solar panel visualization | |
| HOTKEY | Upload and download parameter map with Hot Key | |
| -2 1 | Visograph configuration It is possible to read the Ichill firmware version (for the compatibility with the keyboard), the keyboard firmware release and keyboard bin release. It is possible to change the language, to set the contrast and the backlight. | |

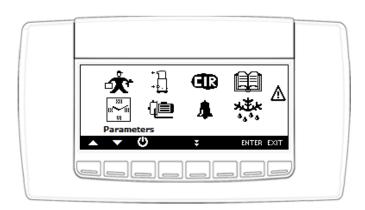

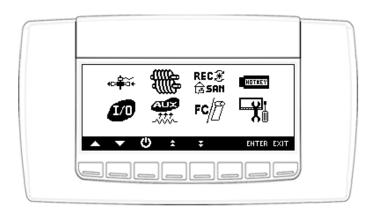




Pressing it is possible to read/modify the parameters value:


• select the level 1 (default) or level 2 or level (by pressing Pr2 or Pr3 key)

- press
- to enter the password

- press set to confirm
- the display shows "Password OK!" (otherwise repeat the procedure)
- press ENTER to visualize the parameters

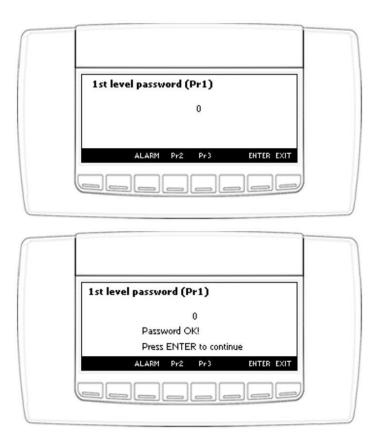


Pressing or it is possible to select the group of parameters to modify, then press

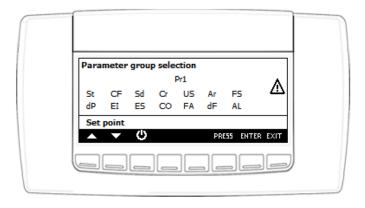


How to modify the value of the parameter:

- press or to select the parameter to modify
- press ENTER
- press or to modify the value
- press ENTER to confirm

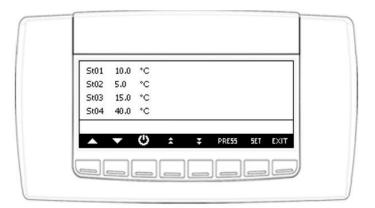


Press or to scroll the parameters.




It is possible to set the clock and read the Energy saving and the ON/OFF scheduler. How to set the clock:

- o press or to select the date to modify (hour, minutes, date);
- o press or to modify the value
- o press SET to confirm

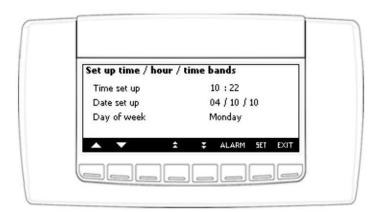


Pressing or it is possible to read the information about the Energy saving and ON/OFF scheduling.

To modify the hour of the time band and to enable the function is necessary to enter the parameter programming (ES parameters).

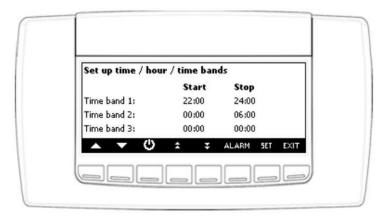




Pressing it is possible to visualize the compressor working hour and the number of activations. It is also possible to disable the compressor for maintenance.

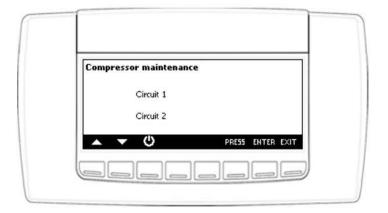

Pressing it is possible to enter on the visualization of the working hour and number of start up of each compressor.

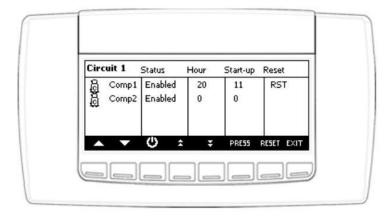

How to reset working hours and number of switching on:

- o press or keys to select RST;
- o press RESET
- o press SET

- o write the PASSWORD
- o press SET
- o press ENTER


How to disable a compressor:

- or press or to select the status of the compressor (Enabled in the "Status" column);
- o press ENB/DIS for 5 seconds
- o press or to select the status "Disabled"
- o press ENB/DIS for 5 seconds to confirm the operation



How to reset working hours:

- o press or keys to select RST;
- press RESET
- o press SET
- write the PASSWORD
- o press SET
- o press ENTER

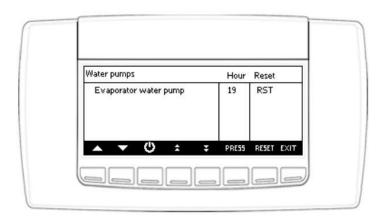




Press to disable the circuit for maintenance; all the compressor will be switched off after disabling the circuit.

How to disable a circuit:

- o press or to select the circuit to disable
- o press ENB/DIS for 5 seconds
- o press or to select the status "Disabled"
- o press **ENB/DIS** for 5 seconds to confirm the operation

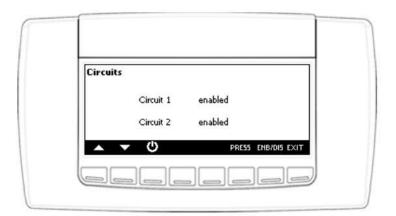



Alarm visualization and reset

Pressing o it is possible to visualize the alarms; the alarm status can be:

- Active: the alarm is still active and it is not possible to reset it
- o Reset: the alarm is not active and it is possible to reset it

Manual reset of all alarms:


press RST ALL to reset all the alarms (only the alarms that are not active)

Manual reset procedure:

- o press or to select the alarm;
- o press RESET to reset the alarm


In case of alarm that requires the password, operate in this way:

- press o to select the alarm
- press RESET
- press SET
- press or or to insert the password value (parameter AL46)
- press set to confirm the operation

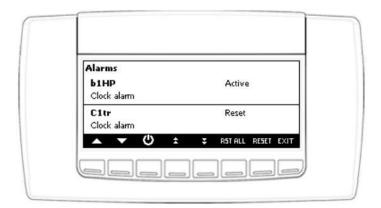




Pressing or it is possible to read the last 99 alarms.

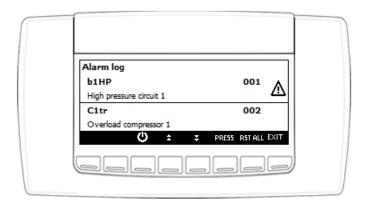





For each circuit it is possible to read the status of the defrost, the condenser pressure, the suction pressure, the defrost start temperature / pressure and the defrost end temperature / pressure.

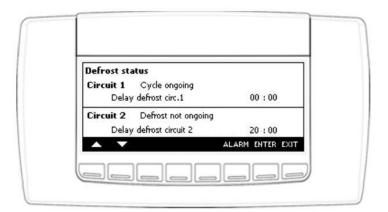

Press or to select the circuit 1 or circuit 2, then press

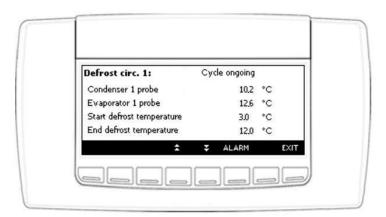


If the combined defrost is enabled, press or to read the probe value and the set point.

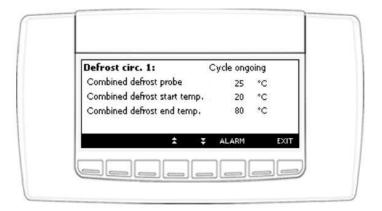




It is possible to read the status of the electrical heaters and the pump down valve.

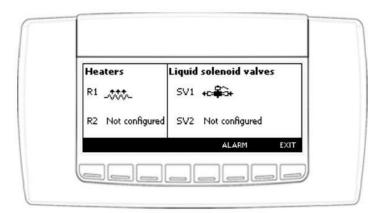






Press or to select the digital input, analog output, analog input or relays, then press ENTER.

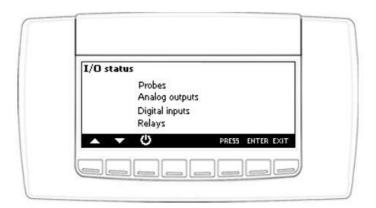


Probes visualization.

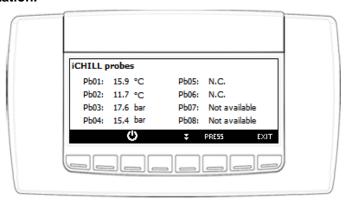

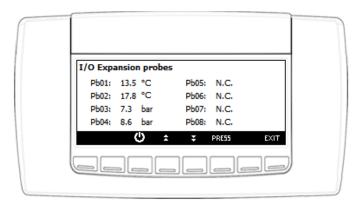


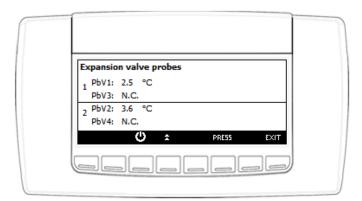


Analog output status.

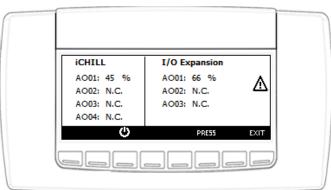



Digital input status.

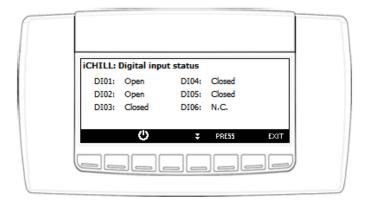

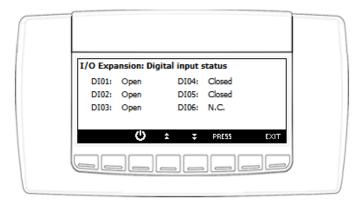

Relay status visualization.

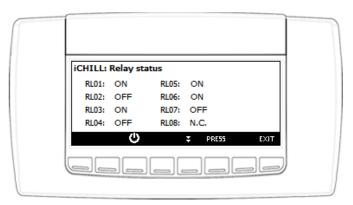


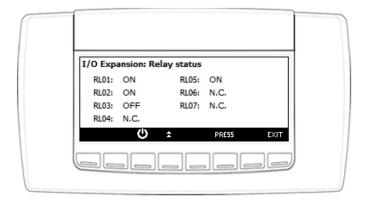




It is possible to read the information related to the screw compressor.

In the first visualization it is possible to read the set point of the discharge temperature and the liquid injection set point.

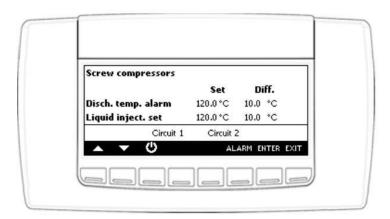

To read the discharge temperature, the status of the liquid injection valve and the status of the minimum load start up valve:


- press or to select the circuit 1 or circuit 2
- press to visualize the discharge temperature, the status of the liquid injection valve and the status of the minimum load start up valve of the compressor 1
- press or to visualize the information of the next compressor (if configured)

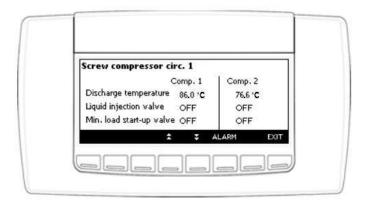





Heaters and auxiliary output


Press or auxiliary output status.

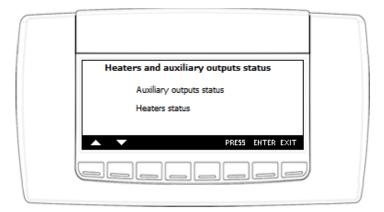


Auxiliary output status

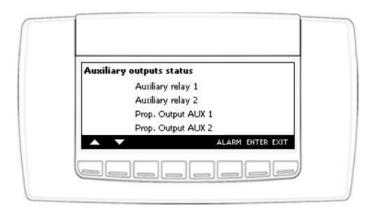

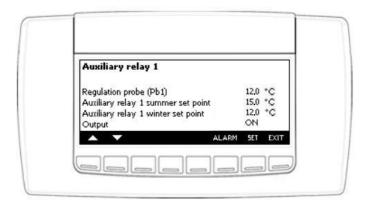

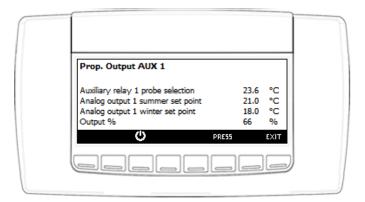


Auxiliary output status

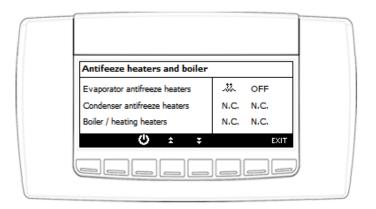


| REC ≆ ☐ SAN Heat recovery and domestic hot water | |
|---|--|
|---|--|


Press or to select Domestic hot water or Heat recovery

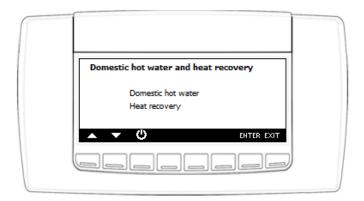


Domestic hot water

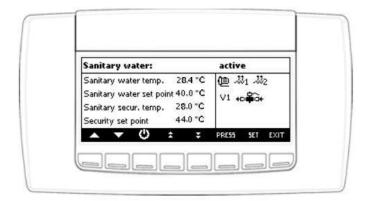


Press or to read the information of the domestic hot water regulation, antilegionella and solar panel.

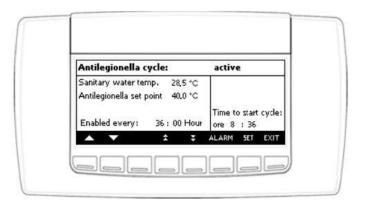


Hot recovery

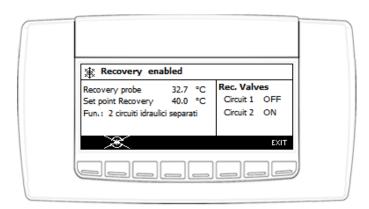

| FC/// Solar panel and free cooling |
|------------------------------------|
|------------------------------------|

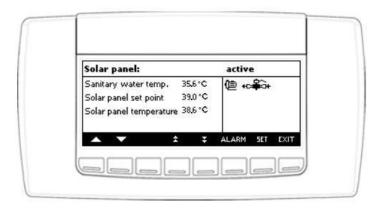

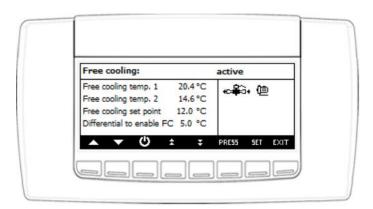



It is possible to use the HotKey 64 for:

- copy the parameter map from the HotKey 64 to the Ichill (Download)
- copy the parameter map from the Ichill to HotKey 64 (Upload)

Download from HotKey 64 to Ichill:

this operation is enabled only if the Ichill is in STD-BY or remote OFF, otherwise the display shows the message "Download enabled only in stand-by".

Download procedure:

- Insert the Hot Key 64 into the 5 ways connector through the hole at the top of the Ichill (see image below)
- Select "Download from HotKey to device"
- Press ENTER
- if the operation was successful the display shows "OK", otherwise shows "ERR"


Upload from Ichill to Hot Key 64:


Upload procedure:

- Insert the Hot Key 64 into the 5 ways connector through the hole at the top of the Ichill (see image below)
- · Select "Upload from device to HotKey"
- Press ENTER
- if the operation was successful the display shows "OK", otherwise shows "ERR"

In case of Upload / Download failure:

- Hot Key 64 not properly inserted in the 5 ways connector
- Hot Key model different to Hot Key 64

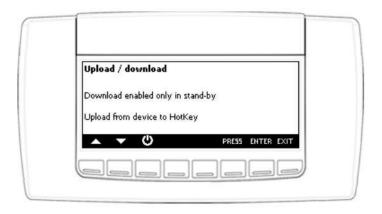


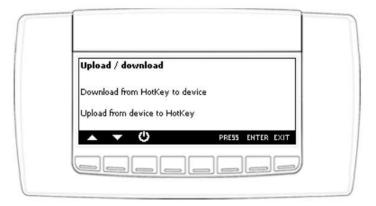



It is possible to set:


- contrast and backlight (it is strongly recommended to reduce as possible the activation time
 of the backlight)
- language selection
- information about:
 - o Ichill firmware release (to verify the compatibility Ichill ←→ Visograph keyboard)
 - Visograph keyboard firmware release
 - Visograph keyboard bin release

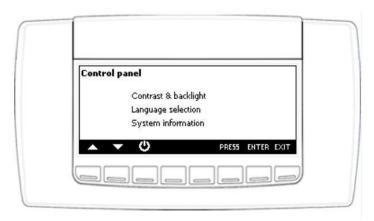


How to modify the configuration:

- o press or to select the configuration to change
- o press set

- o press or to change the configuration
- o press SET to confirm

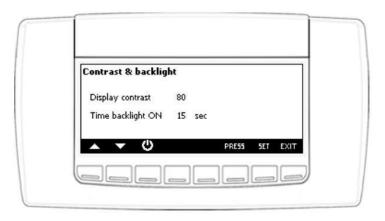



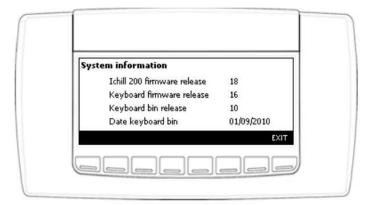


10.7 CIRCUIT INFORMATION

Press CIRC. to read the main information about the circuit:


- compressor status
- unloading status
- evaporating condensing probes
- water pump / supply fan status
- condenser fan status


Load status visualization:



| | Condenser fan OFF (step regulation) | 2 | Condenser fan ON (step regulation) |
|----------|---|----------------|--|
| <u>a</u> | Condenser fan OFF (proportional regulation) | <u> </u> | Condenser fan ON (proportional regulation) |
| OFF | Water pump OFF | → • ••• | Water pump ON |
| SF OFF | Supply fan OFF | SF ₩ | Supply fan ON |


Press or to select the information to read then press

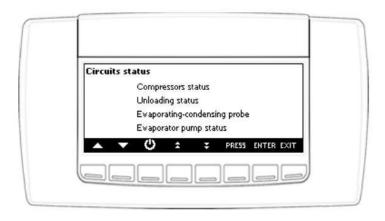

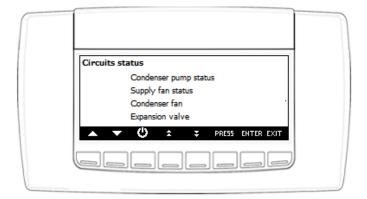


• Compressors status


ON/OFF compressor

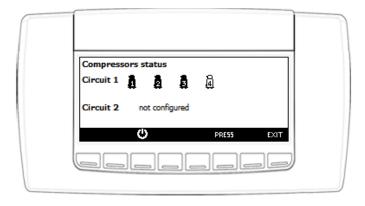


Inverter compressor

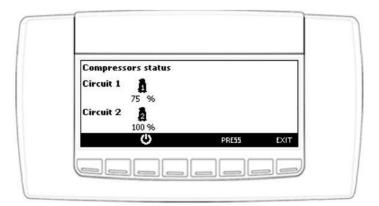


• Unloading status

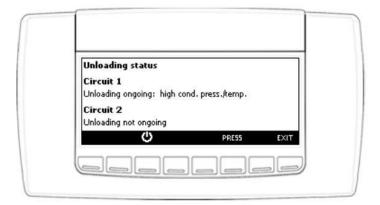


• Evaporating-condensing probe

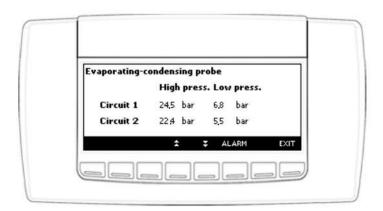


• Evaporator pump status

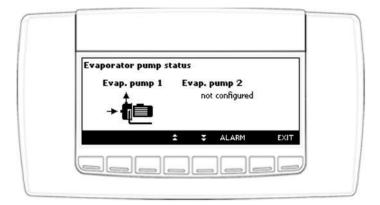

• Supply fan status

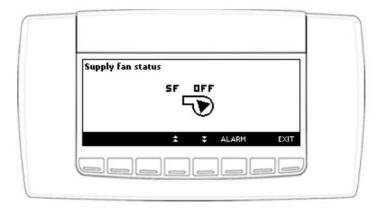


• Condenser pump status

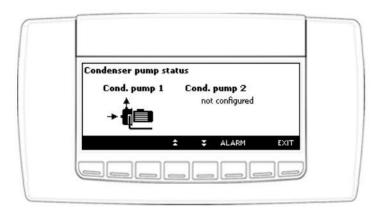


Condenser fan status

Fan with proportional regulation

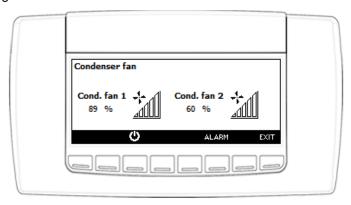

ON/OFF fan

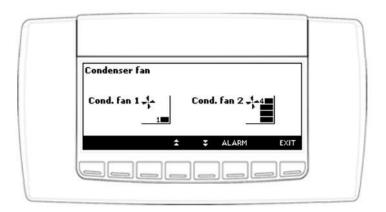

11. HOW TO SWITCH ON / SWITCH OFF THE UNIT

11.1 SWITCH ON / SWITCH OFF THE ICHILL BY KEYBOARD

Push and release the *key allows to start in chiller mode if CF58 =0, in heat pump if CF58 =1. When the unit is running the corresponding led is on.

INPORTANT: To change from chiller to heat pump and viceversa the unit must be set in stand-by before continuing.

Push and release the ★ key allows to start in heat pump mode if CF58 =0, in chiller if CF58 =1er. When the unit is running the corresponding led is on.

INPORTANT: To change from chiller to heat pump and viceversa the unit must be set in stand-by before continuing.

STAND-BY (OR UNIT OFF, NOT RUNNING)

The unit is considered in stand by when the leds * and * are both off. The stand-by is reached each time the Chiller or the Heat Pump are turned off. During the stand by the user can:

- Show all the probe measurements
- Detect and reset the alarm events.

11.2 SWITCH ON / SWITCH OFF THE ICHILL DIGITAL INPUT

Turn on or off the unit from digital input

If a digital input is configured as remote ON/OFF:

- The digital input overrides the keyboard command.
- The keyboard can run only if the digital input is not active.
- When the digital input is not active the instrument restore its status (had before the digital input activation).

12. SWITCH ON / SWITCH OFF THE CONDENSING UNIT BY DIGITAL INPUT

The Ichill can be configured as condensing unit; in this configuration evaporator probes are not used and compressor switching on / switching off is managed by digital input.

12.1 DIGITAL INPUT CONFIGURED AS REGULATION REQUEST

The machine has to be configured as condensing unit CF03 = 1.

- If the digital input is not active the unit is stand-by and the display shows OFF
- If the digital input is active the unit is on and the display shows On

Cooling or heating selection is done by keyboard; the display shows **OnC in cooling and OnH in heating.** If the machine has more compressors

- by "regulation request" digital input activation, first compressor will start
- other compressors will start when the digital input congigured as" Request step 2 (condensing unit), or Request step 3 (condensing unit), etc. are activated.

With active contact if the unit is being switched off by keyboard it can be switched on by keyboard. If the unit is being switched off by keyboard, in order to switch on the unit from digital input it must be deactivated and activated.

12.2 DIGITAL INPUT CONFIGURED AS CHILLER REQUEST

The machine has to be configured as condensing unit CF03 = 1.

- If the digital input is not active the unit is on stand-by and the display shows OFF
- If the digital input is active the unit is on in cooling and the display shows OnC

With active contact if the unit is being switched off by keyboard it can be switched on by keyboard. If the unit is being switched off by keyboard, in order to switch on the unit from digital input it must be deactivated and activated.

12.3 DIGITAL INPUT CONFIGURATED AS HEAT PUMP REQUEST

The machine has to be configured as condensing unit CF03 = 1.

- If the digital input is not active the unit is on stand-by and the display shows OFF
- If the digital input is active the unit is on in heating and the display shows OnH

With active contact if the unit is being switched off by keyboard it can be switched on by keyboard. If the unit is being switched off by keyboard, in order to switch on the unit from digital input it must be deactivated and activated.

13. CHILLER / HEAT PUMP SELECTION

13.1 SELECT THE CHILLER OR THE HEAT PUMP MODE

The CF59 parameter allows to select and enable the running mode:

Par. CF59 = 0: Through keyboard

The user can start and stop the unit using the keys of the front panel.

Par. CF59 = 1: Through digital input programmed to start/stop the unit from remote control.

- This selection is enabled if there is one digital input configured as start/stop from remote (remote chiller / heat pump). I non of the digital input are configure the unit remains in **stand-by**.
- The "open" status of the input forces the chiller running mode.
- The "closed" status of the input forces the heat pump running mode.
- The keyboard selection is disabled.
- The key on the front panel can start/stop the unit only with the digital input selection

Par. CF59 =2: Automatic selection of the Chiller - Heat Pump through analogue input

The analogue input selection or change over function overrides the digital input C-HP function. If the external air temperature are within the CF81 differential, the user can change the running mode from the keyboard. If the unit is running with CF79 = 1 or CF79=2, and it is requested a running mode change, the controller turns off all the outputs, starts a fixed delay time signalled by the chiller or heat pump blinking led. This blinking led indicates which running mode will be activated after the compressor delay time protection.


13.2 CHANGE OVER

CF60 Change over Setpoint. If the analogue input control (from probe) function is enabled, it represents the limit temperature of the probe value under which the unit runs the Heat Pump mode.

CF61 Change over Differential. If the analogue input control (from probe) function is enabled, it represents the limit differential temperature of the probe value to restart in the Chiller mode.

For external air temperature within CF81 the user can manually change the status from keyboard.

GRAPH: AUTOMATIC CHANGE OVER

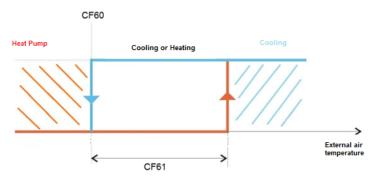

13.3 KEYBOARD SELECTION

CF58 = 0: pushing ★ key the unit starts in chiller, pushing ★ key the unit starts in heat pump

CF58 = 1: pushing ★ key the unit starts in heat pump, pushing ★ key the unit starts in chiller

13.4 ANALOG INPUT SELECTION

CF58 = 0 NTC, External air temperature probe > CF60+ CF61 **★** the unit starts in chiller, NTC, External air temperature probe < CF60 **★** the unit starts in heat pump.

CF58 = 1 NTC, External air temperature probe > CF60+ CF61 ★ the unit starts in chiller, NTC, External air temperature probe < CF60 ★ the unit starts in heat pump.

14. COMPRESSOR REGULATION

| CF74 | Working mode of the compressor | | | |
|------|--------------------------------|---|---|--|
| | 0 = chiller and heat pump | 0 | 2 | |
| | 1 = only chiller | | | |
| | 2 = only heat pump | | | |

It is possible to decide how many compressors are used in chiller, heat pump and domestic hot water production.

- o parameter CO76: number of compressors to use in chiller
- parameter CO77: number of compressors to use in heat pump
- o parameter CO78: number of compressors to use in domestic hot water

In case of contemporary production of domestic hot water and chiller the number of compressors is defined by domestic hot water request.

14.1 COMPRESSOR SECURITY TIME

- CO01 Minimum ON time of the compressor after switching on
- CO02 Minimum OFF time of the compressor after switching off
- o CO91 Minimum time between two switch on of the same compressor

14.2 REGULATION PROBE SELECTION

The parameters St09 and St10 allows to configure the regulation probe for cooling and heating.

St09 Regulation probe in chiller

0= evaporator inlet temperature

1= evaporator 1 outlet temperature

2= evaporator 2 outlet temperature

3= common evaporator outlet temperature

4= remote terminal 1 internal probe (VICX610 keyboard) or Visograph 2.0 internal probe

5= remote terminal 2 internal probe (VICX610 keyboard) or Visograph 2.0 remote probe

St10 Regulation probe in heat pump

0= evaporator inlet temperature

1= evaporator 1 outlet temperature

2= evaporator 2 outlet temperature

3= common evaporator outlet temperature

4= remote terminal 1 internal probe (VICX610 keyboard) or Visograph 2.0 internal probe

5= remote terminal 2 internal probe (VICX610 keyboard) or Visograph 2.0 remote probe

6= common condenser inlet temperature

7= condenser 1 inlet temperature

8= condenser 2 inlet temperature

9= condenser 1 outlet temperature

10= condenser 2 outlet temperature

11= common condenser outlet temperature

14.3 PROPORTIONAL REGULATION

The parameter St11 allows to configure the regulation mode.

Par. **ST11** Type of regulation

St11 = 0 Proportional regulation

St11 = 1 Neutral zone regulation

Cooling regulation


St01 Chiller Setpoint

It allows to set the chiller working temperature within the range ST02..ST03.

St02 Minimum setpoint limit in chiller

St03 Maximum setpoint limit in chiller

St07 Regulation band width in chiller mode

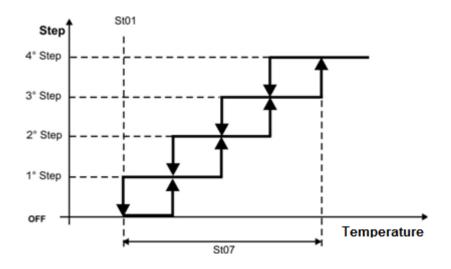


Heating regulation

St04 Heat pump setpoint

It allows to set the Heat pump working temperature within the range ST05..ST06. **St05** Minimum setpoint limit in heat pump.

The user cannot program a setpoint value lower than ST05, the range is -30 °C..ST04. **St06** Maximum setpoint limit in heat pump

The user cannot program a setpoint value higher than ST06, the range is ST01..70°C. **St08** Regulation band in heat pump mode

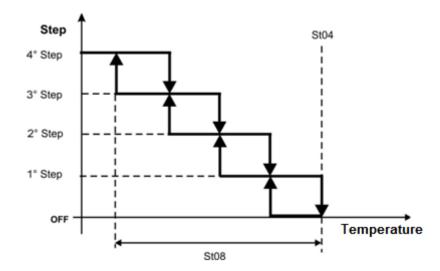

14.4 NEUTRAL ZONE REGULATION

The parameter St11 allows to configure the regulation mode.

Par. **ST11** Type of regulation St11 = 1 Neutral zone regulation

Compressor regulation in chiller


St01 Chiller Setpoint

It allows to set the chiller working temperature within the range ST02..ST03.

St02 Minimum setpoint limit in chiller

St03 Maximum setpoint limit in chiller

St07 Regulation band width in chiller mode

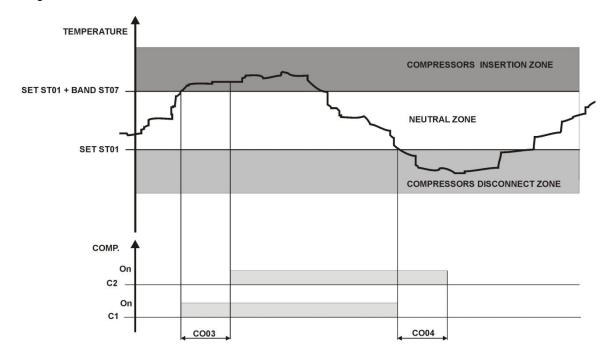

Compressor regulation in heat pump

St04 Heat pump setpoint

It allows to set the Heat pump working temperature within the range ST05..ST06.


St05 Minimum setpoint limit in heat pump.

The user cannot program a setpoint value lower than ST05, the range is -30 °C..ST04.

St06 Maximum setpoint limit in heat pump

The user cannot program a setpoint value higher than ST06, the range is ST01..70°C.

St08 Regulation band in heat pump mode

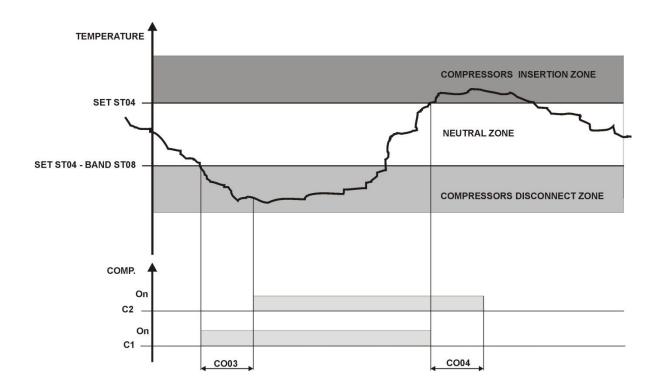

Compressor operation mode when the temperature is in neutral zone

Par. CO53 Maximum time of work in neutral zone without resource insertion

When the temperature is inside the neutral zone, a timer is activated (parameter CO53); when this time is elapsed, the Ichill switch on all the compressor to avoid an stationary situation.

If the parameter value is 0 the function is non activated.

Par. CO54 Maximum time of work in neutral zone without rotation resource

When the temperature is inside the neutral zone and only one compressor is ON, a timer is activated (parameter CO54); when this time is elapsed, the Ichill switch off the compressor and swith on an available compresso.

If the parameter value is 0 the function is non activated.

15. COMPRESSORS MANAGEMENT

15.1 COMPRESSORS START- UP

The parameter CO10 defines the compressor start-up: CO10=0 direct CO10=1 part winding

15.1.1 Direct Start-Up

It is necessary to configure one relay to drive the contactor of the compressor.

EXAMPLE

Direct start up configuration for one compressor

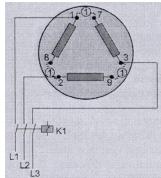


Fig. 1

15.1.2 Part Winding Start-Up

Each compressor needs two relay outputs:


- Part Winding coil 1;
- Part Winding coil 2.

The delay between coil 1 and coil 2 activation is defined by CO11 (decimal of second, in a range 0..5 seconds).

Compressor Start- up

- First step: Part winding coil 1 (relay K1 of fig2) is switched on
- Second step: after CO11 delay is switched on the part winding coil 2 (relay K2 of fig2).

In switching off phase, part winding coil 1 and part winding coil 2 are switched off at the same time.

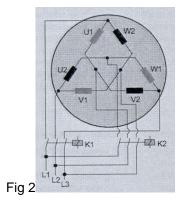

1592022770 User manual IC200CX EVO EN rel1.0 13.11.2015_rev10

16. COMPRESSORS ROTATION

CO14 parameter determines the sequence of compressor activation / deactivation.

CO14= 0 Fixed sequence.

E.g.: 3 compressors configured

Switching on: 1^{st} compressor $\rightarrow 2^{nd}$ compressor $\rightarrow 3^{rd}$ compressor Switching off: 3^{rd} compressor $\rightarrow 2^{nd}$ compressor $\rightarrow 1^{st}$ compressor

CO14= 1 Working hour rotation

First compressor to be activated is the compressor with less working hours; next compressor to be activated follows the same rule.

CO14= 2

Sart-up rotation

First compressor to be activated is the compressor with less start-up; next compressor to be activated follows the same rule.

17. CAPACITY STEP CONTROL

CO06 capacity step operation mode.

To select the right operation mode, please read the compressor technical documentation.

CO06 = 0 ON/OFF step

Eg: compressor with 3 capacity step.

| | 0% of request | 25% of request | 50% of request | 75% of request | 100% of request |
|------------------|---------------|----------------|----------------|----------------|-----------------|
| Compressor relay | OFF | ON | ON | ON | ON |
| Capacity step 1 | ON* | ON | OFF | OFF | OFF |
| Capacity step 2 | OFF | OFF | ON | OFF | OFF |
| Capacity step 3 | OFF | OFF | OFF | ON | OFF |

^{*} If CO07=2 o CO07=3 (screw compressor) 25% valve is ON if the Ichill is ON and at set poiont reached; 25% valve is OFF if the Ichill is STD-BY or OFF

CO06 = 1 direct action

Eg: compressor with 3 capacity step.

| | 0% of request | 25% of equest | 50% of request | 75% of equest | 100% of request |
|------------------|---------------|---------------|----------------|---------------|-----------------|
| Compressor relay | OFF | ON | ON | ON | ON |
| Capacity step 1 | ON* | ON | ON | ON | OFF |
| Capacity step 2 | OFF | OFF | ON | ON | OFF |
| Capacity step 3 | OFF | OFF | OFF | ON | OFF |

^{*} If CO07=2 o CO07=3 (screw compressor) 25% valve is ON if the Ichill is ON and at set poiont reached; 25% valve is OFF if the Ichill is STD-BY or OFF

CO06 = 2 inverse action

Eg: compressor with 3 capacity step.

| | 0% of request | 25% of equest | 50% of request | 75% of equest | 100% of request |
|------------------|---------------|---------------|----------------|---------------|-----------------|
| Compressor relay | OFF | ON | ON | ON | ON |
| Capacity step 1 | ON* | ON | ON | ON | OFF |
| Capacity step 2 | OFF | ON | ON | OFF | OFF |
| Capacity step 3 | OFF | ON | OFF | OFF | OFF |

- * If CO07=2 o CO07=3 (screw compressor) 25% valve is ON if the Ichill is ON and at set poiont reached; 25% valve is OFF if the Ichill is STD-BY or OFF
 - CO06 = 3 Continuous steps and direct action

Eg: compressor with 3 capacity step.

| | 0% of request | 25% of equest | 50% of request | 75% of equest | 100% of request |
|------------------|---------------|---------------|----------------|---------------|-----------------|
| Compressor relay | OFF | ON | ON | ON | ON |
| Capacity step 1 | ON* | OFF | ON | ON | ON |
| Capacity step 2 | OFF | OFF | OFF | ON | ON |
| Capacity step 3 | OFF | OFF | OFF | OFF | ON |

^{*} If CO07=2 o CO07=3 (screw compressor) 25% valve is ON if the Ichill is ON and at set poiont reached; 25% valve is OFF if the Ichill is STD-BY or OFF

ATTENTION

When working with capacity control in sequential step in direct or reverse modes: if the power requested is 50% and 75% the unit turn on also the step 25% that must be enabled to make run the other two.

17.1 MINIMUM LOAD START- UP

Par. CO07: configuration of the start-up with minimum load.

This parameter allows to configure the first capacity step operation mode for alternative compressors and screw compressors.

CO07=0

First capacity step is used only to start the compressor at the minimum load; the valve is switched on for CO13 seconds, then it is switche off.

CO07=1

First capacity step is used as lower step of the regulation.

CO07=2 SCREW COMPRESSOR

First capacity step is used only to start the screw compressor at the minimum load; the valve is ON when the compressor is OFF and it remains ON for CO13 seconds after the switching ON of the compressor.

CO07=3 SCREW COMPRESSOR

First capacity step is used as lower step of the regulation; when the compresor is OFF the valve is ON.

17.2 INTERMITTENT SOLENOID VALVE FOR SCREW COMPRESSOR

Some screw compressors have an intermittent solenoid valve; when the compressor is ON, this valve stays CO08 ON and CO09 OFF.

Due to the high number of switching valve, the function must be used by configuring an analog output as output ON / OFF for intermittent valve and connect it to an external relay type SSR (with appropriate characteristics dell'Ichill exit).

18. COMPRESSOR INVERTER CONTROLLED

The signal 0÷10V is given by one of 4 configurable outputs of the Ichill (OUT1÷OUT4).

The compressor inverter controlled can be used only with proportional regulation (parameter St11=0). Possible unit configuration:

- 1 circuit: 1 compressor inverter controlled
- 1 circuit: 1 compressor inverter controlled and maximum 2 ON/OFF compressor (managed by relay)
- 2 circuits: 1 compressor inverter controlled per circuit
- 2 circuits: 1 compressor inverter controlled and maximum 2 ON/OFF compressor (managed by relay) per circuit

First step to be activated is always the compressor inverter controlled; it will be swiched on when the regulation requests 100% of the compressor power.

To increase / decrease the power the compressor works by step of 1% of the power; every step is delayed by CO62 at the start-up of the compressor and CO71 when the compressor works normally. When the compressor inverter controlled is activated, it works at power configured by CO61 parameter for CO60 seconds; after that:


- if the parameter CO62=0 the compressor modulates the power according to the regulation request
- the parameter CO62≠0 the compressor is forced to works at maximum power and then it modulates the power according to the regulation request

It is possible to limit the output % of the inverter compressor in Chiller, Heat pump and Domestic hot water:

- o maximum % output inverter in Chiller (parameter CO79)
- o maximum % output inverter in Heat pump (parameter CO80)
- o maximum % output inverter in Domestic hot water (parameter CO81)


COMPRESSOR INVERTER CONTROLLED OPERATING MODE: CHILLER

At the start up the compressor is forced to work at CO61 speed for CO60 seconds.

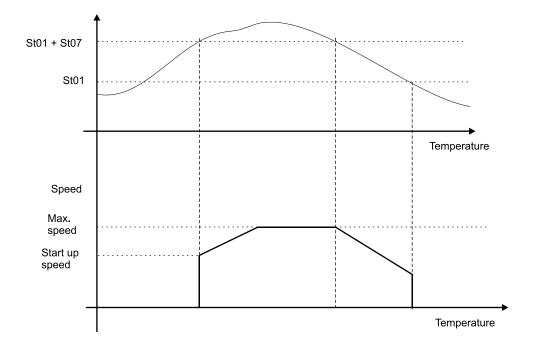


COMPRESSOR INVERTER CONTROLLED OPERATING MODE: HEAT PUMP


At the start up the compressor is forced to work at CO61 speed for CO60 seconds.

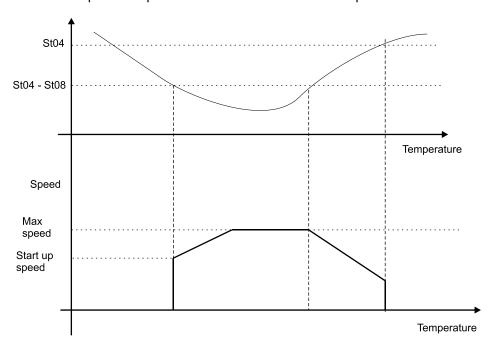

TWO COMPRESSORS INVERTER CONTROLLED OPERATING MODE: CHILLER

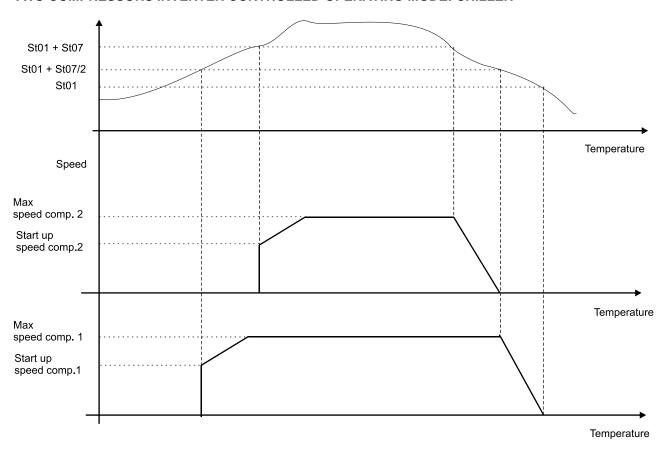

TWO COMPRESSORS INVERTER CONTROLLED OPERATING MODE: HEAT PUMP

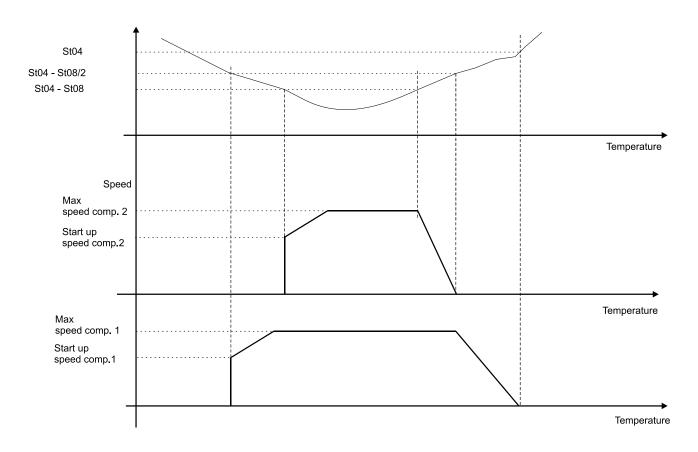


Parameters involved:

| CO60 | Operation time at CO61 power when the compressor inverter controlled is switched on | 0 | 250 | sec | |
|------|--|------|------|-----|--------|
| CO61 | Forced power when the compressor inverter controlled is switched on | 0 | 100 | % | |
| CO62 | Delay to increase the power during the start up phase of the compressori inverter controlled | 1 | 250 | sec | |
| CO63 | Compressor inverter controlled operation power under whitch start counting CO64 time | 0 | 100 | % | |
| CO64 | Maximun operation time of the compressor inverter controlled with power less than CO63 | 0 | 250 | Min | 10 Min |
| CO65 | Operating time of the compressor inverter controlled at maximum power | 0 | 250 | sec | 10sec |
| CO66 | Maximum operating time of the compressor inverter controlled | 0 | 999 | Hr | 1Hr |
| CO67 | Minimum value of the compressor 1 inverter controlled | 0 | CO68 | % | |
| CO68 | Maximum value of the compressor 1 inverter controlled | CO67 | 100 | % | |
| CO69 | Minimum value of the compressor 2 inverter controlled | 0 | CO70 | % | |
| CO70 | Maximum value of the compressor 2 inverter controlled | CO69 | 100 | % | |
| CO71 | Delay to increase/decrease the power of the compressori inverter controlled | 1 | 250 | sec | |
| | | | | | |
| CO79 | Maximum speed of the inverter compressors in chiller | 1 | 100 | % | |

| CO80 | Maximum speed of the inverter compressors in heat pump | 1 | 100 | % | |
|------|---|------------------------------|----------------------------|------------------------|--------------------------|
| CO81 | Maximum speed of the inverter compressors in domestic hot water | 1 | 100 | % | |
| CO82 | Outside temperature to reduce inverter compressor speed in Heat pump | - 50.0 -58 0.0 0 | 70.0 158 50.0 725 | °C °F Bar Psi | Dec int Dec int |
| CO83 | Hysteresis temperature to reduce inverter compressor speed in Heat pump | 0.1 0 0.1 1 | 25.0 45 14.0 203 | °C °F Bar Psi | Dec int Dec int |
| CO84 | Compressor speed if outside temperature > CO82 | 0 | 100 | % | |

18.1 INVERTER COMPRESSOR IN HEAT PUMP AND EXTERNAL TEMPERATURE

It is possible to reduce the compressor speed (both compressor in parallel if configured) in heat pump when external temperature increases over a determined temperature.

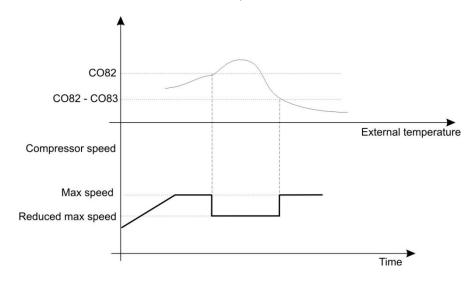

19. COMPRESSOR RACK

The Ichill can manage a compressor rack:

- · the machine must have only one gas circuit
- the machine must work only in cooling mode (machine only chiller)
- the machine has to regulate in proportional mode
- the machine must have max. ON/OFF compressors

The parameter Cr01 allows to enable the compressor rack regulation:

Cr01 = 0 Compressor rack regulation disabled

Cr01 = 1 Compressor rack enabled and regulation on the probe defined by parameter ST09

Cr01 = 2 Compressor rack enabled and regulation on the evaporator trasducer (that has to be configured)

It is possible to choose the number of compressors the controller can use in case of regulation faulty probe; the parameter involved is Cr08.

It is possible to choose the number of condenser fan steps the controller can use in case of faulty probe; the parameter involved is Cr09.

The Energy Saving function, in case of compressor rack unit, has dedicated set point and differential (parameter Cr06 = "Energy saving offset for compressor rack unit", Cr07 = "Energy saving differential for compressor rack unit")

20. COMPRESSORS WITH DIFFERENT CAPACITY POWER

The function is enabled if:

- one circuit unit
- · at least 2 compressor are configured
- the capacity of the compressors is not 0 and different for each one

Parameters involved:

| CF67 | Compressor 1 capacity | 0 | 100% |
|------|---|---|------|
| CF68 | Compressor 2 capacity | 0 | 100% |
| CF69 | Compressor 3 capacity | 0 | 100% |
| CF70 | Compressor 4 capacity | 0 | 100% |
| CF73 | Maximum number of start up of the compressor in 15 minutes 0= Not enabled | 0 | 15 |

Example: circuit with 2 compressors:

- step 1: first compressor to be activated is the compressor with lower capacity
- step 2: the compressor is switched off and is activated the compressor with higher capacity
- step 3: both compressors are activated

The regulation is a steps; if two compressors with different weight are configured, 3 steps are available.

21. MAXIMUM OPERATION TIME OF THE COMPRESSOR

In the event that in a circuit there are more compressors but only one is switched on, after the operation time CO72 the compressor is switched off and another compressor (according on the configuration, in function of operating hours or number of switching on) is turned on.

| CO72 | Tempo massimo di funzionamento continuativo compressore | 0 | 250 | Min | |
|------|---|---|-----|-----|--|
| CO98 | Simultaneous operation time of the compressors for rotation | 0 | 250 | Sec | |

22. CIRCUIT MANAGEMENT: SATURATION OR BALANCING

In case of 2 circuits machine it is possible to decide how to balance the circuits:

- <u>it is possible to switch on all compressors of the circuit before switch on a compressor of the other circuit (saturation)</u>
- it is possible to switch on first compressor of a circuit and then the first compressor of the other circuit (balancing)

CIRCUIT SATURATION

CO15 = 0

If the machine has 2 compressors in the circuit 1 and 2 compressors in the circuit 2, the sequence of activation is:

 1^{st} compressor circuit $1 \rightarrow 2^{nd}$ compressor circuit $1 \rightarrow 1^{st}$ compressor circuit $2 \rightarrow 2^{nd}$ compressor circuit $2 \rightarrow 2^{nd}$

CIRCUIT BALANCING

CO15 = 1

If the machine has 2 compressors in the circuit 1 and 2 compressors in the circuit 2, the sequence of activation is:

 1^{st} compressor circuit $1 \rightarrow 1^{st}$ compressor circuit $2 \rightarrow 2^{nd}$ compressor circuit $2 \rightarrow 2^{nd}$ compressor circuit $2 \rightarrow 2^{nd}$

23. PUMP DOWN

23.1 PUMP DOWN WITH LOW PRESSURE SWITCH OR PUMP DOWN PRESSURE SWITCH

CO36 = 1 Pump down enabled during the switching off (low pressure switch or pump down switch)

Before turning off the last compressor, the solenoid valve is closed; the compressor works until the pressure switch is activated or after a maximum time CO39; in this case an alarm is displayed (b1PH or b2PH) but the machine continuous to work as normal condition.

If the alarm occurs more than AL21 times per hour, the Ichill generate a manual alarm.

Low pressure alarm (when the low pressure switch is used) is disabled for AL02 time after valve activation (AL02=0 the alarm is disabled when the compressor is OFF).

When first compressor of the circuit is switched on, the solenoid valve is switched on 1 seconds before it.

CO36 = 2 Pump down enabled during the switching off and switching on (low pressure switch or pump down switch)

Compressor switching off:

before turning off the last compressor, the solenoid valve is closed; the compressor works until the pressure switch is activated or after a maximum time CO39; in this case an alarm is displayed (b1PH or b2PH) but the machine continuous to work as normal.

If the alarm occurs more than AL21 times per hour, the Ichill generate a manual alarm.

Low pressure alarm (when the low pressure switch is used) is disabled for AL02 time after valve activation (AL02=0 the alarm is disabled when the compressor is OFF).

Compressor switching on:

when first compressor of the circuit is switched on, the solenoid valve is switched on 1 seconds before it. If the pump down pressure switch remains active, the compressors does not restart and after CO39 time a pump-down alarm is displayed.

The parameter AL23 allows to choose if the pump down alarm (during the switching on) is automatic or manual reset:

- AL23 =0 automatic reset; the compressor will rester when the pump down pressure switch is active
- AL23=1 manual reset; if the number of pump down alarm per hour is lower than AL22 the reset is automatic, manual reset; if the number of pump down alarm per hour is higher than AL22 the reset is manual

PAR. CO36 = 3 Pump down enabled during the switching off only in chiller mode (low pressure switch or pump down switch)

The pump douwn procedure works as CO36=1 but only in chiller mode; in heat pump mode the solenoid valve is activated when the first compressor is ON and de-activated when the last compressor is OFF.

PAR. CO36 = 4 Pump down enabled during the switching off and switching on inly in chiller mode (low pressure switch or pump down switch)

The pump douwn procedure works as CO36=2 but only in chiller mode; in heat pump mode the solenoid valve is activated when the first compressor is ON and de-activated when the last compressor is OFF.

23.2 PUMP DOWN WITH LOW PRESSURE PROBE

CO36 = 1 Pump down enabled during the switching off (low pressure probe)

Before turning off the last compressor, the solenoid valve is closed; the compressor works until the pressure falls below CO37 or after a maximum time CO39; in this case an alarm is displayed (b1PH or b2PH) but the machine continuous to work as normal.

If the alarm occurs more than AL21 times per hour, the Ichill generate a manual alarm.

Low pressure alarm (when the low pressure switch is used) is disabled for AL02 time after valve activation (AL02=0 the alarm is disabled when the compressor is OFF).

When the first compressor of the circuit is switched on, the solenoid valve is switched on 1 seconds before it.

CO35 = 2 Pump down enabled during the switching off and switching on (low pressure probe)

Before turning off the last compressor, the solenoid valve is closed; the compressor works until the pressure falls below CO37 or after a maximum time CO39; in this case an alarm is displayed (b1PH or b2PH) but the machine continuous to work as normal.

If the alarm occurs more than AL21 times per hour, the Ichill generate a manual alarm.

Low pressure alarm (when the low pressure switch is used) is disabled for AL02 time after valve activation (AL02=0 the alarm is disabled when the compressor is OFF).

When the first compressor of the circuit is switched on, the solenoid valve is switched on 1 seconds before it and the compressor is switched on if the pressure is higher than CO37 + CO38.

If the pressure remains lower than CO37 + CO38 the compressors does not restart and after CO39 time a pump-down alarm is displayed.

The parameter AL23 allows to choose if the pump down alarm (during the switching on) is automatic or manual reset:

- AL23 =0 automatic reset; the compressor will rester when the pump down pressure switch is active
- AL23=1 manual reset; if the number of pump down alarm per hour is lower than AL22 the reset is automatic, manual reset; if the number of pump down alarm per hour is higher than AL22 the reset is manual

CO36 = 3 Pump down enabled during the switching off only in chiller mode(low pressure probe)

The pump douwn procedure works as CO36=1 but only in chiller mode; in heat pump mode the solenoid valve is activated when the first compressor is ON and de-activated when the last compressor is OFF.

CO36 = 4 Pump down enabled during the switching off and switching on only in chiller mode (low pressure probe)

The pump douwn procedure works as CO36=1 but only in chiller mode; in heat pump mode the solenoid valve is activated when the first compressor is ON and de-activated when the last compressor is OFF.

ATTENTION

If the pump down function is enabled, during the unit start-up from digital input as pump down pressure switch and also from analogue input as low pressure transducer, the compressor will restart only if both the inputs are satisfied.

23.3 PUMP DOWN BY TIME

The pump down can be enabled also by time; in this case the compressor is activated after CO58 from solenoid valve switching on and de-activated after CO59 from solenoid valve switching off.

| CO 58 | Maximum time for the activation of the pump-down during the switching off CO58 = 0 Not enabled | 0 | 250 | Sec | |
|-------|--|---|-----|-----|--|
| CO 59 | Maximum time for the activation of the pump-down during the switching on CO59 = 0 Not enabled | 0 | 250 | Sec | |

24. UNLOADING

24.1 HIGH TEMPERATURE OF THE EVAPORATOR WATER INLET

It is possible to use this function if there are at least 2 steps of power (two compressor or 1 compressor with partialization) for every circuit or with inverter compressor.

UNLOADING ACTIVATION

When the evaporator water inlet temperature is higher than CO40 for CO42 time, the unit works with the number of compressors selected in CO49 parameter or CO96 speed in case of inverter compressor.

EXAMPLE

2 circuits and 3 compressors per circuit

6 compressors are running; if CO49 = 2 in case of unloading 2 compressors are switched off and 4 continuous to work.

UNLOAD DE-ACTIVATION

When the evaporator water inlet temperature falls below CO40-CO41 the unloading function is disabled and all compressor are available to work.

Unloading Information

If the evaporator water inlet temperature remains between CO40 and CO40-CO41, after CO43 time the unloading function is deactivated.

24.2 CONDENSER HIGH PRESSURE, CONDENSER HIGH TEMPERATURE OR EVAPORATOR LOW PRESSURE

UNLOADING ACTIVATION IN CHILLER MODE

When the condenser pressure or temperature is higher than CO44 the unit works with the number of compressors selected in CO49 parameter or CO96 speed in case of inverter compressor.

If the compressor is a screw compressor the unloading function works at least CO50 time; if CO50 = 0 this function is disabled.

EXAMPLE

2 circuits and 3 compressors per circuit

6 compressors are running; if CO49 = 2 in case of unloading 2 compressors are switched off and 4 continuous to work.

UNLOADING DE-ACTIVATION IN CHILLER MODE

When the condenser pressure or condenser temperature falls below CO44-CO45 the unloading function is disabled and all compressor are available to work.

Other information about the Unloading in chiller

If the condenser pressure or condenser temperature remains between CO44 and CO44-CO45, after CO48 time the unloading function is deactivated.

UNLOADING IN HEAT PUMP MODE

The reference probe for this function is the evaporator probe; if any evaporator probe is configured, the function uses the condenser probe.

When the evaporator/condenser pressure is lower than CO46 the unit works with the number of compressors selected in CO49 parameter or CO96 speed in case of inverter compressor.

If the compressor is a screw compressor the unloading function works at least CO50 time; if CO50 = 0 this function is disabled.

EXAMPLE

2 circuits and 3 compressors per circuit

6 compressors are running; if CO49 = 2 in case of unloading 2 compressors are switched off and 4 continuous to work.

UNLOADING DE-ACTIVATION in HEAT PUMP MODE

When the evaporator probe (orcondenser pressure or condenser temperature) increase over CO46+CO47 the unloading function is disabled and all compressor are available to work.

24.2.1 Other information about the Unloading in Heat Pump

If the evaporator probe (or condenser pressure or condenser temperature) remains between CO46 and CO46+CO47, after CO48 time the unloading function is deactivated.

24.3 LOW TEMPERATURE OF THE EVAPORATOR WATER OUTLET

ACTIVATION

The lower value between the inlet evaporator probe, common outlet evaporator probe or outlet probe for the circuit, enables the unloading function.

When the value of one of the probes above decrease under the set point CO55 the unloading function is activated; the number of active compressors/step is determined by the CO49 parameter or CO96 speed in case of inverter compressor.

The display shows the label **b1EU – b2EU** alternated to a default visualization.

DE-ACTIVATION

Unloading function is disabled when the temperature of all the probes configured rise over CO55 + CO56 or when the CO57 time is elapsed.

24.4 UNLOADING BY DIGITAL INPUT

The function is always active and enabled in chiller operation with at least two steps of power in a circuit. If the unloading is active, the display shows b1CU and / or b2CU.

In case of activation by digital input (which coexists with all types of current unloading), the number of compressors on the circuit is brought to the value set in the parameter CO49 and, in case of inverter compressor, the speed is brought to the value set by CO96 parameter.

The unloading condition will remian till the digital input is active.

In unloading remains active the function that hestabilish the maximum operation time of a single compressor; if a compressor remains on for the time set in CO72 (others compressors are off), it will be switched off and another compressor (according to the logic given by CO14) is switched on.

If CO97 > 0 both compressors work together for CO97 time.

The time CO48 (maximum time in unloading) is not usable for the unloading function by digital input.



25. SOLENOID VALVE FOR LIQUID INJECTION

It is possible to configure 2 valves for the liquid injection of the screw compressor (compressor 1 and compressor 2).

When the **compressor is off** the solenoid valve **is always OFF**. When the compressor is on:

- if the temperature detected by the probe mounted in the compressor increases over CO51 setpoint, the valve is switched on
- if the temperature detected by the probe mounted in the compressor decreases under C51-CO52 the valve is switched off.

26. CONDENSING UNIT OPERATION

To enable operation as condensing you must configure the parameter CF03 = 1.

In this mode the control probes are not used and the switching on of the compressors is related to the state of the digital inputs of activation of each compressor.

26.1 OPERATION WITH DIGITAL INPUT CONFIGURED AS REGULATION REQUEST

Digital input configured as regulation request:

- if the contact is NOT ACTIVE the unit is in stand-by and the upper display shows OFF
- if the contact is ACTIVE the unit is ON and the upper display shows On if the unit is in std-by by keyboard, or OnC if it is in chiller or OnH if it is in heat pump.

The operation mode, cooling or heating, is defined pressing the correspondent key on the keyboard; the display shows OnC (ON chiller) or OnH (ON heat pump).

When the digital input configured as regulation request is active, a compressor is switched on; other compressor will be activated by other digital inputs.

If the digital input is active, the unit can be switched off by keyboard; to switch on the unit is necessary:

- · Switch it on by keyboard
- Or de-activate then activate the digital input

26.2 OPERATION WITH DIGITAL INPUT CONFIGURED AS CHILLER REGULATION REQUEST

Digital input configured as chiller regulation request:

- if the contact is NOT ACTIVE the unit is in stand-by and the upper display shows OFF
- if the contact is ACTIVE the unit is ON and the upper display shows OnC (on chiller)

When the digital input configured as chiller regulation request is active, a compressor is switched on; other compressor will be activated by other digital inputs.

If the digital input is active, the unit can be switched off by keyboard; to switch on the unit is necessary:

- Switch it on by keyboard
- · Or de-activate then activate the digital input

26.3 OPERATION WITH DIGITAL INPUT CONFIGURED AS HEAT PUMP REGULATION REQUEST

Digital input configured as heat pump regulation request:

- if the contact is NOT ACTIVE the unit is in stand-by and the upper display shows OFF
- if the contact is ACTIVE the unit is ON and the upper display shows OnH (on heat pump)

When the digital input configured as heat pump regulation request is active, a compressor is switched on; other compressor will be activated by other digital inputs.

If the digital input is active, the unit can be switched off by keyboard; to switch on the unit is necessary:

- Switch it on by keyboard
- · Or de-activate then activate the digital input

Contemporary regulation request error

If two digital inputs are configured as chiller request and heat pump request and both are simultaneously active, the unit is placed in OFF and the upper display shows the label Ferr.

26.4 OPERATION WITH DIGITAL INPUT CONFIGURED AS COMPRESSOR REQUEST

It is possible to turn on and off the compressors without following or partially following the logic given by the parameters CO14 and CO15, assigning a digital input the function to switch on / off a specific compressor or a compressor of a specific circuit.

This use is foreseen only for ON / OFF compressors (not with capacity step and not inverter controlled). In case of incorrect configuration of the digital inputs (condensing unit and compressors with capacity step, digital input configured for a non-existing compressor, etc) is generated alarm ACF4 configuration.

Setting for operation with a digital input configured as compressor request:

• Configure the digital input with the following values (depending on the number of compressors):

- A digital input = o78 or c78 (compressor 1)
- o A digital input = o79 or c79 (compressor 2)
- A digital input = o80 or c80 (compressor 3)
- A digital input = o81 or c81 (compressor 4)

In this configuration, the logic of switching on and off of the compressors (set by parameters CO14 and CO15) is not activated; the digital input switches on / off directly the compressor assigned.

If the compressor assigned to a digital input is not available (for alarm, maintenance, etc.), the request will remain active and the compressor will be used for regulation when available; in case of unavailability of a compressor, the controller does not distribute the request to another compressor.

For this operation mode it is not possible to configure the compressor rotation by operation time (CO72 must be set to 0).

Setting for operation with a digital input configured as a compressor of a determinated circuit:

- Configure the digital input with the following values (depending on the number of compressors):
 - A digital input = o84 or c84 (first compressor circuit 1)
 - A digital input = o85 or c85 (second compressor circuit 1)
 - o A digital input = o86 or c86 (third compressor circuit 1)
 - o A digital input = o87 or c87 (fourth compressor circuit 1)
 - A digital input = o88 or c88 (not used)
 - A digital input = o89 or c89 (first compressor circuit 2)
 - o A digital input = o90 or c90 (second compressor circuit 2)
 - A digital input = o91 or c91 (third compressor circuit 2)

In this configuration, the logic of switching on and off of the compressors (parameters CO14 and CO15) is partially active; it is possible to switch on a compressor of a specific circuit, but in case of machine configuration which provides more than one compressor in a circuit is the controller to determine which compressor has to be switched on according to the logic determined by parameter.

For this operation mode it is not possible to configure the compressor rotation by operation time (CO72 must be set to 0).

26.5 ERROR OF CONDENSING UNIT

Possible alarms:

- In case of contemporary activation of the digital inputs congured as chiller regulation request and heat pump regulation request the unit is placed in the OFF and the upper display the label Ferr.
- In case of incorrect configuration of the digital inputs (function enabled and not set up the correct number of inputs, or if the number of digital input and the number of compressors doesn't correspond), it will be reported the alarm configuration ACF4.

27. EVAPORATOR WATER PUMP / SUPPLY FAN (AIR/AIR UNIT)

Water pump / supply fan operation mode:

CO16=0: Not enabled: water pump/supply fan is not managed.

Attention: The air / air unit configured with CO16= 0 does not manage the output for integration heaters.

CO16 = 1: Continuous control

The water pump / supply fan is ON only if the unit is running (chiller or heat pump).

When the Ichill is switched on in chiller or heat pump, the water pump is immediately activated and the first compressor is switched on after CO17 delay.

When the Ichill is in STD-BY or remote OFF the water pump is OFF (with a delay if CO18>0).

The parameter Ar09 allows to set the status of the water pump in case of antifreeze if the Ichill is in stand-by.

CO16 = 2: on compressor demand

The water pump / supply fan is ON only if at least a compressor is ON; in case of compressor activation, the water pump is switched on CO17 before the compressor.

When the last compressor is switched off, the water pump / supply fan is switched off after CO18 delay from compressor.

When the unit is in stand-by or remote off and the Ar09 =1, if the regulation requires the antifreeze heaters also the water pump is turned on.

The pump is always off when:

- Remote OFF from digital input.
- Water pump overload.
- Evaporator flow switch alarm if MANUAL reset.

During the defrost and when the compressor is off in dripping time the water pump/supply fan is on.

27.1 EVAPORATOR PUMP GROUP

It is possible to configure two evaporator water pumps; the water pump to be activated is the pump with less working hours.

When a water pump works continuously for CO19 time, the other one is switched on and after CO20 second the first one is switched off.

If a water pump overload occurs, the water pump is switched off and the other one is switched on.

Note: During the defrost and when the compressor is off in dripping time, the pump is on.

27.2 MODULATING EVAPORATOR WATER PUMP

To enable the modulating evaporator water pump is necessary to configure an analog output as "Modulated evaporator water pump" (see analog and digital output configuration).

The modulating evaporator water pump is enabled in cooling, heating and domestic hot water production; if the machine is in STD-BY or OFF the water pump is OFF.


The water pump works according the Dt between two probes, which can be choosen both in summer an winter mode, among those configured in the instrument (Pb1, Pb2,...).

If the state of the water pump is tied to the state of the compressor, when last compressor is switched off the water pump is forced to run at US60 speed for CO18 minutes, then it is switched off.

If the state of the water pump is not tied to the state of the compressor, when last compressor is switched off the water pump is forced to run at US60 speed.

The regulation is done as showed below.


Chiller and chiller + domestic hot water (machine with valves OUt1 and OUT2 in the gas circuit)

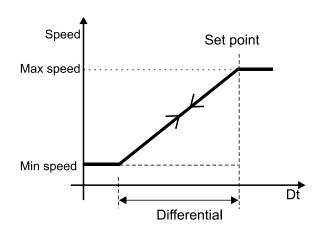

| Parameter | Description | min | max | udm | |
|-----------|---|-----|-----|-----|--|
| US 47 | Probe 1 selection for evaporator water pump modulation in chiller | 0 | 10 | | |
| US 48 | Probe 2 selection for evaporator water pump modulation in chiller | 0 | 10 | | |

| US 49 | Set point for maximum speed of modulationg evaporator water pump in chiller | 30.0 | 70.0 | °C | Dec |
|-------|---|------|------|-----|-----|
| | | -58 | 158 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| | | 0 | 725 | Psi | int |
| US 50 | Proportional band for maximum speed of modulationg evaporator water pump | 0.0 | 25.0 | °C | Dec |
| | in chiller | 0 | 45 | °F | int |
| | | 0.0 | 14.0 | Bar | Dec |
| | | 0 | 203 | Psi | int |
| US 51 | Minimum speed of the evaporator water pump in chiller | 0 | 100 | % | |
| US 52 | Maximum speed of the evaporator water pump in chiller | 0 | 100 | % | |

Heat pump and domestic hot water

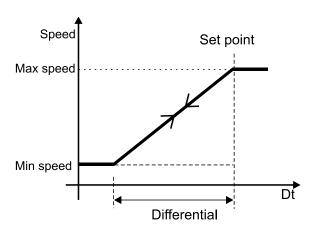

| Parameter | Description | min | max | udm | |
|-----------|--|------|------|-----|-----|
| US 53 | Probe 1 selection for evaporator water pump modulation in Heat Pump | 0 | 10 | | |
| US 54 | Probe 2 selection for evaporator water pump modulation in Heat Pump | 0 | 10 | | |
| US 55 | Set point for maximum speed of modulationg evaporator water pump in Heat | 30.0 | 70.0 | °C | Dec |
| | Pump | -58 | 158 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| | | 0 | 725 | Psi | int |
| US 56 | Proportional band for maximum speed of modulationg evaporator water pump | 0.0 | 25.0 | °C | Dec |
| | in Heat Pump | 0 | 45 | °F | int |
| | | 0.0 | 14.0 | Bar | Dec |
| | | 0 | 203 | Psi | int |
| US 57 | Minimum speed of the evaporator water pump in Heat Pump | 0 | 100 | % | |
| US 58 | Maximum speed of the evaporator water pump in Heat Pump | 0 | 100 | % | |

28. WATER PUMP OF CONDENSER SIDE

28.1 CONDENSER WATER PUMP CONTROL

Water pump operation mode:

CO21=0: Not enabled: water pump is not managed.

CO21 = 1: Continuous control

The water pump is ON only if the unit is running (chiller or heat pump).

When the Ichill is switched on in chiller or heat pump, the water pump is immediately activated and the first compressor is switched on after CO17 delay.

When the Ichill is in STD-BY or remote OFF the water pump is OFF (with a delay if CO23>0).

The parameter Ar09 allows to set the status of the water pump in case of antifreeze if the Ichill is in stand-by.

CO21 = 2: on compressor demand

The water pump is ON only if at least a compressor is ON; in case of compressor activation, the water pump is switched on CO17 before the compressor.

When the last compressor is switched off, the water pump is switched off after CO23 delay from compressor. When the unit is in stand-by or remote off and the Ar09 =1, if the regulation requires the antifreeze heaters also the water pump is turned on.

The pump is always off when:

- Remote OFF from digital input.
- Water pump overload.
- Condenser flow switch alarm if MANUAL reset.

During the defrost and when the compressor is off in dripping time the water pump/supply fan is on.

28.2 CONDENSER PUMP GROUP

It is possible to configure two condenser water pumps; the water pump to be activated is the pump with less working hours.


When a water pump works continuously for CO24 time, the other one is switched on and after CO25 second the first one is switched off.

If a water pump overload occurs, the water pump is switched off and the other one is switched on.

29. CYCLIC OPERATION OF THE WATER PUMPS

If the water pump is OFF (reached set point), is possible to enable it to run to detect the right water temperature.

At the end of the ON time, the controller verify if is necessary to switch on the compressor/s or not; if is not necessary, the water pump is switched OFF for CO85 time and then switched on for another CO87 ON cycle.

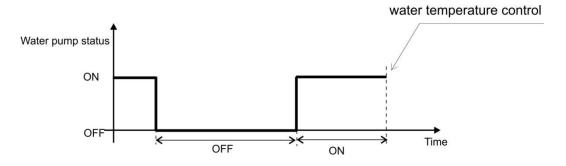


| Parameters | Description | | max | unit of |
|------------|--|---|-----|---------|
| | | | | measure |
| CO 85 | Evaporator water pump OFF time if the set point is reached | 0 | 250 | 10 min |
| CO 86 | Evaporator water pump OFF time if the machine is STD-BY or OFF | 0 | 250 | 10 hour |
| CO 87 | Evaporator water pump ON time | 0 | 250 | 10 Sec |
| CO 88 | Condenser water pump OFF time if the set point is reached | 0 | 250 | 10 min |
| CO 89 | Condenser water pump OFF time if the machine is STD-BY or OFF | 0 | 250 | 10 hour |
| CO 90 | Condenser water pump ON time | 0 | 250 | 10 Sec |

30. HOT START

In the air air unit and in heating mode it is possible to stop the supply fan when the outlet evaporator temperature falls below FA24 degrees.

FA24 Hot start Setpoint FA25 Hot start differential

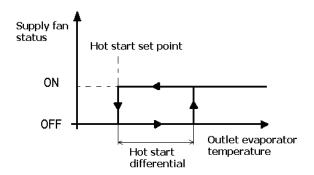

31. LOAD MAINTENANCE

It is possible to define for each load (compressors and water pumps) the number of working hours after witch the display will show a maintenance warning.

Parameters CO26..CO29: number of working hour of the compressors

Parameters **CO32..CO33**: number of working hour of the evaporator water pump Parameters **CO34..CO35**: number of working hour of the condenser water pump

Parameters **CO73:** number of working hour of the domestic water pump Parameters **CO74:** number of working hour of the solar panel water pump Parameters **CO95:** number of working hour of the free cooling water pump

If the parameter is set to 0, the maintenance signalling is disabled but the running hours counter remains active.

32. CONDENSER FAN REGULATION

The signal to drive the modulating condenser fan is available in the Out 1...Out 4analog outputs:

- OUT 1 and OUT 2 are 0..10V
- OUT 3 and OUT 4 are 0..10V or PWM selectable by parameter CF49

FA01 and FA02 parameters define the operative mode of the condenser fans.

Par. FA01 Fan regulation

0 = Output not enabled

1 = Always on

2 = ON/OFF step regulation

3 = ON/OFF continuous step regulation

4 = proportional fan speed

Par. FA02 Condenser fan operation mode

0 = Fan on only if compressor on

1 = Independent from the compressor and off during the stand-by / or from remote OFF

Example:

Par. **FA01** = **1** / Par. **FA02** = **0**

Fans on when the compressor on (the fans work following the same output algorithm)

Par. FA01 = 1 / Par. FA02 = 1

Independent from the compressor status but off in stand-by.

Par. **FA01** = **2** / Par. **FA02** = **0**

Fans on, with ON/OFF regulation and with temperature/pressure transducer control, only when the compressor is on (at least one relay is configured as fan control). When the compressor turns off also the fans are forced off.

Par. FA01 = 2 / Par. FA02 = 1

Fans on, with ON/OFF regulation and with temperature/pressure transducer control, only when the compressor is on (at least one relay is configured as fan control). When the compressor turns off the fans are thermoregulated depending on the condensing temperature/pressure.

Par. FA01 = 3 / Par. FA02 = 0

Fans on, with ON/OFF continuos regulation and with temperature/pressure transducer control, only when the compressor is on (at least one relay is configured as fan control). When the compressor turns off also the fans are forced off.

Par. FA01 = 3 / Par. FA02 = 1

Fans on, with ON/OFF continuos regulation and with temperature/pressure transducer control, only when the compressor is on (at least one relay is configured as fan control). When the compressor turns off the fans are thermoregulated depending on the condensing temperature/pressure.

Par. **FA01** = **4** / Par. **FA02** = **0**

Fans on, with proportional regulation (PWM, 4..20mA, 0.10V) and with temperature/pressure transducer control, only when the compressor is on. When the compressor turns off also the fans are forced off.

Par. FA01 = 4 / Par. FA02 = 2

Fans on in proportional regulation (PWM, 4..20mA or 0..10V) according to condenser temperature/pressure (only when the compressor is on).

When the compressor turns off the fans are thermoregulated depending on the condensing temperature/pressure.

32.1 OUTPUT STEP RELE' CONDENSER FAN

Par FA01 = 2 ON/OFF step regulation

E.G.: 1 circuit and 4 step of ventilation

| OUT relè | step n° 1 | step n° 2 | step n° 3 | step n° 4 |
|--------------------|-----------|-----------|-----------|-----------|
| Out relè step n° 1 | ON | OFF | OFF | OFF |
| Out relè step n° 2 | OFF | ON | OFF | OFF |
| Out relè step n° 3 | OFF | OFF | ON | OFF |
| Out relè step n° 4 | OFF | OFF | OFF | ON |

Par FA01 = 3 ON/OFF continuous step regulation

E.G.: 1 circuit and 4 step of ventilation

Continuous step regulation

| OUT relè | Gradino nº 1 | Gradino n° 2 | Gradino n° 3 | Gradino n° 4 |
|--------------------|--------------|--------------|--------------|--------------|
| Out relè step n° 1 | ON | ON | ON | ON |
| Out relè step n° 2 | OFF | ON | ON | ON |
| Out relè step n° 3 | OFF | OFF | ON | ON |
| Out relè step n° 4 | OFF | OFF | OFF | ON |

32.2 PWM OUTPUT FOR FAN CONTROL

When the condenser fan is switched on it works at maximum speed for FA03 time, then it modulate according to condenser pressure/temperature or evaporator pressure (heat pump mode).

FA04 parameter allows to adapt the signal to the motor (current-voltage phase displacement of a line-powered ac load).

If FA01=3, when the compressor starts-up and the proportional regulation requires to turn off the fan (cut-off), if FA14>0 the fan is forced at the minimum speed for the time set in FA14 itself (if FA14=0 the function is disabled).

32.3 CONDENSING UNIT: COMMON OR SEPARATE CONDENSER

FA05 defines the condenser unit

Par. FA05 type of condenser

FA05=0 Common condenser unit (only one common fan but a probe for each condenser is needed)


FA05=1 Separate condenser units (one fan and one probe for circuit are needed)

If FA05= 0 the condenser fan of the circuit 1 and circuit 2 works in parallel:


- CHILLER mode: the regulation probe is the probe that has the higher value
- **HEAT PUMP mode:** the regulation probe is the probe that has the lower value

32.4 PROPORTIONAL REGULATION OF CONDENSER FANS

Condenser fan in Chiller mode.

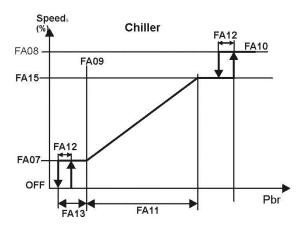



Condenser fan in Heat pump mode.

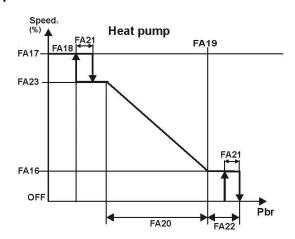


32.5 ON/OFF REGULATION OF CONDENSER FANS


Condenser fan in Chiller mode.

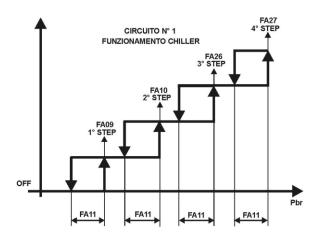

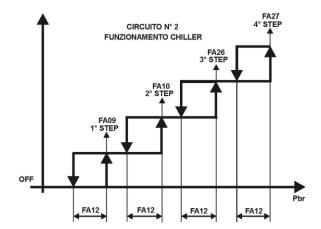

Condenser fan in Heat pump mode.

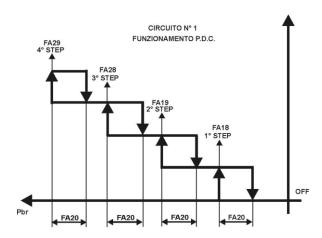

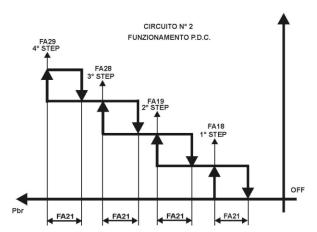

32.6 PRE-VENTILATION AND POST-VENTILATION

Pre-ventilation:

in chiller and heat pump mode when first compressor is swtiched on if FA06>0 and/or FA30>0 the fan runs at maximum speed for FA06 and/or FA30.

Post-ventilation:


in heat pump mode if FA31>0 and outside temperature > FA32, when last compressor is switched off the condenser fan (if on at that moment) is forced at FA33 speed for FA31 seconds (outside temperature probe is required).

32.7 CONDENSER FAN IN DEFROST

During defrost the condenser fan regulate as shown below.

The basic adjustment is that of the operation in chiller, with the following differences:

- the threshold temperature / pressure for enabling the fan is determined by parameter dF18
- Once the fan is started, the modulation occurs between the pressure values FA09 and FA09 FA11 +
- speed at the end of modulation is determined by the parameter FA34
- \bullet in case of increasing temperature / pressure to a value higher than FA35, fans are forced to maximum speed of FA08

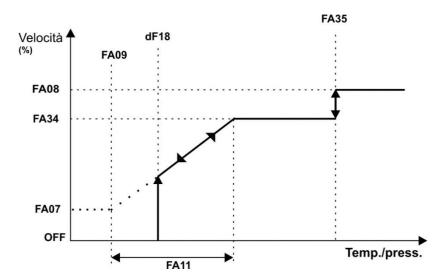

33. ANTI FREEZE HEATERS, INTEGRATION HEATING OR BOILER

33.1 REGULATION OF THE HEATERS IN CHILLER

Par. Ar06 selects the probe/s control for the anti-freeze relay outputs configured as anti-freeze / support / boiler heaters for the circuits 1 and 2 in chiller mode.

Par. Ar06 = 0: the function is disabled

Par. **Ar06 = 1**: function enabled; the regulation probe is evaporator water inlet.

Par. **Ar06 = 2**: function enabled; the regulation probe are evaporator water outlet circuit 1 and evaporator water outlet circuit 2.

ATTENTION: It is not possible to control the heaters of the circuit #1 with the probe of the circuit #2 and viceversa.

Par. **Ar06 = 3**: function enabled; the regulation probe are evaporator water outlet circuit 1, evaporator water outlet circuit 2 or evaporator common probe.

Par. Ar06 = 4: function enabled; the regulation probe is outside temperature.

33.2 REGULATION OF THE HEATERS IN HEAT PUMP

The **Par. Ar07** selects the probe/s control for the anti-freeze alarm and the relay outputs configured as anti-freeze / support / boiler heaters for the circuits 1 and 2 in heat pump mode.

Par. Ar07 = 0: the function is disabled

Par. Ar07 = 1: function enabled; the regulation probe is evaporator water inlet.

Par. **Ar07 = 2**: function enabled; the regulation probe are evaporator water outlet circuit 1 and evaporator water outlet circuit 2.

ATTENTION: It is not possible to control the heaters of the circuit #1 with the probe of the circuit #2 and viceversa.

Par. **Ar07 = 3:** function enabled; the regulation probe are evaporator water outlet circuit 1, evaporator water outlet circuit 2 or evaporator common probe.

Par. Ar07 = 4: function enabled; the regulation probe is outside temperature.

33.3 ANTI-FREEZE HEATERS, INTEGRATION HEATING, BOILER HEATERS DURING THE DEFROST CYCLE

The Ar05 parameter allows to choose the operation mode of the heaters during the defrost:

Par. **Ar05 = 0:** The heaters are activated according the regulation request.

Par. **Ar05 = 1:** The heaters are activated only by the regulation request and are always on during the defrost. The heaters are switched on when the 4-way valve change from heat-pump to chiller and switched off only after the dripping time and the compressors restart.

33.4 CONDENSER ANTI-FREEZE HEATERS REGULATION

The parameter Ar08 allows to select the heaters probe control in chiller and heat pump mode.

Par. Ar08 = 0: the function is disabled.

Par. Ar08 = 1: function enabled; the regulation probe is condenser water inlet.

Par. **Ar08 = 2:** function enabled; the regulation probe are condenser water inlet circuit 1, condenser water inlet circuit 2 and condenser water common inlet.

ATTENTION: It is not possible to control the heaters of the circuit #1 with the probe of the circuit #2 and viceversa.


Par. Ar08 = 3: function enabled; the regulation probe are evaporator water outlet circuit 1, evaporator water outlet circuit 2

Par. **Ar08 = 4**: function enabled; the regulation probe are evaporator water outlet circuit 1, evaporator water outlet circuit 2 and condenser common outlet.

ATTENTION

When the outputs are configured as heaters circuit #1 and 2 they are both controlled by the NTC probe of the common condenser outlet.

33.5 GRAPH OF THE ANTI-FREEZE- INTEGRATION HEATING - BOILER HEATER RELAYS

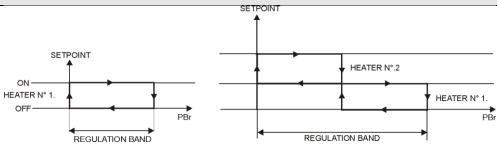

33.6 BOILER FUNCTION

The function is enabled when:

- One probe is configured as outside temperature.
- Parameter Ar11 > 0.

Ar11=1 Boiler in integration mode

When outside temperature decreases under the Ar12 setpoint, the Ar14 delay starts counting. If during the Ar14 counting the external air increases above the Ar12 + Ar13 (differential) the function is aborted and the Ar14 time is reloaded.

When the time Ar14 is elapsed and the external air temperature is still under the Ar12 setpoint, if the water temperature detected by the evaporator probe is lower than Ar15 in chiller mode or Ar17 in heat pump mode, the heaters are turned on.

When the temperature rises over Ar15 + Ar16 in chiller mode or Ar17+Ar18 in heat pump the heaters are turned off.

If the heaters are on, when the outside temperature increases over Ar12 + Ar13, they are turned off and the Ar14 delay is reloaded.

Attention

If outside temperature falls blow Ar19 setpoint, the compressors are switched off; they can restart if the outside temperature increase over Ar19+Ar20.

Heating control Ar11=2

When outside temperature decreases under the Ar12 setpoint, the Ar14 delay starts counting. If during this delay the outside temperature increase over the Ar12+Ar13 the process is aborted and the time Ar14 reloaded.

When the time Ar14 is elapsed and the external air temperature is still under the Ar12 setpoint, if the water temperature detected by the evaporator probe is lower than Ar15 in chiller mode or Ar17 in heat pump mode, the heaters are turned on and the compressor(s) and the condensing fan(s) are turned off. The heating is made only by the heaters.

When outside temperature increase over Ar15+Ar16 or Ar15 + Ar17 the heaters are turned off. If the outside temperature increase over Ar12 +Ar13, the heaters are turned off, the compressor regulation restarts, the Ar14 delay is reloaded.

BOILER HEATERS DURING the DEFROST CYCLE

The Ar05 parameters defines the tatus of the heaters during the defrost:

Ar05=0 Heaters activated according the regulation

Ar05=1 The heaters are switched on when the 4-way valve changes the status from heat pump to chiller and switched off after the dripping time at the end of the defrost.

ATTENTION

The heaters of the boiler are always off in case of:

- flow switch alarm
- water pump overload alarm

34. ENERGY SAVING

34.1 ENERGY SAVING ACTIVATION BY DIGITAL INPUT

The energy saving is activated when one digital input is configured as energy saving is active. If the energy saving is active, the Vset icon is on.

The real value of the set point is showed pressing the set wev.

When the Energy Saving function is activated the chiller set point and heat pump are modified as follow:

- Set point chiller = St1 ± ES14
- Chiller differential = ES15
- Set point heat pump = St4 ± ES16
- Heat pump differential = ES17

34.2 ENERGY SAVING TIME TABLE WITH RTC

This function can be used only if the Ichill has the real time clock on board (optional) and allows to set three events per day.

If the energy saving is active, the energy saving is active, the

The real value of the set point is showed pressing the SET key.

When the Energy Saving function is activated the chiller set point and heat pump are modified as follow:

- Set point chiller = St1 ± ES14
- Chiller differential = ES15
- Set point heat pump = St4 ± ES16
- Heat pump differential = ES17

34.2.1 How to program the Energy saving and how to Switch on / Switch off the Ichill by RTC

Enter the parameter programming:

- 1. Select the ES parameter family.
- Select the parameters ES07 (Monday)...ES13 (Sunday).



Configuration table Energy saving or unit ON/OFF activation with rtc programming

| | 0= Function disabled 1= 1 st period enabled 2= 2 nd period enabled 3= 1 st and 2 nd periods enabled 4= 3 rd period enabled |
|--|--|
| | 5= 1 st and 3 rd periods enabled 6= 2 nd and 3 rd periods enabled 7= 1 st , 2 nd and 3 rd periods enabled |
| Energy saving or unit ON/OFF with RTC and XY | where: X with range 07 represents the energy saving where: Y with range 07 represents the unit on/off |

Example of a daily programming:


Monday

Enter parameter programming:

- 1. In the ES parameter family, select the parameter ES07, the top display shows 0 0
- 2. Push SET key and using UP or DOWN keys set the right value:
- 3. Push SET to confirm.


MONDAY

X = 0 - Y = 0: energy saving and automatic on/off are both disabled

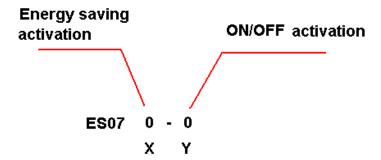


MONDAY

X = 0 - Y = 1: the energy saving is disabled, the automatic on is enabled in time band 1

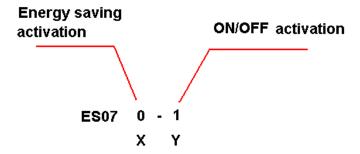

MONDAY

X = 3 - Y = 7: the energy saving is enabled in time band 1 and time band 2, the automatic on is enabled in time band 1, time band 2 and time band 3.

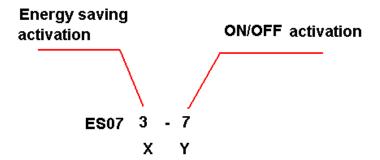

WEEKLY PROGRAMMING

Repeat the daily programming for the other days of the week using parameters ES08..ES13.

34.2.2 How to switch on the controller when it is off by real time clock

When the unit is in OFF by RTC and the parameter ES18 > 0, if the user switch on the controller by keyboard the unit stay on for ES18 time; when this time is elapsed the unit return to OFF.


35. DYNAMIC SETPOINT

This function allows to modify the set point according to outside temperature or a 4..20mA analog input. This function is enabled if:


- In chiller mode the parameter Sd01 is not equal to 0.
- In heat pump mode the parameter Sd02 is not equal to 0.
- A analog input is configured as 4÷20mA for dynamic setpoint control or outside temperature

35.1 DYNAMIC SETPOINT DIAGRAM


Analog input configured as 4..20mA for dynamic setpoint:

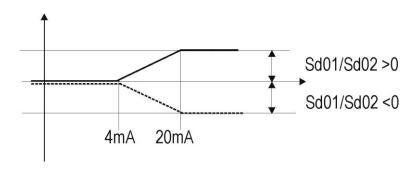

Analog input configured as outside temperature and positive differential:

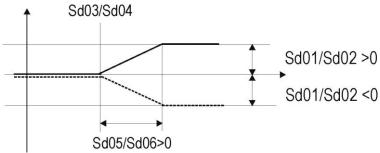

Analog input configured as outside temperature and negative differential:

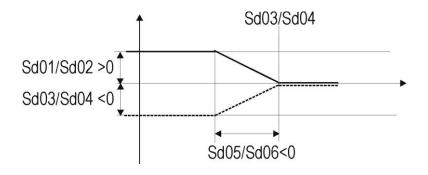

36. AUXILIARY RELAYS

Par. uS01 configuration auxiliary relay 1


Par. uS05 configuration auxiliary relay 2

0 = Not enabled


- 1 = Function enabled, direct action, also if the Ichill is in stand-by or remote off.
- 2 = Function enabled, direct action, only if the Ichill is on in chiller or heat pump (not in stand-by or remote off)
- 3 = Function enabled, inverse action, also if the Ichill is in stand-by or remote off
- 4 = Function enabled, inverse action, only if the Ichill is on in chiller or heat pump (not in stand-by or remote off).

To configure the regulation of the auxiliary relay, please refer to uS parameters.

36.1 AUXILIARY RELAY WITH DIRECT ACTION

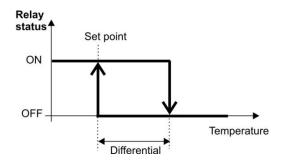

36.2 AUXILIARY RELAY WITH INVERSE ACTION

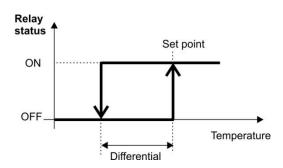

| 110.4 | Auditor ada a continuada | 1 | 1 | | |
|--------|--|-------|-------------|------------|------------|
| US 1 | Auxiliary relay 1 operating mode | | | | |
| | 0= Not enabled 1= Always available with direct action | | | | |
| | 2= Available only when the unit is on with direct action | 0 | 4 | | |
| | 3= Always available with reverse action | | | | |
| | 4= Available only when the unit is on with reverse action | | | | |
| US 2 | Analog input configuration for auxiliary relay 1 control. Allows to select which probe value | | 40 | | |
| | Pb1Pb10 controls the relay | 1 | 10 | | |
| US 3 | | -30.0 | | °C | Dec |
| | | -22 | US5 | °F | int |
| | | 0.0 | 000 | Bar | Dec |
| | Auxiliary relay 1 summer minimum set point | 0 | | Psi | int |
| US 4 | | | 70.0 | °C | Dec |
| | | US5 | 158 | °F | int |
| | Auvilianu ralau 4 aummar mavimum aat naint | | 50.0 725 | Bar Psi | Dec int |
| US 5 | Auxiliary relay 1 summer maximum set point | | 725 | °C | Dec |
| 03 3 | | | | °F | int |
| | | US3 | US4 | Bar | Dec |
| | Auxiliary relay 1 summer set point | | | Psi | int |
| US 6 | , | -30.0 | | °C | Dec |
| | | -22 | 1100 | °F | int |
| | | 0.0 | US8 | Bar | Dec |
| | Auxiliary relay 1 winter minimum set point | 0 | | Psi | int |
| US 7 | | | 70.0 | °C | Dec |
| | | US8 | 158 | °F | int |
| | | 030 | 50.0 | Bar | Dec |
| | Auxiliary relay 1 winter maximum set point | | 725 | Psi | int |
| US 8 | | | | °C | Dec |
| | | US6 | US7 | °F | int |
| | Auxiliary relay 1 winter set point | | | Bar | Dec |
| US 9 | Auxiliary relay 1 winter set point | 0.1 | 25.0 | Psi °C | int Dec |
| 03 9 | | 0.1 | 25.0 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 1 summer differential | 1 | 203 | Psi | int |
| US 10 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 1 winter differential | 1 | 203 | Psi | int |
| US 11 | Auxiliary relay 2 operating mode | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | 0 | 4 | | |
| | 2= Available only when the unit is on with direct action | | - | | |
| | 3= Always available with reverse action | | | | |
| 116 12 | 4= Available only when the unit is on with reverse action | 1 | | | |
| US 12 | Analogue input configuration for auxiliary relay 2 control . Allows to select which probe value Pb1Pb10 controls the relay | 1 | 10 | | |
| US 13 | value 1 D1 D10 contitois the relay | -30.0 | | °C | Dec |
| 00 13 | | -30.0 | | °F | int |
| | | 0.0 | US15 | Bar | Dec |
| | Auxiliary relay 2 summer minimum set point | 0 | | Psi | int |
| US 14 | | | 70.0 | °C | Dec |
| | | LICAE | 158 | °F | int |
| | | US15 | 50.0 | Bar | Dec |
| | Auxiliary relay 2 summer maximum set point | | 725 | Psi | int |
| US 15 | | | | °C | Dec |
| | | US13 | US14 | °F | int |
| | | | 5517 | Bar | Dec |
| | Auxiliary relay 2 summer set point | | | Psi | int |
| US 16 | | -30.0 | | °C | Dec |
| | | -22 | US18 | °F | int |
| | Applicant relation 2 minimum and point | 0.0 | | Bar | Dec |
| | Auxiliary relay 2 winter minimum set point | 0 | | Psi | int |

| US 17 | | | 70.0 158 | °C °F | Dec int |
|-------|--|------|-------------|----------|------------|
| | | US18 | 50.0 | Bar | Dec |
| | Auxiliary relay 2 winter maximum set point | | 725 | Psi | int |
| US 18 | | | | °C | Dec |
| | | US16 | US17 | °F | int |
| | | 0516 | 0517 | Bar | Dec |
| | Auxiliary relay 2 winter set point | | | Psi | int |
| US 19 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 2 summer differential | 1 | 203 | Psi | int |
| US 20 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 2 winter differential | 1 | 203 | Psi | int |
| US 21 | Maximum operating time of auxiliary realys | 0 | 250 | min | |
| | | | | | |
| US 61 | AUX 1 relay operation mode | | | | |
| | 1= only in Chiller | 1 | 3 | | |
| | 2= only in Heat pump | į. | 3 | | |
| | 3= in Chiller and Heat pump | | | | |
| US 62 | AUX 2 relay operation mode | | | | |
| | 1= only in Chiller | 1 | 3 | | |
| | 2= only in Heat pump | ' | 3 | | |
| | 3= in Chiller and Heat pump | | | | |

37. AUXILIARY PROPORTIONAL OUTPUTS

The outputs OUT 3 .. OUT 6 can be configured as proportional output.

Each output is managed with a dedicated temperature or pressure probe; the parameters involved in the probe selection are uS23 for the output 1 and uS35 for the output 2.

The function is enabled when the parameter uS22>0 for the output 1 and the parameter uS34>0 for the output 2 and at least one output is configured as auxiliary output.

Par. uS22 configuration auxiliary output 1

Par. uS34 configuration auxiliary output 2


Value and function

0 = Not enabled


- 1 = Function enabled, direct action, enabled also in stand-by and remote off
- 2 = Function enabled, direct action, enabled only if the Ichill is working in chiller or heat pump
- 3 = Function enabled, inverse action, enabled also in stand-by and remote off
- 4 = Function enabled, inverse action, enabled only if the Ichill is working in chiller or heat pump

37.1 AUXILIARY PROPORTIONAL OUTPUT: DIRECT ACTION

US46=0

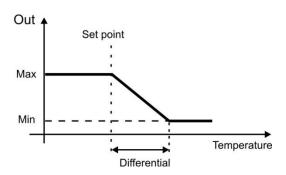


US46=1

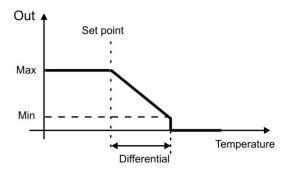


37.2 AUXILIARY PROPORTIONAL OUTPUT: INVERSE ACTION

US46=0

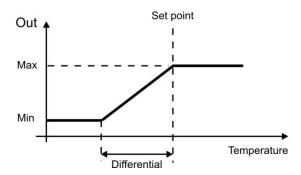

US46=1

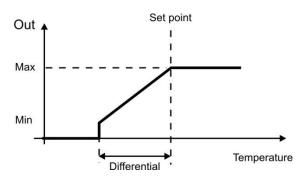

| US 22 | Auxiliary proportional output n° 1 operating mode 0= Not enabled 1= Always available with direct action 2= Available only when the unit is on with direct action 3= Always available with reverse action 4= Available only when the unit is on with reverse action | 0 | 4 | | |
|-------|--|--------------------------|------|------------------------|--------------------------|
| US 23 | Analogue input configuration for auxiliary control 1 Allows to select which probe value Pb1Pb10 controls output | 1 | 10 | | |
| US 24 | Analog output 1 summer minimum set point | -30.0 -22 0.0 0 | US26 | °C °F Bar Psi | Dec int Dec int |

| US 25 | | | 70.0 | °C | Dec |
|--------|--|--------|-------------|------------|------------|
| 00 23 | | | 158 | °F | int |
| | | US26 | 50.0 | Bar | Dec |
| | Analog output 1 summer maximum set point | | 725 | Psi | int |
| US 26 | | | | °C | Dec |
| | | 11004 | 11005 | °F | int |
| | | US24 | US25 | Bar | Dec |
| | Analog output 1 summer set point | | | Psi | int |
| US 27 | | -30.0 | | °C | Dec |
| | | -22 | US29 | °F | int |
| | | 0.0 | 0023 | Bar | Dec |
| 110.00 | Analog output 1 winter minimum set point | 0 | | Psi | int |
| US 28 | | | 70.0 | °C | Dec |
| | | US29 | 158 | °F | int |
| | Andrew system (Australian managing constraint) | | 50.0 | Bar | Dec |
| 110 00 | Analog output 1 winter maximum set point | | 725 | Psi °C | int |
| US 29 | | | | °F | Dec |
| | | US27 | US28 | | int Dec |
| | Analog output 1 winter get neint | | | Bar Psi | int |
| US 30 | Analog output 1 winter set point | 0.0 | 25.0 | °C | Dec |
| 03 30 | | 0.0 | 45 | °F | int |
| | | 0.0 | 14.0 | Bar | Dec |
| | Analog output 1 summer differential | 0.0 | 203 | Psi | int |
| US 31 | 7 thatog output 1 outrinor amororida | 0.0 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.0 | 14.0 | Bar | Dec |
| | Analog output 1 winter differential | 0 | 203 | Psi | int |
| US 32 | Analog output 1 minimum value | 0 | US33 | % | |
| US 33 | Analog output 1 maximum value | US32 | 100 | % | |
| US 34 | Auxiliary proportional output n° 2 operating mode | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | 0 | 4 | | |
| | 2= Available only when the unit is on with direct action | | - | | |
| | 3= Always available with reverse action | | | | |
| | 4= Available only when the unit is on with reverse action | | | | |
| US 35 | Analogue input configuration for auxiliary 2 control | 1 | 10 | | |
| 110.00 | Allows to select which probe value Pb1Pb10 controls output | | | 00 | |
| US 36 | | -30.0 | | °C °F | Dec |
| | | -22 | US38 | | int |
| | Analog output 2 aummor minimum act point | 0.0 | | Bar Psi | Dec int |
| US 37 | Analog output 2 summer minimum set point | 0 | 70.0 | °C | Dec |
| 03 37 | | | 158 | °F | int |
| | | US38 | 50.0 | Bar | Dec |
| | Analog output 2 summer maximum set point | | 725 | Psi | int |
| US 38 | | | | °C | Dec |
| | | 1,1000 | | °F | int |
| | | US36 | US37 | Bar | Dec |
| | Analog output 2 summer set point | | | Psi | int |
| US 39 | | -30.0 | | °C | Dec |
| | | -22 | US41 | °F | int |
| | | 0.0 | 0041 | Bar | Dec |
| | Analog output 2 winter minimum set point | 0 | | Psi | int |
| US 40 | | | 70.0 | °C | Dec |
| | | US41 | 158 | °F | int |
| | | | 50.0 | Bar | Dec |
| 110 44 | Analog output 2 winter maximum set point | | 725 | Psi | int |
| US 41 | | | | ŝ | Dec |
| | | US39 | US40 | °F | int |
| | Analog output 2 winter set seint | | | Bar | Dec |
| 110.40 | Analog output 2 winter set point | 0.0 | 25.0 | Psi | int |
| US 42 | | 0.0 | 25.0 | °C | Dec |
| | | 0 | 45 | °F Bor | int |
| | Analog output 2 summer differential | 0.0 | 14.0 203 | Bar | Dec |
| İ | Analog output 2 summer unretential | 0 | 203 | Psi | int |

| US 43 | | 0.0 | 25.0 | °C | Dec |
|-------|--|------|------|-----|-----|
| | | 0 | 45 | °F | int |
| | | 0.0 | 14.0 | Bar | Dec |
| | Analog output 2 winter differential | 0 | 203 | Psi | int |
| US 44 | Analog output 2 minimum value | 0 | US45 | % | |
| US 45 | Analog output 2 maximum value | US44 | 100 | % | |
| US 46 | Operation mode under minimum value | 0 | 1 | | |
| | | | | | |
| US 63 | AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | 1 | 3 | | |
| US 64 | AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | 1 | 3 | | |

38. PROBE SELECTION FOR REGULATION WITH SELECTABLE PROBE

For some regulators it is possible to select the reference probe; in this case select the probe as showed below:

- 1= Pb1 of Ichill
- 2= Pb2 of Ichill
- 3= Pb3 of Ichill
- 4= Pb4 of Ichill
- 5= Pb5 of Ichill
- 6= Pb6 of Ichill
- 7= probe mounted in remote keyboard 1 (VICX620)
- 8= probe mounted in remote keyboard 2 (VICX620)
- 9= Pb1 of I/O expansion module (ICX207D)
- 10= Pb2 of I/O expansion module (ICX207D)
- 11= Pb3 of I/O expansion module I/O (ICX207D)
- 12= Pb4 of I/O expansion module (ICX207D)
- 13= Pb5 of I/O expansion module (ICX207D)
- 14= Pb6 of I/O expansion module (ICX207D)
- 15= Pb7 of I/O expansion module (ICX207D)
- 16= Pb8 of I/O expansion module (ICX207D) 17= Pb1 of electronic expansion valve 1 (IEV)
- 18= Pb2 of electronic expansion valve 1 (IEV)
- 19= Pb3 of electronic expansion valve 1 (IEV)
- 20= Pb4 of electronic expansion valve 1 (IEV)

39. DEFROST CYCLE

The following condition are mandatory to enable the defrost:

- The Ichill has to be configured as Heat pump unit
- DF01>0 (defrost enabled)

dF01 Defrost configuration:

- 0= Not enabled
- 1= Start and stop for temperature / pressure
- 2= Start depends on probe selected by par. dF24 and stop for time duration (dF05)
- 3= Start depends on probe selected by par. dF24 and stop for external contact
- 4= Defrost only with condenser fan
- 5= Start from digital input and stop on probe selected by par. dF24

39.1 AUTOMATIC DEFROST PROCEDURE

Phase 1

When the condenser temperature/pressure or evaporating pressure falls below dF02 and at least one compressor is ON, the delay between two defrost dF09 starts counting.

The display of the keyboard shows the symbol w blinkking.

dF09 counter is reloaded in case of power down, after a defrost cycle, when the Ichill change the operation mode (from heat pump to chiller) or when the Ichill is in STD-BY or remote OFF.

dF09 counter is stopped if the last compressor of the circuit is turned off or if the pressure-temperature of the condensing-evaporating probe increase over dF02.

Phase 2

When dF09 counter is elapsed the defrost procedure starts.

If one digital input is configured as "end defrost" is active, the unit waits until the contact is de-activated. If one probe is configured as combined defrost:

- If the combined defrost probe of the 1st circuit is lower than dF10 and/or the combined defrost probe of the circuit 2 is lower than dF12, the process proceeds to phase 3.
- If the combined defrost probe of the 1st circuit is higher than dF10 and/or the combined defrost probe of the circuit 2 is higher than dF12, the process doesn't proceed to phase 3

Phase 3

If dF07=0 the reversiong valve is activated without stopping any commpressor and the defrost cycle is immediately activated.

If df07>0:

- 1. Compressors are turned off
- 2. After dF07 / 2 the reversing valve is activated;
- 3. After dF07 / 2 the compressor is activated; if dF14=1 and / or dF15=1 all the compressor are activated (with a delay of dF16).

Phase 4

Defrost ON

Condenser fan management:

- If dF17=0: condenser fan are always off;
- If dF17=1: condenser fans start if the condensing temperature-pressure value is higher than dF18 and the regulation is the standard chiller regulation.

ATTENTION

The condenser fan is controlled by the condensing probe even if the evaporator probe is present and configured.

The phase 4 lasts at least dF04 time; phase 4 ends:

- 1. If dF01=1:
 - the combined probe is higher than dF11 of the 1st circuit;
 - the combined probe is higher than dF13 of the 2nd circuit;
 - when the condensing temperature/pressure is higher than dF03
- 2. If dF401=2: when dF05 counter is elapsed
- 3. If dF01=3: when the digital input configured as end defrost is deactivated

PHASE 5

If dF08 = 0 the reversing valve is switched without stopping the compressors and the defrost ends. If dF08 > 0:

- 1. All the compressors are switched off
- 2. After dF08 / 2 reversing valve is de-activated
- 3. After dF08 / 2 the heat pump regulation can restart

39.2 END OF DEFROST FOR MAXIMUM TIME

If the defrost ends for maximum time and not for achievement of the conditions of end defrost, a specific alarm is signalled (b1dF or b2dF appears on the display).

AL88 parameter sets the maximum number of alarms:

- if the number of alarms is lower than AL88, the alarm reset is automatic and does not affect the normal regulation
- if the number of alarms reaches AL88, the alarm reset is manual and the affected circuit is locked

39.3 OTHER INFORMATION ABOUT THE DEFROST

If the unit is configured with one condenser FA05=0, the defrost of the two circuits starts at the same time. **ATTENTION**

Before starting the 3rd phase, the dF06 counting, time delay between two circuits defrost, must be expired. If the defrost ends because of the dF05 counting (Maximum defrost time) and the dF02 configuration or with the end defrost contact, the bottom display will show, alternated with the normal measurement value, the label **b1dF** (circuit #1) or **b2dF** (circuit #2) labels to indicate the defrost end alarms.

39.4 FORCED DEFROST

The function is enabled if the parameter dF19>0. It allows to make a forced defrost cycle even if the dF09 timeout counting is not expired, when the condensing/evaporating temperature/pressure is lower than dF20 setpoint for the dF19 time counting.

If during the dF19 time counting the condensing/evaporating temperature/pressure rises above the value dF20+dF21 (set+differential) the function is disabled and the tF19 time is reloaded.

ATTENTION: the forced defrost is not related to the dF09 /dF06 delay times, therefore the forced defrost cycle, if condition are OK, is immediately executed.

39.5 COMBINED DEFROST

The function is enabled if one of the digital input is configured as NTC temperature for combined defrost of the 1st or 2nd circuit. This probe detects the external air temperature of the condenser (evaporator in heat pump) and its temperature value determines the start and the stop of the defrost cycle. Description:

The defrost count-down starts when the temperature/pressure of the probe, configured as condensing/evaporating circuit 1 or 2 probe, is lower than dF02 parameter.

After the dF09 counting the instruments checks the temperature probe value (configured as combined defrost circuit 1 or 2) and if it is lower than dF10 (temperature setpoint to start the defrost of the circuit 1) or dF12 (temperature setpoint to start the defrost of the circuit 2) the defrost cycle starts, otherwise the unit still runs in heat pump mode.

When the temperature decreases under the dF10 or dF12 values the defrost immediately start. The defrost ends when the NTC combined defrost probe 1 or 2 increases over dF11 (circuit1) or dF13 (circuit2).

39.6 MANUAL DEFROST

The manual defrost key function is enabled if the unit is on with at least one compressor running. The defrost start temperature/pressure of the controlled probe must be lower than dF02 setpoint value while if the combined defrost is active the detected temperature must be lower than dF10 or dF12. At this point by pushing *** key in the "Defrost status of the circuit" visualization, the defrost starts.

<u>ATTENTION:</u> the manual defrost is not related to the dF09 /dF06 delay times, therefore the forced defrost cycle, if condition are OK, is immediately executed for both circuits.

39.7 DEFROST IN UNIT WITH TWO CIRCUITS

39.7.1 Start defrost in unit with common condenser

Parameter involved: dF22

0= Independent

1= Only if both circuit conditions are satisfied

2= At least one circuit condition is satisfied

39.7.2 End defrost in unit with two condenser

Parameter involved: dF23

0= Independent

- 1= Both circuits have reached the conditions to stop the defrost
- 2= At least one circuit has reached the end defrost condition

Common condensation: possibile configuration

| Parametri | dF23=0 | dF23=1 | dF23=2 |
|-----------|---------------------|---------------------|---------------------|
| dF22=0 | not possible (ACF1) | not possible (ACF1) | not possible (ACF1) |
| dF22=1 | not possible (ACF1) | YES | YES |
| dF22=2 | not possible (ACF1) | YES | not possible (ACF1) |

Separate condensation: possibile configuration

| Parameter | dF23=0 | dF23=1 | dF23=2 |
|-----------|---------------------|---------------------|---------------------|
| dF22=0 | YES | not possible (ACF1) | not possible (ACF1) |
| dF22=1 | YES | YES | YES |
| dF22=2 | not possible (ACF1) | YES | not possible (ACF1) |

ATTENTION:

The configuration error ACF1 is displayed if the parameter value of dF22 and dF23 is not permitted. For only one condensing unit the dF22 and dF23 values must be not equal to 0.

39.8 DEFROST WITH CONDENSER FAN PROCEDURE

DEFROST WITH CONDENSER FANS

If dF01 = 4 defrost is activated only through the condenser fans.

If the temperature detected by the probe configured as external air temperature > dF26, instead of reverse the cycle, the compressor is stopped and is activated the condenser fan. The defrost ends:

- If the combined defrost is ON, for temperature or max time
- If only NTC probes are configured, for temperature or max time
- If only pressure probes are configured, for max time

ATTENTION:

also if the defrost through condenser fan is activated, if the external temperature < dF26, the defrost is through hot gas (compressor ON).

If dF17 = 2 during dripping time (dF08 if different from 0) the ventilation is forced for the time set on dF08 only if the temperature detected by the probe configured as external temperature is > of the Par. dF26 value. **ATTENTION:**

With defrost with only ventilation enabled the forced defrost is always with hot gas.

39.9 DEFROST PARAMETER DESCRIPTION

<u>ATTENTION IT IS NOT POSSIBLE TO DO MODIFY THE dF PARAMETERS WHEN THE DEROST CYCLE IS RUNNING.</u>

dF01 Defrost mode

0 = Defrost not enabled:

1 = Temperature/pressure defrost. The dF09 "Time delay to defrost" starts to decrease when the temperature/pressure decreases under the dF02 setpoint.

The defrost ends when pressure/temperature reaches the end defrost temperature/pressure.

2 = Time duration defrost. The dF09, time delay to the defrost, starts when the temperature decreases under the dF02 setpoint (see start probe par. dF24). The defrost cycle ends after dF05 minutes.

3 = Defrost starts when the temperature/pressure decreases under the dF02 setpoint (see start probe par. dF24) and stops when the digital input configured as "digital input to start defrost" is active. The delay dF09 "Time delay to defrost" starts when the temperature decreases under the dF02 set point. The Defrost cycle ends when the digital input is active.

4 = Defrost with condenser fan

5= Defrost starts if the digital input configured as "digital input to start defrost" is active and ends when pressure/temperature reaches the end defrost temperature/pressure.

dF02 Temperature / pressure to begin the time counting to next defrost.

It allows to program a setpoint under which the dF09 starts counting.

dF03 Temperature / pressure to end the defrost.

It allows to program a temperature/pressure setpoint value to determines the end of the defrost when the probe value is rising.

dF04 Minimum duration of the defrost

It determines the minimum defrost time duration after starting the defrost itself even if the conditions are not more satisfied.

dF05 Maximum duration of the defrost

If dF01=2, it determines the maximum duration of the defrost and even if, for the other cases, the end defrost condition are still to be satisfied.

dF06 defrost delay time between the 1st and the 2nd circuit.

After the interval dF09 determined by the defrost request of one of the circuits the other 2nd circuits must wait also the time dF06 before defrosting.

dF07 Compressor off time before the defrost (the led of the compressor is blinking)

After the dF09 delay and before activating the defrost, the compressors are stopped for the dF07 time. Exactly in the middle of the dF07 time the 4-way valve is activated to equalise the pressure of the unit and when dF07 is completely expired the compressors and the defrost can start.

This procedure does not respect the compressor on delay protection therefore the compressor is immediately turned off and then on. If dF07 = 0 the compressor is not stopped and the 4-way valve is immediately turned.

dF08 Compressor off time after the defrost (the led of the compressor is blinking)

After the defrost cycle the compressors are stopped for the dF08 time.

Exactly in the middle of the dF07 time the 4-way valve is activated to equalise the pressure of the unit and to drain the external exchange unit, when dF08 is completely expired the unit restart in heat pump mode.

This procedure does not respect the compressor on delay protection therefore the compressor is immediately turned off and then on. If dF08 = 0 the compressor is not stopped and the 4-way valve is immediately turned.

DF09 Delay time to next defrost

It starts when the condensing/evaporating temperature/pressure probe value is lower than dF02 setpoint. This time is reloaded if the power supply fails, after a defrost cycle or from a digital input request of defrost. The time counting is interrupted if the compressor is turned off or if the temperature/pressure is higher then dF02.

dF10 Temperature setpoint to start a combined defrost of the circuit #1.

It allows to set a temperature value to determines the beginning of a combined defrost.

After the dF09 counting the NTC probe of the combined defrost of the circuit #1 is compared to the dF10 setpoint, if the value is lower the defrost starts otherwise the unit runs in heat pump mode and when the temperature decreases under dF10 the defrost immediately starts.

dF11 Temperature setpoint to end a combined defrost of the circuit #1.

It allows to set a temperature value to determine the end of a combined defrost.

When the NTC probe of the combined defrost of the circuit #1 becomes higher than dF10 setpoint the defrost cycle stops.

dF12 Temperature setpoint to start a combined defrost of the circuit #2.

It allows to set a temperature value to determine the beginning of a combined defrost.

After the dF09 counting the NTC probe of the combined defrost of the circuit #2 is compared to the dF12 setpoint, if the value is lower the defrost starts otherwise the unit runs in heat pump mode and when the temperature decreases under dF12 the defrost immediately starts.

dF13 Temperature setpoint to end a combined defrost of the circuit #2.

It allows to set a temperature value to determine the end of a combined defrost.

When the NTC probe of the combined defrost of the circuit #2 becomes higher than dF13 setpoint the defrost cycle stops.

dF14 All the resources on during the defrost of the circuit #1

0= Not enabled

1= Enabled

dF15 All the resources on during the defrost of the circuit #2

0= Not enabled

1= Enabled

dF16 Compressor step delay time in defrost.

dF17 Condensing fan control during defrost and dripping cycle

0= Not enabled

1 = Enabled in defrost

2= Enabled in defrost and in dripping time

If dF17 = 0: During the defrost the fan control is not active.

If dF17 = 1: when the condensing temperature/pressure value increases over dF18 the fans are turned on. the fan control is determined by the same algorithm used in chiller mode.

If dF17 = 2: during the dripping time (dF08 <> 0) the fan are turned on for the time duration set in dF08.

dF18 Pressure / temperature setpoint to force the fans on during the defrost

When the temperature/pressure rises over this value the fan are turned on at the maximum speed.

dF19 Time delay before starting a forced defrost

It determines a delay time before starting the defrost cycle

dF20 Temperature / pressure setpoint to force a defrost

It determines a temperature/pressure setpoint under which the dF19 starts counting, when dF19 is expired if the temperature/pressure is still lower than dF20 the defrost is immediately executed.

ATTENTION If during the dF19 counting the temperature rises over df20+dF21(differential) the process is aborted and the dF19 time reloaded.

dF21 Forced defrost differential

dF22 defrost mode for unit with two circuits

Operative mode:

0= Independent

1= The condition are satisfied in both circuits

2= At least one circuit has reached the start condition

dF23 It determines the end of the defrost for unit having two circuit and common condensing ventilation Operative mode:

0= Independent

1= The end defrost condition are satisfied In both circuits

2= At least one circuit has reached the end defrost condition

dF24 Start / stop defrost probe

Start / stop defrost from analog input

0= start and stop with condenser temperatur / pressure probe

1= start with evaporator pressure probe / stop with condenser temperatur / pressure probe


2= start with condenser temperatur / pressure probe / stop with evaporator pressure probe

3= start and stop with evaporator pressure probe


39.10 DEFROST DYNAMIC SET POINT

It is possible to modify the start defrost set point according to outside temperature.

Offset set point if dF37>0

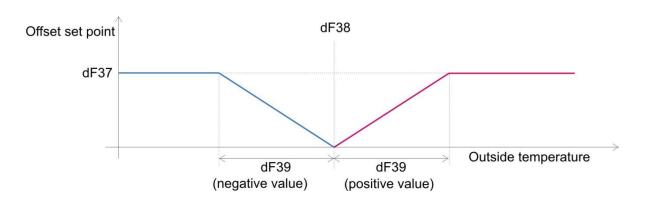

Offset set point if dF37<0

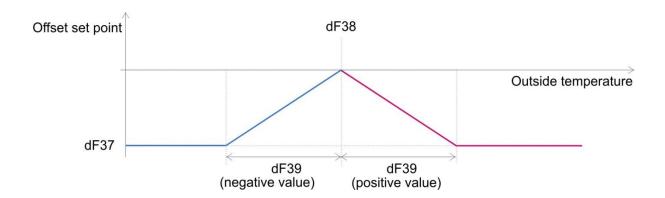

40. PRODUCTION OF DOMESTIC HOT WATER

The domestic hot water production is enabled when the machine is switched on and disabled if the machine is OFF or in STAND-BY.

The controller has to be configured to manage the heat pump (not only chiller).

The Ichill has to be configured for the proportional regulation (St11=0) and not in neutral zone.

In case of machine with valve 1 and valve 2 in gas circuit and cooling and domestic hot water active at the same time, the number of compressors to use is determined by CO78 parameter.

Two temperature probes need to be configured when the function is enabled:

- Probe 1: it is used to determine the temperature of the domestic hot water
- Probe 2: it can be used to stop the domestic hot water production for high temperature. As an alternative to Probe 2 it is possible ti choose another probe setting FS48 parameter.

Configurable proportional band and set-point are used to regulate the production of domestic hot water;

when the domestic hot water function is enabled, you will see 🐧 symbol lighted on the display.

The production of domestic hot water can only be requested when the temperature detected by Probe n°1 is below the FS03 set-point – band FS04; all the compressors are called into action when the function is enabled.


The domestic hot water set-point can be viewed and modified on the display by pressing the SET button. It is possible to set a minimum temperature under which the domestic hot water heaters are switched on (low temperature protection).


It is possible to use a second domestic hot water set point by time schedule (parameters ES19..ES33, internal clock is necessary) or by digital input (opportunely configured).

Inside the time band or when the digital input is active, to the set point is applied an offset determined by ES32 parameter and the new differential is ES33.

Compressors regulation:

- FS49=0 the compressors are switched on when domestic hot water temperature < FS03 (domestic hot water set point) FS04 (proportional band); all the compressors are switched on with a delay of CO03 seconds each other
- FS49=1 the proportional band is divided by the number of compressors; at every step (proportional band/number of compressors) a compressor will be switched on
- FS49=0 Example for machine with 3 compressors

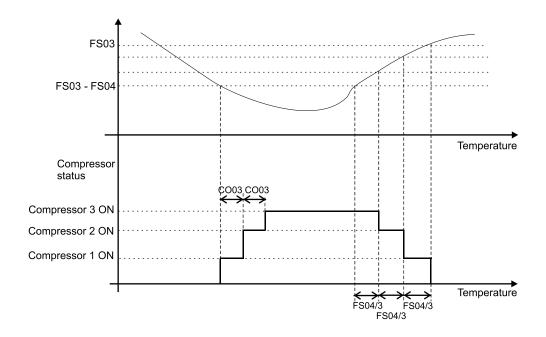

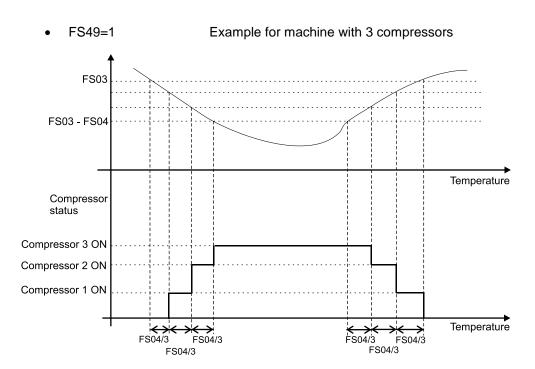

Domestic hot water heaters:

Domestic hot water is produced using mainly the compressors; the domestic hot water heaters are only used to produce domestic hot water if one or more compressors are not available for regulation (due to an alarm of a compressor, activation of the unloading function,..) or if the domestic hot water set-point is not reached within a configured timeframe (described in greater detail below).

The FS08 parameter allows you to determine if the domestic hot water heaters can be used when a compressor is not available.

When the domestic hot water heaters are activated, the regulation band is divided according to the number of compressors and domestic hot water heaters available (see figure below).

Max time for reaching the domestic hot water set-point

A counter determines the maximum time for reaching the domestic hot water set-point as from the moment the production of domestic hot water is requested; once this time has elapsed (parameter FS09) there are 2 options:

- If FS07=0, enable all the compressors (if not already enabled)
- If FS07=1, enable all the compressors and all the heating elements

After all the available steps (compressors and heaters) have been enabled, they remain activated until the domestic hot water set-point has been reached. At which point the heating elements are switched off immediately, while the compressors are switched off in order, with a CO03 delay between each one.

In the event of domestic hot water probe 1 faulty (the domestic hot water regulation probe), the domestic hot water function is stopped and disabled; the controller will regulate normally in chiller or heat pump mode. In the event of domestic hot water probe 2 faulty (not involved in the regulation), the alarm is signalled without affecting heat regulation in any way; domestic hot water will continue to be produced normally even if the display probe is not working properly.

If there is an error with the heat regulation probe (for the chiller or heat pump) during production of domestic hot water, the machine will continue to operate but the regulation of the chiller or heat pump is disabled and domestic hot water continues to be produced.

40.1 ANTI-LEGIONELLA FUNCTION

The FS12 parameter allows you to enable the anti-legionella function.

- FS12=0 intervals between two anti-legionella cycles; the process will have to be repeated after the FS13 time since the last anti-legionella production procedure was carried out. The counter continues to operate, regardless of whether the machine is on or off or in standby; if the power is OFF, the value of the counter is recorded and then continued when the machine is next started up.
- FS12=1 time-bands; Ichill with internal real time clock is required (you need to configure the day of activation FS18 and the start time FS17).
- FS12=2 daily time band (start time FS17 is needed)

To disable the function is necessary to configure FS12=0 and FS13=0 or FS12=1 and FS18=0 or FS12=2 and FS17=0:00.

The function is enabled when the machine is ON. If the request for an anti-legionella cycle is made when the machine is switched off, the cycle will start immediately when the machine is next switched on and the priority is given to anti-legionella cycle.

If instead heat regulation is prioritized, the anti-legionella cycle will run when the chiller/heat pump set-point is reached.

The function must remain active for the minimum time configured with parameter FS19 (activated when the temperature of the domestic hot water reaches the anti-legionella set-point) and can last a maximum of FS29 minutes

If FS02=0 the Anti-legionella cycle starts when cooling/heating set point is reached.

If the legionella cycle ends for maximum time and not to have achieved and maintained the set point for the time needed, ALEG alarm is generated (registered in the alarm log); the alarm has no effect on regulation and it is only a warning.

If the cycle ends because of alarms, defrost, OFF machine, etc., the alarm is generated and the legionella request is maintained (when the alarm is reset, the legionella cycle starts).

Compressors and domestic hot water heaters in Anti-legionella cycle

FS46=0 Compressors and heaters used at the same time in Anti-legionella cycle

When the anti-legionella cycle is active, all the compressors and heating elements configured for the domestic hot water are switched on; once the set-point (FS14) is reached, the compressors are switched off (delayed of CO04 time) while the heating elements are switched off when the set-point (FS14) + band (FS20) is reached.

The anti-legionella cycle is enabled for FS19 time; during this time the machine works to maintain the anti-legionella set point.

The Anti-legionella cycle lasts maximum FS29 minutes.

It is possible to switch off the compressors if the domestic hot water temperature reaches FS50 temperature. At the end of this procedure, the controller returns to the production of domestic hot water or normal heating/cooling regulation.

If the FS02 parameter (operating priority) gives priority to heating/cooling regulation and the production of anti-legionella needs to be enabled, then the heat regulation set-point has to be reached beforehand. The anti-legionella cycle has to end before heating/cooling regulation can start, even if the FS02 parameter gives the priority to heating/cooling regulation.

FS46=1 First compressors then heaters are used in Anti-legionella cycle

At first the compressors are switched on; when FS50 set point is reached, all the compressors are switched off and domestic hot water heaters are switched on to reach the Anti-legionella set point (FS14) + band (FS20).

Once reached, the instrument works to maintain the set point for FS19 time; if water temperature falls down below FS14 the heaters are switched on and if falls down below FS 50 compressors are switched on. The Anti-legionella cycle lasts maximum FS29 minutes.

FS46=2 Only heaters are used in Anti-legionella cycle

Only domestic hot water heaters are used in the Anti-legionella cycle (compressors off); when FS14 + FS20 temperature is reached the heaters are switched off.

Once reached the set point, the instrument works to maintain the set point for FS19 time; the Anti-legionella cycle lasts maximum FS29 minutes.

FS46=3 Only compressors are used in Anti-legionella cycle

Only compressors are used in the Anti-legionella cycle (heaters off); when FS14 + FS20 temperature is reached the compressors are switched off.

Once reached the set point, the instrument works to maintain the set point for FS19 time; the Anti-legionella cycle lasts maximum FS29 minutes.

Priority management (domestic hot water or heating/cooling)

If FS02 =0, priority is given to the production of chilled/hot water; domestic hot water is produced once the chiller/heat pump requests has been satisfied.

The production of anti-legionella is stopped in case of chiller/heat pump requests.

If FS02=1, priority is given to the production of domestic hot water (or anti-legionella). Chilled water or hot water can be produced once the need for domestic hot water has been satisfied (if required).

If FS02=2, if the digital input configured as "Domestic hot water priority" is active, the priority is given to the production of domestic hot water.

If defrosting is required, this takes priority over the production of domestic hot water or anti-legionella even if FS02=1.

40.2 WATER PUMPS MANAGEMENT

The domestic hot water pump is managed in domestic hot water regulation or during the anti-legionella cycle.

Evaporator water pump:

- if CO16=1 (evaporator water pump always on), also in domestic hot water regulation the water pump is ON. If the machine is forced to work only in domestic hot water (digital input "only domestic hot water" is active), the evaporator water pump is:
 - o OFF if FS47=1
 - o ON if FS47=0

• if CO16=2 (evaporator water pump on if at least a compressor is on), the parameter FS47 allows to choose if the water pup is on or off in case of domestic hot water production. If the machine has the domestic hot water valves placed in the gas circuit, in case of contemporary cooling and domestic hot water production, the evaporator water pump is on.

If only one water pump is needed for cooling, heating and domestic hot water, the evaporator water pump has to be configured.

The times for managing the domestic hot water pump are as follows:

- The valve 1 and valve 2 are switched with the delay of FS27 seconds from start-up of the domestic hot water pump
- The domestic hot water pump is switched off with the delay of FS28 seconds from switching valve 1 and valve 2

The domestic hot water flow switch is operated according to the times of the evaporator flow switch (parameter AL15, AL16, AL17 and AL18).

Management of the domestic hot water pump

The domestic hot water pump can be turned on continuously (also when the device is on cooling or heating regulation) or activated only during the production of hot water and during the cycle of legionella as described in the following paragraphs.

In the case in which the domestic hot water pump is turned on during the production of domestic hot water, the timing of are the following:

- OUT 1 and OUT 2 outputs switching with the delay of FS27 seconds from pump switching on
- the water pump switching off occurs with the delay of FS28 seconds from OUT 1 and OUT 2 outputs switching.

The domestic hot water flow switch is managed by parameters AL65 ...68.

Domestic hot water flow switch, solar panel flow switch and overload domestic hot water pump.

It is possible to enable the domestic hot water flow switch by setting appropriately parameters AL65..AL68. It is possible to enable the solar panel flow switch by setting appropriately parameters AL69..AL72.

If domestic hot water flow switch or domestic hot water pump overload is active, domestic hot water regulation is disabled; heating and cooling regulation proceed normally.

If solar panel flow switch is active, solar panel regulation is disabled; heating and cooling regulation proceed normally.

40.3 DOMESTIC HOT WATER SECOND SET POINT

The domestic hot water second set point can enabled by time bands (ES19..ES33 parameters) or digital input properly configured.

In case of domestic hot water second set point enabled by time bands, the Ichill must have internal clock.

| Par. ES25 – ES31 | 0= Function disabled |
|------------------|--|
| | 1= 1 st period enabled |
| | 2= 2 nd period enabled |
| | 3= 1 st and 2 nd periods enabled |
| | 4= 3 rd period enabled |
| | 5= 1 st and 3 rd periods enabled |
| | 6= 2 nd and 3 rd periods enabled |
| | 7= 1 st , 2 nd and 3 rd periods enabled |

Inside the time band or when the digital input is active to the domestic hot water set point is applied an offset (parameter ES32) and the new differential for the regulation is ES33.

40.4 DOMESTIC HOT WATER PRODUCTION: VALVES IN WATER CIRCUIT ____ FS01=1 (AIR/WATER, WATER/WATER UNIT)

40.4.1 - Domestic hot water operation when the unit is producing hot water

When domestic hot water production is required (and it has priority), the sequence of operation is the following:

- the domestic hot water pump is switched on
- after a delay of FS27 seconds, domestic hot water valve 1 is swithed on
- after a delay of FS10 seconds the domestic hot water valve 2 is switched off

Domestic hot water is produced until the FS03 set-point is reached.

Once the domestic hot water set-point is reached, the sequence of operation is the following:

- domestic hot water valve 2 is switched on
- after a delay of FS10 seconds the domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water circulation pump is switched off

Condenser fans are managed normally.

The defrost takes priority over the production of domestic hot water.

If the controller determines the need for a defrosting cycle during the production of domestic hot water, the Ichill stops the domestic hot water operation to activate the defrost procedure:

- all compressors and heaters are stopped
- the domestic hot water valve 2 is switched on
- after the FS10 delay domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water pump is switched off

The defrost can now start as per the normal procedure.

At the end of the defrosting cycle:

- If there is a need to produce domestic hot water, the compressors and any heating elements will be switched on. After the FS11 delay from the end of the dripping phase, domestic hot water valve 1 is switched on and, after the FS10 delay, domestic hot water valve 2 is switched off.
- If there is no need to produce domestic hot water, the controller continues with normal heat regulation.

40.4.2 - Domestic hot water operation when the unit is producing cold water

When the production of domestic hot water is required (and it has priority), it is necessary to reverse the cycle as follows:

- · the compressors are switched off
- after the dF07/2 delay the 4-way valve status is reversed
- after dF07/2 the compressors are switched on
- after a delay of FS27 seconds valve 1 is switched on
- after the FS10 delay the domestic hot water valve 2 is switched off

The production of domestic hot water stops once the set-point is reached and it will be possible to return to produce cold water (if needed):

- · the compressors are switched off
- the valve 2 is switched on
- after the FS10 delay the domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water circulation pump is switched off
- after a delay of dF08/2 the 4-way valve status is reversed
- after a delay of dF08/2 the compressors are switched on as per normal if required by the chiller regulator

40.5 DOMESTIC HOT WATER PRODUCTION: VALVES IN GAS CIRCUIT ___ FS01=2 (AIR/WATER, WATER/WATER UNIT)

40.5.1 Domestic hot water operation when the unit is producing hot water

When domestic hot water production is required (and it has priority), the sequence of operation is the following:

- the domestic hot water pump is switched on
- after a delay of FS27 seconds the valve 1 is activated
- after a delay of FS10 seconds the domestic hot water valve 2 is switched off

Domestic hot water is produced until the FS03 set-point is reached.

Once the domestic hot water set-point is reached:

- domestic hot water valve 2 is switched on
- after a delay of FS10 seconds the domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water circulation pump is switched off

Condenser fans are managed normally.

The defrost takes priority over the production of domestic hot water.

If the controller determines the need for a defrosting cycle during the production of domestic hot water, the lchill stops the domestic hot water operation to activate the defrost procedure:

- · all compressors and heaters are stopped
- the valve 2 is activated
- after the FS10 delay the domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water pump is switched off

The defrost can now start as per the normal procedure.

At the end of the defrosting cycle:

- If there is a need to produce domestic hot water, the compressors and any heating elements will be switched on. After the FS11 delay from the end of the dripping phase, domestic hot water valve 1 is enabled and, after the FS10 delay, domestic hot water valve 2 is switched off.
- If there is no need to produce domestic hot water, the controller continues with normal heat regulation.

40.5.2 - Domestic hot water operation when the unit is producing cold water

When the production of hot domestic hot water is required, the sequence of operation is different and depend on the status of the compressors:

a) One or more compressors are switched on for production of chilled water

If the production of domestic hot water is required during operation in chiller mode:

- the domestic hot water circulation pump is switched on
- after a delay of FS27 seconds the domestic hot water valve 1 is switched on
- after the FS10 delay the domestic hot water valve 2 is switched off

The following two cases could occur during the production of domestic hot water:

- The domestic hot water set-point is reached when the chiller is working (the chiller set-point is not reached):
 - the domestic hot water valve 2 is switched on
 - after the FS10 delay the domestic hot water valve 1 is switched off
 - after a delay of FS28 seconds the domestic hot water circulation pump is switched off

At the end of this phase, if necessary, the machine continues to regulate in chiller mode.

- The regulation temperature reaches the chiller set-point (parameter ST01) and the domestic hot water production is working:
 - the domestic hot water circulation pump stays on
 - the domestic hot water valve 2 is switched on
 - after the FS10 delay the domestic hot water valve 1 and the compressors are switched off
 - after the DF07/2 delay the 4-way valve status is reversed
 - after dF07/2 the compressors are switched on again to produce hot domestic hot water
 - after the FS11 delay from the 4-way valve switching, the domestic hot water valve 1 is switched on
 - after the FS10 delay the domestic hot water valve 2 is switched off

Once the domestic hot water set-point is reached:

- the domestic hot water valve 2 is switched on
- after the FS10 delay domestic hot water valve 1 is switched off
- after FS28 seconds the domestic hot water circulation pump and the compressors are switched off
- after the dF08/2 delay the status of the 4-way valve is reversed

If the domestic hot water production is working and the temperature detected by the chiller regulation probe is greater than ST01+ST07 (cold water required), the sequence of operation is the following:

- the domestic hot water pump will remain on
- the domestic hot water valve 2 is switched on
- after the FS10 delay the domestic hot water valve 1 is switched off
- the compressors are switched off
- after the DF08/2 delay the 4-way valve status is reversed
- after a delay of dF08/2 the compressors are switched on to produce chilled water and domestic hot water

When the domestic hot water set-point is reached:

- domestic hot water valve 2 is switched on
- after the FS10 delay the domestic hot water valve 1 is switched off
- after a delay of FS28 seconds the domestic hot water circulation pump is switched off

b) None of the compressors are switched on for the production of chilled water

In this case, the cycle is reversed as follows:

- the 4-way valve status is reversed
- after dF07/2 the compressors are switched on
- the domestic hot water pump switches on after the FS11 delay from start-up of the compressors
- after a delay of FS27 seconds the domestic hot water valve 1 is switched on
- after the FS10 delay the domestic hot water valve 2 is switched off.

Once the domestic hot water set-point is reached, the sequence of operation is the following:

- the domestic hot water valve 2 is switched on
- after the FS10 delay the domestic hot water valve 1 and the compressors are switched off
- after a delay of FS28 seconds the domestic hot water circulation pump is switched off
- after the DF07/2 delay the 4-way valve status is reversed and normal regulation is restored.

If chilled water is required during the production of domestic hot water, operation is the same as in the previous case.

41. SOLAR PANEL MANAGEMENT

Though appropriate configuration of FS55 and FS56 parameters is possible to use the solar panel in heating or for domestic hot water production.

The solar panel is managed through the valve and water pump control; their status depend from:

- solar panel temperature
- regulation probe (typically heating regulation probe or domestic hot water regulation probe); this probe is defined in FS57 and FS58 parameters

41.1 SOLAR PANEL IN DOMESTIC HOT WATER

Compressors and solar panel in integration to domestic hot water (FS55=1):

If:

solar panel temperature – domestic hot water temperature > FS59 (Dt to enable solar panel in domestic hot water)

the solar panel are enabled to work; domestic hot water probe is defined by FS57 parameter (it is possible to set another probe, if needed).

Compressors are normally managed by domestic hot water temperature and domestic hot water set point.

• if domestic hot water temperature < FS23-FS24, the valve of the solar panel is open and the water pump is on

• if domestic hot water temperature > FS23, , the valve of the solar panel is close and the water pump is off

Solar panel in heating mode (FS55=2)

If:

solar panel temperature – domestic hot water temperature > FS59 (Dt to enable solar panel in domestic hot water)

the solar panel are enabled to work; domestic hot water probe is defined by FS57 parameter (it is possible to set another probe, if needed).

At first compressors are not used for domestic hot water.

It is possible to set a maximum time to use solar panel (FS61); when this time is elapsed and domestic hot water set point is not reached, the solar panel are disabled and compressors are switched on.

The domestic hot water pump runs when solar panel are enabled.

In regulation, if

solar panel temperature – domestic hot water temperature < FS59

the solar panel are disabled and the hot domestic hot water is done by compressors.

Dt control is done only at the time of the request of domestic hot water; at this moment, if Dt< FS59 the solar panel are not used and compressors are used for heating.

41.2 SOLAR PANEL IN HEATING MODE

• Solar panel in integration mode (FS56=1)

If:

solar panel temperature – heating temperature > FS60 (Dt to enable solar panel in heating) the solar panel are enabled to work (valve is open and water pump on); heating probe is defined by FS58 parameter (it is possible to set another probe, if needed).

Compressors are normally managed by heating regulation.

• Solar panel in Heating (FS56=2)

If:

solar panel temperature – heating temperature > FS60 (Dt to enable solar panel in heating)

the solar panel are enabled to work; heating probe is defined by FS58 parameter (it is possible to set another probe, if needed).

At first compressors are not used for heating.

It is possible to set a maximum time to use solar panel (FS61); when this time is elapsed and domestic hot water set point is not reached, the solar panel are disabled and compressors are switched on.

In regulation, if

solar panel temperature – heating temperature < FS60

the solar panel are disabled and the heating is done by compressors.

Dt control is done only at the time of the request of heating; if Dt< FS60 the solar panel are not used and compressors are used for heating.

42. UNIT WITH HYBRID EXCHANGERS (AIR / WATER UNIT)

The parameter CF75=1 enables this function.

This unit manages two exchangers by relay:

- Hybrid exchanger 1
- Hybrid exchanger 2

Setting the parameter CF75=1 hybrid exchangers are enabled; through the parameter dF35 is possible to select witch probe is used for the regulation (external temperature or condenser temperature/pressure). If external temperature is selected, hybrid exchangers regulation of both circuits works in parallel.


If condenser temperature/pressure is selected:

- common condenser: the regulation is done according the higher value of pressure/temperature of the circuits in summer and the lower value in winter
- separated condenser: every exchanger is managed accordind the temperature/pressure of the specific circuit


Parametres involved:

- -
- Hybrid exchangers set point 1 in chiller (parameter dF27)
- Hybrid exchangers set point 1 in chiller (parameter dF29)
- Hybrid exchangers set point 2 in chiller (parameter dF28)
- Hybrid exchangers set point 2 in chiller (parameter dF30)
- Hybrid exchangers set point 1 in heat pump (parameter dF31)
- Hybrid exchangers set point 1 in heat pump (parameter dF33)
- Hybrid exchangers set point 2 in heat pump (parameter dF32)
- Hybrid exchangers set point 2 in heat pump (parameter dF34)

Summer operation mode:

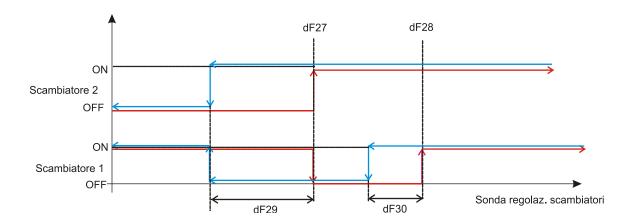

Winter operation mode:

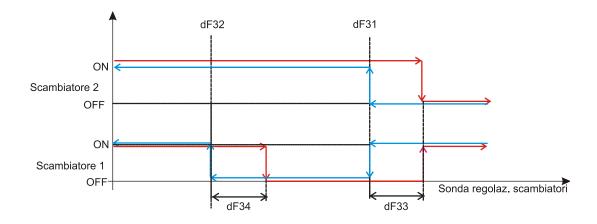

If the machine is switched on and external temperature or condenser temperature/pressure is inside the differential:

• machine in chiller and temperature/pressure inside the differential dF29: exchanger 2 ON

- machine in chiller and temperature/pressure inside the differential dF30: exchanger 1 and exchanger
 2 ON
- machine in heat pump and temperature/pressure inside the differential dF33: exchanger 2 ON
- machine in heat pump and temperature/pressure inside the differential dF34: exchanger 1 and exchanger 2 ON

In chiller when first compressor starts both exchangers are ON for dF36 time; after this time the regulation follows diagrams above.

If dF36=0 the regulation follows diagrams above also at the start up.

In defrost this regulation is disabled.

In STD-BY or remote OFF the status of the exchangers is hybrid exchanger 1=ON, hybrid exchanger 2=OFF.

The set point is related to the status of the machine:

- if the machine is producing cooled water and domestic hot water, reference set point is chiller set point
- if the machine is producing only domestic hot water, reference set point is heat pump set point

43. GEOTHERMAL FREE COOLING

Outputs managed:

- relay for valve/pump management
- 0..10V analog output to control a modulating valve

In heating the relay is OFF and the analog output is 0V.

Free cooling operation mode:


- CF77=2: Free cooling is the only cooling source
- **CF77=3**: Free cooling and compressors work together to produce cooling. The compressors work according their standard regulation.

Free cooling management:


2 probes are needed, selected from those configured in the instrument (1 Pb1, 2=Pb2, etc.); parameters to select the probes are FS41 and FS42.

- if T1 temperature T2 temperature ≥ FS21, the Free cooling is enabled and the relay and analog output are manages as figures below
- if T1 temperature T2 temperature < FS21 FS22, the Free cooling is disabled

Analog output management:

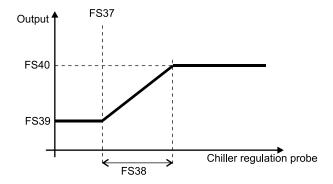

Digital output management: Output FS37 ON ON

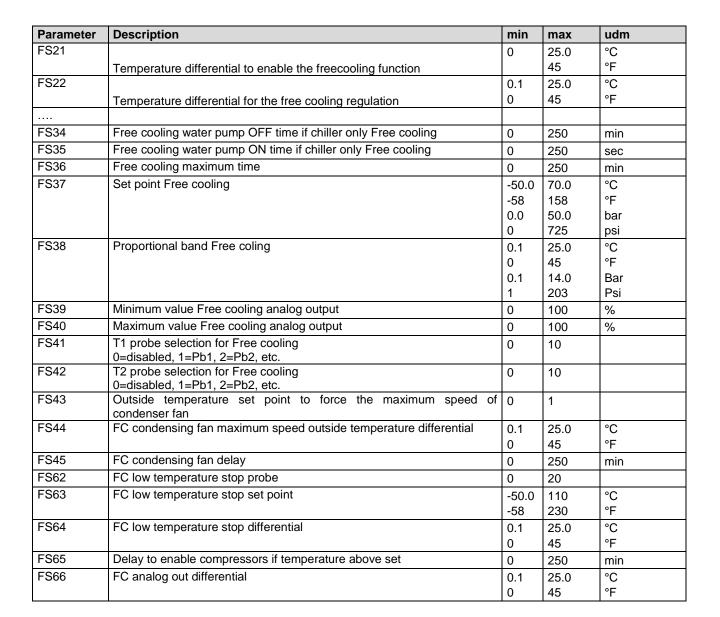

Chiller regulation probe

Only free cooling for cooling (CF77=2)

Compressors are not used for cooling.

Evaporator and condenser water pumps are managed according to chiller probe and St01 set point; free cooling valve/pump is managed according chiller probe and FS37 set point (or St01 if St01<FS37). If the free cooling set point is not reached in FS36 minutes (0 = function disabled) or when the free cooling set point is reached, the free cooling will be disabled for FS34 minutes.

After this time the valve/pump is switched on for FS35 seconds and, when this time is elapsed the controller verify if T1 temperature – T2 temperature \geq FS21 and if free cooling temperature > FS37.


If both condition are true, the free cooling valve/pump is activated. If FS34=0 and FS35=0 this function is disabled.

Free cooling with compressors (CF77 = 3)

The compressors can be used to integrate the free cooling; if there are the conditions for free cooling the adjustment is as showed below:

- if the regulation temperature is lower than St1 + FS37, the Free Cooling is performed only with the resources of the Free Cooling; the reference set point is St1 and the differential is FS38. The compressors remain off; it is active the maximum time to reach the set point, after which the compressors are enabled to operate;
- \bullet if the regulation temperature exceeds St1 + FS37 for FS65 time, the compressors are enabled for the regulation.

Regarding the chart below, the example assumes FS38 <ST07 <FS37.

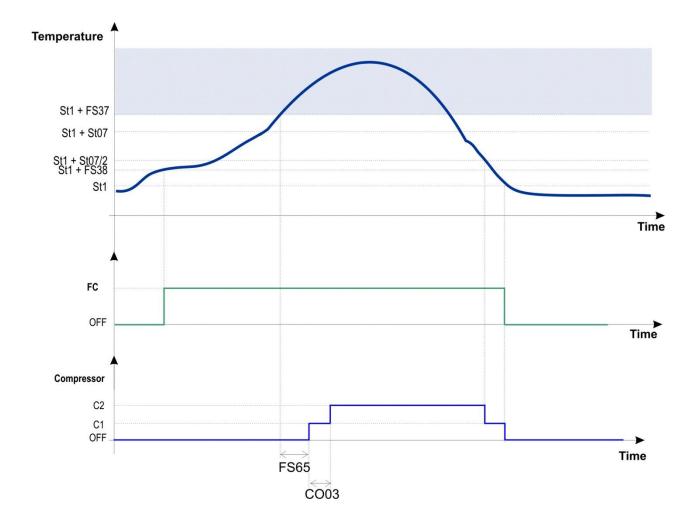

Low temperature protection

If the temperature detected by probe selected with FS62 parameter is lower than FS63 set point, the free cooling is disabled.

The free cooling will be enabled when temperature detected by probe selected with FS62 parameter is higher than FS63 + FS64.

43.1 FAN SPEED CONTROL IF COMPRESSORS AND FREE COOLING ARE USED FOR COOLING (CF77=3)

When the free cooling is not active the condenser fan speed is managed like standard regulation. If free cooling is active:

- outside temperature > FS43 + FS44: condenser fan speed is forced at maximum speed
- outside temperature < FS43: when outside temperature decreases below FS43 temperature, after FS45 minutes the condenser fan speed is managed as standard regulation

44. HEAT RECOVERY FUNCTION


The heat recovery function is enabled if:

- 1 Par. **rC01** > 0
- 2 The unit is working in chiller mode
- 3 The condensing temperature or pressure is lower than set rC06 rC07
- 4 The heat recovery input/output resources are correctly configured
- 5 The heat recovery digital input is activated and or a heat recovery probe is configured


If the heat recovery is configured, in the menu the REC sub-menu is available to read the status of the valves and to disable / enable the function.

44.1 HEAT RECOVERY TEMPERATURE PROBE

If single valve is configured:

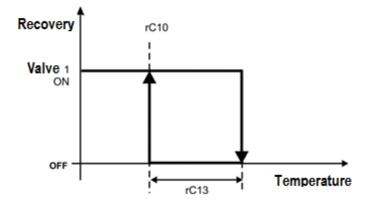

If two valves are configured:

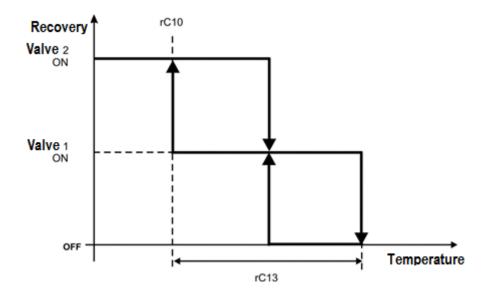

In the heat recovery digital input is active and if the heat recovery temperature is lower than the first valve activation threshold, the recovery valve will be activated on the circuit switched on.

If both circuits are working, first is activated the heat recovery valve of circuit 1 and then the heat recovery valve of circuit 2.

44.2 UNIT WITH TWO SEPARATE IDRAULIC CIRCUITS (rC01=1)

HEAT RECOVERY: CIRCUIT CONFIGURED WITH ONLY ONE COMPRESSOR If:

- chiller unit is on
- at least a compressor is ON
- condenser temperature / pressure are lower than rC06

the heat recovery starts if the the digital input configured as recovery circuit 1 or circuit 2 is active and, in case of use of the recovery probe, if the temperature is below the rC10 set point (both conditions must be fulfilled); in this condition the relay configured as recovery valve circuit 1 or circuit 2 is activated.

When the heat recovery request is not active, the relay configured as recovery valve circuit 1 or circuit 2 will be deactivated.

When the unit enters in recovery operation, the recovery state is maintained for a minimum time set in parameter rC04.

When the heat recovery is deactivated, next request will not be fulfilled until the end of time set in the RC05 (counted from the moment of exit the recovery operation).

HEAT RECOVERY: CIRCUIT CONFIGURED WITH MORE THAN ONE COMPRESSOR

Enter in heat recovery

lf:

- chiller unit is on
- at least a compressor is ON
- condenser temperature / pressure are lower than rC06

the heat recovery starts if the digital input configured as recovery circuit 1 or circuit 2 is active and, in case of use of the probe recovery, if the temperature is below the rC10 set point (both conditions must be fulfilled):

• if the heat recovery request comes when the number of compressors switched on is lower than the maximum available, the recovery valve is activated with delay of RC02 seconds; during this delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.

Once the valve is turned on, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve

• if the heat recovery request comes when the maximum number of available compressor is switched on, a compressor is switched off and a delay time rC02 starts counting; once elapsed, the heat recovery valve is activated, condenser fan is switched off (if rC09=1) and starts conting a delay rC03 after wich the compressor will be re-started (if CO02 time is elapsed).

Exit from heat recovery

- If:
- Heat recovery digital input is de-activated or heat recovery temperature rise over RC10 + RC13, when the number of compressors switched on is lower than the maximum available for that circuit, recovery valve of circuit 1 or circuit 2 is switched off after a delay of rC02 seconds; during rC02 delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.
 - Once the valve is turned off, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve.
- Heat recovery digital input is de-activated or heat recovery temperature rise over RC10 + RC13 when the maximum number of available compressor for that circuit is switched on, then:
 - a compressor will be switched off
 - starts counting rC02 delay, after that recovery valve is switched off
 - after rC03 delay the compressor will be re-started (if CO02 time is elapsed).

44.3 UNIT WITH TWO IDRAULIC CIRCUIT WORKING IN PARALLEL (rC01=2)

The principle of operation is similar to the unit with separate circuits; in particular condition in which only one of the two circuits is active, the digital inputs of retrieval request are not specific for circuit 1 and circuit 2 but are generic.

So if the unit is on in chiller, only one circuit is working, condenser temperature / pressure are lower than rC06, heat recovery starts if one of the digital inputs configured as heat recovery circuit 1 or circuit 2 is active and, in case of use of the recovery probe, if the temperature is below the rC10 set point (both conditions must be fulfilled).

The recovery valve activated will be the one belonging to the circuit switched on at that time.

When heat recovery digital input is de-activated or heat recovery temperature rise over RC10 + RC13, then the heat recovery valve of circuit 1 or circuit 2 will be de-activated in the same way of unit with two separated circuits.

ENTER/EXIT FORM HEAT RECOVERY CIRCUIT 1 OR CIRCUIT 2 IF ONLY ONE CIRCUIT IS WORKING Enter in heat recovery

Heat recovery starts if the the digital input configured as recovery circuit 1 or circuit 2 is active and, in case of use of the probe recovery, if the temperature is below the rC10 set point (both conditions must be fulfilled):

- If the unit has only one compressor per circuit, heat recovery valve of circuit 1 or circuit 2 is switched on (depending on wich circuit is active)
- If the unit has more than one compressor per circuit:
 - if the heat recovery request comes when the number of compressors switched on is lower than the maximum available, the recovery valve is activated with delay of rC02 seconds; during this delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.
 - Once the valve is turned on, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve
 - if the heat recovery request comes when the maximum number of available compressor is switched on, a compressor is switched off and a delay time rC02 starts counting; once elapsed, the heat recovery valve is activated, condenser fan is switched off (if rC09=1) and starts conting a delay rC03 after wich the compressor will be re-started (if CO02 time is elapsed

Exit from heat recovery

• if the unit has only one compressor per circuit, when heat recovery request is not active the heat recovery valve of circuit 1 or circuit 2 is de-activated

- if the unit has more than a compressor per circuit:
 - if the heat recovery request is de-activated when the number of compressors switched on is lower than the maximum available, the recovery valve is de-activated with delay of rC02 seconds; during this delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.
 - Once the valve is turned on, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve
 - o if the heat recovery request is de-activated when the maximum number of available compressor is switched on, a compressor is switched off and a delay time rC02 starts counting; once elapsed, the heat recovery valve is activated, condenser fan is switched off (if rC09=1) and starts conting a delay rC03 after wich the compressor will be re-started (if CO02 time is elapsed

ENTER/EXIT FORM HEAT RECOVERY IF BOTH CIRCUITS ARE WORKING

The principle of operation is similar to the unit with separate circuits; so if the unit is on in chiller, both circuits are working, condenser temperature / pressure are lower than rC06, heat recovery starts if one of the digital inputs configured as heat recovery circuit 1 or circuit 2 is active and, in case of use of the recovery probe, if the temperature is below the rC10 set point (both conditions must be fulfilled):

- if the unit has only one compressor per circuit, when heat recovery request is active the heat recovery valve of circuit 1 or circuit 2 is activated
- if the unit has more than a compressor per circuit:
 - if the heat recovery request comes when the number of compressors switched on is lower than the maximum available, the recovery valve is activated with delay of rC02 seconds; during this delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.
 - Once the valve is turned on, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve
 - if the heat recovery request comes when the maximum number of available compressor is switched on, a compressor is switched off and a delay time rC02 starts counting; once elapsed, the heat recovery valve is activated, condenser fan is switched off (if rC09=1) and starts conting a delay rC03 after wich the compressor will be re-started (if CO02 time is elapsed

When the unit enters in recovery operation, the recovery state is maintained for a minimum time set in parameter rC04.

Exit from heat recovery

- if the unit has only one compressor per circuit, when heat recovery request is not active the heat recovery valve of circuit 1 or circuit 2 is de-activated
- if the unit has more than a compressor per circuit:
 - if the heat recovery request is de-activated when the number of compressors switched on is lower than the maximum available, the recovery valve is activated with delay of rC02 seconds; during this delay the switching on of more compressors of the circuit, if required by the regulation, is inhibited.
 - Once the valve is turned on, any additional compressors required by regulation chiller compressors will be delayed of rC03 seconds after the valve
 - if the heat recovery request is de-activated when the maximum number of available compressor is switched on, a compressor is switched off and a delay time rC02 starts counting; once elapsed, the heat recovery valve is activated, condenser fan is switched off (if rC09=1) and starts conting a delay rC03 after wich the compressor will be re-started (if CO02 time is elapsed

When the heat recovery is deactivated, the next request will not be fulfilled until the end of time set in the RC05 (counted from the moment of exit the recovery operation).

45. MASTER / SLAVE FUNCTION

The IC208CX can be used as a slave in a master / slave configuration; the master is represented by a device that has the specific function, the IPL500 Master.

The use of the device as a slave is enabled automatically when the IC208CX is connected to the Master and the serial communication with the Master work correctly.

During operation, the slave:

- does not calculate the power to be supplied to the system; the power is calculated by the Master and sent to the Slave
- operates normally the procedure to enter to the defrost, but before starting the defrost it need the Master consent
- can be configured to manage compressors type ON / OFF (not inverter, not with capacity step)
- · can not be configured to manage the domestic hot water
- · can not be configured to handle condensing units

More detailed specifications of Master / Slave operation and configuration are in the IPL500 Master / Slave documentation.

46. OPERATION RELATED TO THE REAL TIME CLOCK

46.1 REAL TIME CLOCK DISABLED BY DIGITAL INPUT

When the digital input configured as "Operation working mode: by RTC or keyboard" is active, the real time clock is disabled and all the function involved with the real time clock are disabled.

46.2 "ONLY SUPPLY FAN" WORKING MODE"

This function can be enabled only if the Ichill is provided with internal clock.

If one of the digital input is configured as "Operation mode with supplay fan only" and it is activated, the Ichill enables only the supply fan (other loads are disabled); the supplay fan works according to the time table programming (parameters ES01..ES13).

ATTENTION:

When the supply fan is on and the Ichill is forced in STD-BY or remote OFF (by digital input), the supply fan will be switched off with a CO18 delay.

47. MESSAGES - ALARM CODES

The alarm codes are defined by an alphanumeric code. Alarm typology:

- A = alarm of the unit
- **b** = alarm of the circuit
- C = alarm of the compressor

47.1 AUTOMATIC / MANUAL ALARM DESCRIPTION

The menù ALrM allows to read/reset the alarms.

An alarm can be:

- automatic reset: the alarm reset automatically when the cause of the alarm is not present
- manual reset: manual reset is requested

Some alarms are managed by number of events per hour; it is possible to set a number of alarms per hour after witch the alarm become a manual reset.

Following an example of low pressure alarm:

o AL05=0

the alarm is always manual reset

- o 0<AL05<16:
- o the alarm is automatic if the number of the event is < AL05
- \circ the alarm is manual if the number of the event is = AL05
- the alarm is always automatic reset

Compressor overload alarm is managed in a special way:

- when the number of the alarms per hour is < AL20, the alarm is a manual reset
- when the number of the event is = AL20, the alarm is manual reset and a password is requested. In this case the alarm is stored and visible in COtr menu.

If the cause of alarm is already present, the display shows "no" and it is not possible to reset the alarm. If the cause of alarm is not present, the display shows "Rst" and it is possible to reset the alarm.

47.2 ALARMS

ACF1 ... AC13: Configuration alarm

Configuration alarms are showed in case of wrong configuration of some parameters; in case of configuration alarm the controller is forced in std-by status,

ACF1

- · Heat pump unit but 4-way valve not configured
- Wrong configuration of defrost parameters dF22 and dF23
- Defrost only with condenser fan enabled but external temperature probe not configured

ACF2

- Condenser fan configured as step or proportional control, but condenser probes not configured
- Condenser fan configured for proportional control and following rules not respected:

```
FA09 + FA11 + FA12 < FA10

FA12 < FA13

FA07 < FA15 < FA08

FA18 + FA21 + FA20 < FA19

FA21 < FA22

FA16 < FA23 < FA17
```

Condenser fan configured for ON/OFF control and following rules not respected:

```
FA09 < FA10
FA18 < FA19
```

- If the defrost is enabled and:
 - no evaporating/condensing probes is configured
 - dF18 > FA35
 - FA34 < FA07
 - FA34 > FA08
 - FA07<FA34<FA08
 - dF18<FA10
- In two circuits unit and two separated condenser, two condenser probe are not configured
- If condenser fan is configured with modulation and PWM outoput, and the power supply selection is do voltage (CF63 = 2)
- If condenser fan is enabled as step control, the following rules are to be respected:

```
FA09 < FA10 < FA26 < FA27 in cooling mode
FA29 < FA28 < FA19 < FA18 in heating mode
```

ACF3

 Two relays, or two digital inputs, or two probes are configured with the same function or without the necessary resources (es. compressor 3 overload alarm but compressor 3 relay not configured)

ACF4

Heating / Cooling selection

- CF59=1 and none digital input configured as Chiller request or Heat Pump request
- CF59=2 and none probe configured as external temperature probe
- Unit configured as Heat pump and rack compressor unit enabled (Cr01>0)
- CF03 = 1 (condensing unit enabled) and wrong configuration of the digital input or digital output for condensing unit

ACF5

Circuit 2 not configured but at least one of its resources are configured (e.g.: solenoid pump-down valve, heaters, inversion valve, fan, recovery, etc)

ACF6

- The number of compressor of the 2 circuits (CF04 + CF05) is:
- $\sqrt{} > 4$
- $\sqrt{}$ > 4 with no direct compressor start-up (CO10 \neq 0) or the number of steps is > 0 (CF06),
- $\sqrt{}$ > 2 and the intermittent valve is configurated
- Pump-down function but at least in one circuit:
 - √ The pump-down solenoid relay is not present
 - √ No pump-down pressure switch or evaporating probe when
 - □ the pump-down is enabled with unit in start

Or

- No low pressure switch configurated.
- The compressor configuration with CF04 and CF05 but not the relay outputs:
 - √ Main relay of the compressor
 - $\sqrt{}$ Intermittent valve when enabled with the ON / OFF time (CO08 / CO09 > 0)
 - √ When the by-pass time >0 and there is no partialization or by-pass valve configured
 - √ Coil 2 of part-winding start up
 - √ Requested step valve for screw compressor are configurated.
- One relay is configured as:
 - √ Compressor not selected in CF04 or CF05
 - √ Intermittent valve configured but CO08 =0 and CO09 =0
 - $\sqrt{}$ By-pass gas valve configured but by-pass time = 0
 - √ Coil 2 of part winding start up configured but direct start up selected
- · Wrong configuration of the capacity step valve

ACF7

Evaporator pump configuration:

- Enabled (CO16 >0) but the relay of the water pump is not configured
- Not enabled (CO16=0) but the relay of the water pump is configured

Condenser pump configuration:

- Enabled (CO21 >0) but the relay of the water pump is not configured
- Not enabled (CO21=0) but the relay of the water pump is configured

Water pump enabled for antifizee prevention:

- if Ar24=1 and Ar25=0 (water pump enabled for antifreeze prevention but is not configured the probe)
- ifAr25=1 and not probe configurated to control the water pump for antifreeze
- if Ar34=1 and Ar35=0 (water pump enabled for antifreeze prevention but is not configured the probe)
- ifAr35=1 and not probe configurated to control the water pump for antifreeze

ACF8

Cooling / heating regulation probe configuration

- The regulation probe selected by ST09 or ST10 parameters is not properly configured
- The compressor rack regulation probe selected by Cr01 is not present on the configured probes

ACF9

Recovery function enabled but whitout resources needed (heat recovery probe or digital input, heat recovery valve, condenser probe)

AC10

Compressor inverter controlled

- 2 anologue output configured to control the same compressor
- One analog output is configured to control a compressor via inverter but none relays is configured as compressor
- If the unit is configured as condensing unit and a compressor is configured as compressor inverter controlled

AC11

Compressor with different power capacity enabled and:

- One analog output is configured as output for compressor inverter controlled
- one of the compressor has capacity power = 0
- the regulation is not a neutral zone
- the compressor is configured with capacity step

AC12

Free cooling function enabled and:

- · None relay is configured as free cooling
- FS41 and FS42 select a probe not configured in CF parameters
- If FS21 < FS22
- If FS01=2 and CF97=2
- If it is not respected the following condition: FS38 < St07 <= FS37

AC13

Domestic hot water function enabled and:

- None relay is configured as valve 1
- · None probe is configured as probe 1 of domestic hot water
- Valves mounted on water circuit and valves configured to be switched off in STD-BY or OFF
- Domestic hot water priority defined by digital input and none digital input configured for this function
- FS49=1 and the regulation is in neutral zone

AC15

Hybrid exchangers enabled and:

dF27-dF29> dF28-dF30 or dF27>dF28 or dF32+dF34> dF31+dF33 or dF32>dF31

ACFL: condenser flow alarm (differential Pressure switch)

| Label on alarm visualization menu | ACFL condenser flow alarm |
|-----------------------------------|--|
| Origin | Digital input active for the time set in AL55 after the water pump is on and, after the digital input itself is activated, for the time set in AL57. Alarm not enable if AL14=0 Alarm enabled in chiller only if AL14=1 Alarm enabled in heat pump only if AL14=2 Alarm enabled in chiller and heat pump if AL14=3 |
| Reset | Digital input not active for the time AL58. |
| Restart | Automatic – Manual after AL56 (Reset procedure in Menu function). |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm Relay + and buzzer on only during normal running conditions. |
| Loads | OFF |

ACP1 - ACP1 Condenser pump mintenance

| Label on alarm visualization menu | ACP1 (Condenser 1 pump maintenance) ACP1 (Condenser 2 pump maintenance) |
|-----------------------------------|---|
| Origin | Pump running hours > Hour counter setpoint |
| Reset | Hour reset in function menu |
| Restart | Manual |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Action | Only display warning messages |
| Loads | Not changed |

| AEE Eeprom alarm | |
|-----------------------------------|--|
| Label on alarm visualization menu | AEE |
| Origin | Wrong eeprom data |
| Reset | |
| Restart | Manual |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| Loads | OFF |

| AEFL: evaporator flow alarm (differential pressure switch) | |
|--|--|
| Label on alarm visualization menu | AEFL evaporator flow alarm |
| Origin | Digital input active for the time set in AL15 after the water pump is on and, after the digital input itself is activated, for the time set in AL17. |
| Reset | Digital input not active for the time AL18. |
| Restart | Automatic – Manual if the digital input is active for AL16 seconds (Reset procedure in Menu function). |
| Symbol | On the display the symbol $	ext{Δ}$ is blinking |
| Action | Alarm Relay + and buzzer on only during normal running conditions. |

ATTENTION

The alarm relay and the buzzer are activated only if the alarm appears during normal running conditions.

When the temperature setpoint has been reached and CO16/CO21= 2, the icon Flow! blinks without alarm.

NOTE ABOUT THE FLOW ALARM

CO16 / CO21=0 Water pump not enabled.

The alarm is managed only if one digital input is configured as flow switch, **the restart is always automatic. CO16 / CO21=1** Water pump with continuous control.

The alarm is managed only if one digital input is configured as flow switch, the restart is always automatic, in stand-by or remote OFF (pump off), it becomes manual after AL16 time.

In chiller or heat pump only. During the functioning of the unit any flow alarm stop the loads described in the table, the water pump follow its regulation algorithm and is turned off, after AL16 time.

CO16 / CO21=2 Compressor on - pump on

The alarm is managed only if one digital input is configured as flow switch, the restart is always automatic, in stand-by or remote OFF (pump off), it becomes manual after AL16 time.

During the functioning of the unit any flow alarm stop the loads described in the table, the water pump follow its regulation algorithm and is turned off, after AL16 time it is completely locked.

MANUAL RESTART OF THE FLOW ALARM

After AL16 time it is necessary to enter the function Menu to reset the alarm itself. The alarm message **DOES NOT DISAPPEAR** if the alarm condition is still on. The water pump, if configured, can start and the alarm is by-passed for AL18 seconds.

AL15 Alarm flow delay after on pump.

When the water pump starts the AL15 delay stops any flow alarm to reach the normal flow condition.

AL16 Maximum time flow switch alarm active befor to block the water pump

It determines maximum time of flow alarm active before to block the water pump.

ATTENTION

With air/water or water/water units and CF01=1,2 the minimum number of events per hour is 1.

AL17 Active flow input duration

Within this time the flow alarm must be active and after AL17 is expired the alarm is signalled. The counter starts after AL15 and allows to filter the improvise flow reduction or the possible bubbles of air.

AL18 Not active flow input duration

Within this time the flow alarm must be not active and, after this time, the previous alarm is automatically reset (if automatic) or, if manual, the unit can be restarted.

| AEht: alarm from high temperature of the evaporator water inlet | |
|---|--|
| Label on alarm visualization menu | AEht High water temperature evaporator inlet |
| Origin | During normal running condition when the temperature/pressure of evaporator water inlet is higher than AL61 setpoint for the AL60 time delay. |
| Reset | If the water temperature is lower than AL61 – AL62 (differential) With unit in stand by or remote OFF if alarm reset is automatic |
| Restart | Reset procedure in Menu function Always manual AL59 = 0 Always automatic AL59 = 16 From manual to utomatic if AL59 value is between 1 and 15 |
| Symbol | On the display the symbol $	ext{Λ}$ is blinking |
| Action | Alarm relay + buzzer ON |
| REGULATIONS | |
| Compressor | OFF |
| Other Loads | Not modified |

| AEP1 - AEP2 Evaporator pump / Supply fan maintenance request | |
|--|---|
| Label on alarm visualization menu | AEP1 (Main water pump/supply fan) AEP2 (Support water pump) |
| Activation | Load running hours > counter setpoint for that load |
| Reset | Running hour reset (Hour label in Menu function) |
| Restart | Manual |
| Symbol | On the display the symbol Δ is blinking |
| Actions | Alarm relay and buzzer activated |
| REGULATIONS | |
| Actions | Only signalling |
| Loads | Not modified |

The parameters CO34 / CO35 define the hour set counters for the condenser water pump / Support water pump.

They establish the load running hours limit of the pump/s or the supply fan to give a maintenance signalling. If one of these parameters is equal to 0 the maintenance signalling of that load is disabled but the running hours counter remains active.

AEun: Unloading from high temperature of the evaporator water inlet

| Label on alarm visualization menu | AEUn Unload signalling from evaporator |
|-----------------------------------|---|
| Origin | During normal running condition when the temperature/pressure of evaporator water inlet is higher than CO40 setpoint for the CO42 time delay. |
| Reset | If the water temperature is lower than CO39 –CO41 (differential) With unloading ON after the CO43 time delay. |
| Restart | Automatic |
| Symbol | On the display the symbol $ \Delta $ is blinking |
| Action | Alarm relay + buzzer OFF |

| AEun: Unloading from low temperature of the evaporator water outlet | |
|---|--|
| Label on alarm | b1EU Unload signalling from evaporator circuit n° 1 |
| visualization menu | b2EU Unload signalling from evaporator circuit n° 2 |
| Origin | During normal running condition when the temperature of evaporator water outlet is higher than CO55 setpoint |

| Reset | If the water temperature is lower than CO55 + CO56 (differential) With unloading ON after the CO57 time delay. |
|-------------|---|
| Restart | Automatic |
| Symbol | On the display the symbol |
| Action | Alarm relay + buzzer |
| Regulation | |
| Compressor | OFF |
| Other loads | Not modified |

AHFL: domestic hot water flow alarm

| Label on alarm visualization menu | AHFL domestic hot water flow alarm |
|-----------------------------------|--|
| Origin | The flow switch alarm is not detecded for AL65 seconds starting from water pump activation. Flow switch alarm is signalled if the digital input is active for AL67 seconds. |
| Reset | Automatic reset: digital input not active for AL68 seconds. Manual reset: Reset procedure in Menu function |
| Type of alarm | Automatic if flow switch digital input activation < AL66 + AL67 Manual if Automatic if flow switch digital input activation > AL66 + AL67 |
| Symbol | On the display the symbol $	riangle$ is blinking |
| Action | Alarm Relay + and buzzer on only during normal running conditions. |
| Loads | Domestic hot water pump OFF |

ALC1: Generic alarm with stop regulation

| / LECTI COMOTIC AIAIIII | With Stop rogulation |
|-----------------------------------|--|
| Label on alarm visualization menu | ALC1: generic alarm from digital input with stop regulation |
| Origin | Digital input configured as generic alarm with stop regulation active after the delay in Par. AL43 |
| Reset | Digital input configured as generic alarm with stop regulation not active after the delay in Par. AL44 |
| Restart | Automatic – It becomes manual after AL42 events/hour Logged only if manuale |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| REGULATION | |
| Alarm | Alarm relay + buzzer ON |
| Other loads | OFF |

<u>ATTENTION</u>
If during AL44 the alarm stop and start again the AL44 time delay is reloaded.

ALC2: Generic Signal alarm

| Label on alarm visualization menu | ALC1: generic signal alarm from digital input if AL50 = 0 |
|-----------------------------------|--|
| Origin | Digital input configured as generic alarm with stop regulation active after the delay in Par. AL52 |
| Reset | Digital input configured as generic alarm with stop regulation not active after the delay in Par. AL53 |
| Restart | Automatic |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| REGULATION | |

| Alarm | Alarm relay + buzzer ON |
|-------|-------------------------|
| | |

ATTENTION

If during AL53 the alarm stop and start again the AL44 time delay is reloaded.

| ALC2: Generic alarm with stop regulation | | |
|--|--|--|
| Label on alarm visualization menu | ALC1: generic signal alarm from digital input with stop regulation if AL50 = 1 | |
| Origin | Digital input configured as generic alarm with stop regulation active after the delay in Par. AL52 | |
| Reset | Digital input configured as generic alarm with stop regulation not active after the delay in Par. AL53 | |
| Restart | Automatic – It becomes manual after AL51 events/hour Logged only if manuale | |
| Symbol | On the display the symbol Δ is blinking | |
| Action | Alarm relay + buzzer ON | |
| REGULATION | | |
| Alarm | Alarm relay + buzzer ON | |
| Other loads | OFF | |

ATTENTION

If during AL53 the alarm stop and start again the AL44 time delay is reloaded.

| ALSF: | Phase | sequence | alarm |
|----------|--------------|----------|-------|
| <i>,</i> | | 009000 | w |

| Label on alarm visualization menu | ALSF |
|-----------------------------------|---|
| Origin | Digital input active |
| Reset | Digital input not active |
| Restart | Automatic |
| Symbol | On the display the symbol $	extstyle 	extstyle$ |
| Action | Alarm relay + buzzer ON |
| Loads | OFF |

| Al ti- low | air amhiant | temperature | (Air I | Air unit only) |
|------------|-------------|---------------|--------|------------------|
| ALU. IOW | an annouem | temberature i | AII / | All Ullil Ollivi |

| Label on alarm visualization menu | ALti (low temperature value of the evaporator air inlet) |
|-----------------------------------|---|
| Origin | Chiller mode: evaporator inlet NTC probe lower than AL26 for AL28 seconds. Heat pump: evaporator inlet NTC probe lower than lower than AL33 forAL36 seconds In stand-by or remote OFF: evaporator inlet NTC probe lower than the lowest value compared between AL28 and AL36. |
| Reset | Chiller: evaporator inlet NTC probe higher than AL26 + AL27(differential). Heat pump: evaporator inlet NTC probe higher than AL33 + AL34 (differential). n stand-by or remote OFF: the evaporator inlet NTC probe higher than AL26+AL27 or AL33+AL34. |
| Restart | Automatic |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm Relay + and buzzer on |

AP1 ... AP8, APr1.. Apr2, APE1 .. APE8, APU1 .. APU4 PROBE FAILURE

| Label on alarm visualization menu | AP1 = PB1 probe alarmAP6 = PB6 regulator probe alarm APr1 = remote keyboard 1 alarm probeAPr2 = remote keyboard 2 alarm probe APE1 I/O expansion probe 1 alarmAPE8 I/O expansion probe 8 alarm APU1 expansion valve probe 1 alarm APU4 expansion valve probe 2 alarm |
|-----------------------------------|--|
| Reason | Probe configured but the read-out is not in the range |
| Reset | Probe not configured or probe in the right range |
| Restart | Automatic |
| Symbol | On the display the symbol $ \Delta $ is blinking |
| Action | Alarm Relay + and buzzer on |
| Loads | The behaviour of the load depend on witch probe is on error (regulation probe = all loads OFF; external temperature probe = only loads involved on this probe) |

APFL: solar panel flow alarm

| AFFL. Solar parier flow diarrif | | |
|-----------------------------------|--|--|
| Label on alarm visualization menu | APFL solar panel flow alarm | |
| Origin | The flow switch alarm is not detecded for AL69 seconds starting from water pump activation. Flow switch alarm is signalled if the digital input is active for AL71 seconds. | |
| Reset | Automatic reset: digital input not active for AL72 seconds. Manual reset: Reset procedure in Menu function | |
| Type of alarm | Automatic if flow switch digital input activation < AL70 + AL71 Manual if Automatic if flow switch digital input activation > AL70 + AL71 | |
| Symbol | On the display the symbol $	ext{Λ}$ is blinking | |
| Action | Alarm Relay + and buzzer on only during normal running conditions. | |
| Loads | Solar panel water pump OFF | |

| ArtC Clock alarm | |
|-----------------------------------|--|
| Label on alarm visualization menu | ArtC (clock alarm) |
| Origin | Wrong setting |
| Reset | After clock adjustement |
| Restart | Manual in function menu |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Loads | Not changed |
| Energy saving | Disabled if controlled by RTC |
| Unit ON/OFF | Disabled if controlled by RTC |

| ArtF Clock failure | |
|-----------------------------------|-------------------------|
| Label on alarm visualization menu | ArtF (clock failure) |
| Origin | Clock failure |
| Reset | Replace the instrument |
| Restart | Manual in function menu |

| Symbol | On the display the symbol $	ext{Δ}$ is blinking |
|---------------|--|
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Loads | Not changed |
| Energy saving | Disabled if controlled by RTC |
| Unit ON/OFF | Disabled if controlled by RTC |

ASAn Domestic hot water pump mintenance

| AOAH Domoodo not water pump mintenance | | |
|--|--|--|
| Label on alarm visualization menu | ASAn (Domestic hot water pump maintenance) | |
| Origin | Pump running hours > Hour counter setpoint | |
| Reset | Hour reset in function menu | |
| Restart | Manual | |
| Symbol | On the display the symbol $	ext{Δ}$ is blinking | |
| Action | Alarm relay + buzzer ON | |
| Regulation | | |
| Action | Only display warning messages | |
| Loads | Not changed | |

ASLA Failed Communication With I/O Expansion

| Label on alarm visualization menu | ASLA |
|-----------------------------------|---|
| Origin | Failed communication with I/O expansion |
| Reset | Automatic when the communication is working |
| Restart | Automatic |
| Symbol | ⚠ blinking |
| Action | Alarm relay + buzzer ON |
| Regolatori | |
| Loads | OFF |

ASUn Solar panel water pump mintenance

| Label on alarm visualization menu | ASUn (Domestic hot water pump maintenance) |
|-----------------------------------|--|
| Origin | Pump running hours > Hour counter setpoint |
| Reset | Hour reset in function menu |
| Restart | Manual |
| Symbol | On the display the symbol $ \Delta $ is blinking |
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Action | Only display warning messages |
| Loads | Not changed |

AtAS Domestic hot water pump overload alarm

| Label on alarm visualization menu | AtAS (domestic hot water pump overload) |
|-----------------------------------|---|
| Origin | Digital input active |
| Reset | Digital input not active |

| Restart | Automatic reset if number of alarms per hour < AL75. Manual reset if number of alarms per hour = AL75 (reset procedure in function menu). |
|---------|--|
| Symbol | On the display the symbol Λ is blinking |
| Action | Alarm relay + buzzer ON |
| Loads | Domestic hot water pump OFF |

AtC1 - AtC2 Condenser pump overload alarm

| ALOI ALOE GONGONOCI | pamp overload dialim |
|---------------------|--|
| Label on alarm | AtC1 (overload pump alarm of condenser 1) |
| visualization menu | AtC2 (overload pump alarm of support condenser 2) |
| Origin | Active ID when it is configured as overload pump of condenser 1 |
| _ | Active ID when it is configured as overload pump of condenser 2. |
| Reset | With active digital input |
| Restart | Manual (reset procedure in function menu). |
| Symbol | On the display the symbol $ \Delta $ is blinking |
| Action | Alarm relay + buzzer ON |
| Loads | Condenser water pump and compressors OFF |

AtE1 - AtE2 Evaporator pump overload alarm

| Label on alarm visualization menu | AtE1 (overload pump alarm of evaporator 1) AtE2 (overload pump alarm of support evaporator 2) |
|-----------------------------------|--|
| Origin | Active ID when it is configured as overload pump of evaporator 1 Active ID when it is configured as overload pump of support evaporator 2. |
| Reset | With active digital input |
| Restart | Manual (reset procedure in function menu). |
| Symbol | On the display the symbol $	ext{Δ}$ is blinking |
| Action | Alarm relay + buzzer ON |
| Loads | Evaporator water pump and compressors OFF |

AtHS Domestic hot water heaters overload alarm

| There is a contract of the contract of the | the Democratic field material resource and the field material field fiel | |
|--|--|--|
| Label on alarm visualization menu | AtHS (domestic hot water heaters overload) | |
| Origin | Digital input active | |
| Reset | Digital input not active | |
| Restart | Manual (reset procedure in function menu) | |
| Symbol | On the display the symbol Δ is blinking | |
| Action | Alarm relay + buzzer ON | |
| Loads | Sanitay heaters OFF | |

Atr1 REMOTE TERMINAL 1 (VICX620) COMMUNICATION ALARM

| Label on alarm visualization menu | Atr1 (communication alarm with remote terminal 1) Atr2 (communication alarm with remote terminal 1) |
|-----------------------------------|---|
| Origin | Absence of serial communication with remote keyboard n°1 |
| Reset | When the serial communication works properly |
| Restart | Automatic |
| Symbol | |
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Loads | OFF it the remote terminal has internal probe and it is the regulation probe |

AtSF: supply fan overload alarm

| Label on alarm visualization menu | AtSF: Overload alarm of the supply fan |
|-----------------------------------|---|
| Origin | CF01=0: After on fan when the ID is activated for AL15 time. After on pump when the ID is activated for AL17. |
| Reset | Digital input not active for AL18 time |
| Restart | Automatic – Manual if the digital input is active for AL16 seconds (Reset procedure in Menu function). |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer ON |
| Loads | OFF |

MANUAL RESET OF THE OVERLOAD ALARM OF THE SUPPLY FAN

If the digital input is active for AL16 seconds it is necessary to restart manually the unit (reset procedure in larm Menu with blinking label **Reset** if the alarm is not active from Al18 otherwise label **Active** (can not be reset)). Push SET key to reset the alarm, the label disappears, the fan restarts and the alarm is by-passed for AL15 time delay to allow the start-up if within this interval the alarm does not appear again.

AUAL Failed Communication With Electronic Expansion Valve

| Label on alarm visualization menu | AUAL |
|-----------------------------------|--|
| Origin | Failed communication with electronic expansion valve |
| Reset | Automatic when the communication is working |
| Restart | Automatic |
| Symbol | ⚠ blinking |
| Action | Alarm relay + buzzer ON |
| Regolatori | |
| Loads | OFF |

| AtrE: REMOTE TERMINAL VISOGRAPH 2.0 COMMUNICATION ALARM | |
|---|--|
| Label on alarm visualization menu | AtrE |
| Origin | Absence of serial communication with remote keyboard Visograph 2.0 |
| Reset | When the serial communication works properly |
| Restart | Automatic |
| Symbol | ⚠ blinking |
| Action | Alarm relay + buzzer ON |
| Regulation | |
| Loads | OFF it the remote terminal has internal probe and it is the regulation probe |

b1AC - b2AC - b1Ac - b2Ac Antifreeze alarm / Low outlet temperature (Air / Air unit in Chiller mode)

| Label on alarm | b1AC (anti-freeze alarm of the circuit #1 in chiller) |
|--------------------|---|
| visualization menu | b2AC (anti-freeze alarm of the circuit #2 in chiller) |
| | b1Ac (anti-freeze alarm signalling of the circuit #1 in chiller) |
| | b2Ac (anti-freeze alarm signalling of the circuit #2 in chiller) |
| | Both the labels are displayed when the alarm is coming from the evaporator |
| | inlet probe or evaporator common outlet probe or when there is only one digital |
| | input configured. |

| Origin | Normal conditions, stand-by, remote OFF: when the anti-freeze probe value is lower than AL26 for AL28 seconds. With the anti-freeze digital input is active. |
|---------|---|
| Reset | When the anti-freeze digital input is active. When the anti-freeze probe value is higher than A26+ AL27(differential) With the anti-freeze digital input is active. |
| Restart | Automatic – Manual after AL29 events per hours (Reset procedure in Menu function). If AL74=1 to reset the alarm is necessary to type the password |
| Symbol | On the display the symbol \triangle is blinking |
| Action | If AL30=0 only the compressors are turned off and than display shows b1Ac b2Ac , the buzzer and the alarm relay are not activated. If AL30=0 only the compressors are turned off and than display shows b1Ac b2Ac , the buzzer and the alarm relay are activated. If the alarm comes from the digital input also the anti-freeze heaters are turned on. |

b1AH - b2AH Anti-freeze alarm / Low outlet air temperaure(Air/Air unit only) on heat pump mode

| Label on alarm | b1AH (anti-freeze alarm of the circuit #1 in heat pump) |
|--------------------|---|
| visualization menu | b2AH (anti-freeze alarm of the circuit #2 in heat pump) |
| | b1Ah (anti-freeze alarm signalling of the circuit #1 in heat pump) |
| | b2Ah (anti-freeze alarm signalling of the circuit #2 in heat pump) |
| | Both the labels are displayed when the alarm is coming from the evaporator |
| | inlet probe or evaporator common outlet probe or when there is only one digital input configured. |
| Origin | Normal conditions, stand-by, remote OFF: when the anti-freeze probe value is lower than AL33 for AL36 seconds. With the anti-freeze digital input is active. |
| Reset | When the anti-freeze probe value is higher than AL33 + AL34. With digital input ont active |
| Restart | Automatic – Manual after AL37 events per hour (Reset procedure in Menu function). |
| | If AL74=1 to reset the alarm is necessary to type the password |
| Symbol | On the display the symbol Δ is blinking |
| Action | If AL38=0 only the compressors are turned off and than display shows b1Ah - b2Ah , the buzzer and the alarm relay are not activated. |
| | If AL38=0 only the compressors are turned off and than display shows b1AH - b2AH , the buzzer and the alarm relay are activated. |
| | If the alarm comes from the digital input also the anti-freeze heaters are turned on. |

Attention

Par. AL35 anti-freeze alarm delay (low outlet air temperature air/air unit) when the unit starts in heat pump mode

In stand-by or remote OFF: there is an anti-freeze alarm and the time delay in AL35>0, if the unit is manually turned on in heat pump from keyboard or remote input, the alarm is reset so the unit can start at least for the time set in AL35 in order to heat the water or the air. After the AL35 delay if the anti-freeze probe is still lower than AL33 setpoint for AL36 seconds the unit is locked again with an anti-freeze alarm.

b1Cu - b2Cu Unloading disabled from High condensing temperature / pressure in chiller

| Label on alarm visualization menu | b1CU (unloading high temperature from condenser of the circuit 1) b2CU (unloading high temperature from condenser of the circuit 2) |
|-----------------------------------|---|
| Visualization menu | bzco (unloading high temperature from condenser of the circuit 2) |
| Origin | When the temperature/pressure of condenser probe control is higher then |
| | CO44 |
| Reset | When the temperature/pressure of condenser probe is lower than CO44 – CO45 (differential) |
| | After unloading is activated and after Par. CO47 |

| Restart | Automatic |
|---------|--|
| Symbol | On the display the symbol $ \Delta $ is blinking |
| Action | Alarm relay + buzzer OFF |

| b1Cu – b2Cu: Unloading from low condensing temperature / pressure in Heat pump | |
|--|---|
| Label on alarm | b1CU (unloading message from condenser 1) |
| visualization menu | b2CU (unloading message from condenser 2) |
| Origin | During normal running condition when the temperature/pressure of evaporator/condenser probe is lower than < CO46 setpoint |
| Reset | when the temperature/pressure of evaporator/condenser probe value is higher than CO46 + CO47 |
| | After unloading is activated and after Par. CO48 |
| Restart | Automatic |
| Symbol | On the display the symbol $	riangle$ is blinking |
| Action | Alarm relay + buzzer OFF |

| b1dF - b2dF Defrost alarm | |
|-----------------------------------|--|
| Label on alarm visualization menu | b1dF (Defrost alarm of the circuit 1) b2dF (Defrost alarm of the circuit 2) |
| Origin | Only in defrost if DF01 = 1,3 (defrost en temperature/pressure or external contact): when the defrost ends after the DF05 timeout. |
| Reset | Stand - by or remote ON-OFF. Next defrost ends for temperature/pressure. |
| Restart | Automatic if next defrost ends for temperature/pressure, otherwise manual. |
| Symbol | On the display the symbol $	ext{Δ}$ is blinking |
| Action | Alarm relay + buzzer OFF |

| b1HP - b2HP High Pre | b1HP - b2HP High Pressure switch circuit 1 and 2 | |
|----------------------|--|--|
| Label on alarm | b1HP (high pressure switch circuit #1) | |
| visualization menu | b2HP (high pressure switch circuit #2) | |
| Reason | The unit is running and the digital input of the high pressure switch is active | |
| Reset | Digital input not active | |
| Restart | Reset procedure in Menu function | |
| | Always manual AL54 = 0 | |
| | Always automatic AL54 =16 | |
| | From manual to utomatic if AL54 value is between 1 and 15 | |
| Symbol | On the display the symbol $	riangle$ is blinking | |
| Action | Alarm Relay + and buzzer on | |
| Regulation | | |
| Condensing fan | If FA02=0 the fan is forced at maximum speed for 60 seconds then switched off | |
| | If FA02=1 the fan is forced at maximum speed for 60 seconds then regulate according to normal fan regulation | |

b1hP - b2hP High pressure / Condensing High temperature of the Circuit

| | b1hP (high pressure digital input of the circuit #1) b2hP (high pressure digital input of the circuit #2) |
|--------|---|
| Origin | In chiller or heat pump, if the condensing probe is higher than AL09 setpoint. |

| Reset | If the condensing probe value is lower than AL09 –AL10 (differential) |
|----------------|--|
| Restart | Reset procedure in Menu function. |
| | Always manual AL54 = 0 |
| | Always automatic AL54 =16 |
| | From manual to utomatic if AL54 value is between 1 and 15 |
| Symbol | On the display the symbol |
| Action | Alarm Relay + and buzzer on |
| Regulation | |
| Condensing fan | If FA02=0 the fan is forced at maximum speed for 60 seconds then switched off |
| | If FA02=1 the fan is forced at maximum speed for 60 seconds then regulate according to normal fan regulation |

| b1lp - b2lp Low tempera | ature / Low Condensing pressure of the Circuit |
|-------------------------|---|
| Label on alarm | b1IP (low pressure digital input of the circuit 1) |
| visualization menu | b2IP (low pressure digital input of the circuit 2) |
| Origin | When the condensing probe value is lower than AL03 setpoint if: |
| | In chiller or heat pump |
| | Stand-by o remote OFF when AL08 = 1 |
| | In defrost when AL06=1 |
| | The alarm is not signalled if: |
| | In defrost ,for the time AL07, when the 4-way valve is turned on. |
| | For the time set in AL01 after turning on the compressor. |
| Reset | When the condensing probe temperature is higher than AL03 + AL04 |
| | (differential) |
| Restart | Automatic- Manual after AL05 events per hour (Reset procedure in Menu |
| | function). |
| Symbol | On the display the symbol $	ext{Λ}$ is blinking |
| Action | Alarm Relay + and buzzer on |

| b1LP - b2LP low pressure switch circuit #1 or 2 | |
|---|---|
| Label on alarm visualization menu | b1LP (low pressure switch circuit #1) b2LP (low pressure switch circuit #2) |
| Origin | With the digital input is active If AL08=1, also in stand-by or remote OFF, when the low pressure switch input is active. In defrost if AL06=1 when the compressor low pressure switch input is active. The alarm is not signalled if: In defrost for the time AL07 when the 4-way valve is activated. During the AL01 delay after turning on the compressor. |
| Reset | Digital input not active |
| Restart | Automatic - Manual after AL05 events per hour (Reset procedure in Menu function) |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm Relay + and buzzer on |

| b1lp - b2lp Low evaporating pressure of the circuit (with pressure transducers only) | |
|--|--|
| Label on alarm | b1IP (low evaporator pressure from analogue input #1) |
| visualization menu | b2IP (low evaporator pressure from analogue input #2) |

| Origin | The alarm is activated when at least one of the probes , configured as evaporating control, is lower than AL03 setpoint if: In chiller or heat pump mode; Stand-by or remote OFF when AL08 = 1 In defrost when AL06=1 The alarm is not signalled if: In defrost, for the time AL07, when the 4-way valve is turned on. For the time set in AL01 after turning on the compressor. | |
|---------|---|--|
| Reset | When the condensing probe temperature is higher than AL03 + AL04 (differential) | |
| Restart | Automatic- Manual after AL05 events per hour (Reset procedure in Menu function). | |
| Symbol | On the display the symbol Δ is blinking | |
| Action | Alarm Relay + and buzzer on | |

<u>ATTENTION</u> When the pressure transducers are configured the low pressure alarms are related only to transducer values.

| b1PH - b2PH: Pump Dov | n stop alarm from pressure switch / Low pressure switch | | | |
|-----------------------|--|--|--|--|
| Label on alarm | b1PH (Pump down stop alarm of the circuit 1) | | | |
| visualization menu | b2PH (Pump down stop alarm of the circuit 2) | | | |
| Origin | Pressure switch: if CO36 = 1,2,3,4 and ID not active, the pump down stops because of the timeout CO39. Transducer: if CO36 = 1,2,3,4 and the set CO37 is not reached: the pump stops because of the timeout CO39. | | | |
| Reset | From thermoregulation start-up and ID not active From thermoregulation start-up with evaporating pressure higher than CO37 + CO38 (differential) | | | |
| Restart | Automatic – Manual and logged after AL21 events per hour (reset procedure in function menu). | | | |
| Symbol | On the display the symbol $ \Delta$ is blinking | | | |
| Action | Alarm relay + buzzer ON when it becomes manual | | | |

b1PL - b2PL Alarm during the Pump Down start-up from pump down pressure switch / Low pressure transducer

| Label on alarm visualization menu | b1PL (pump down alarm in start-up of circuit 1) b2PL (pump down alarm in start-up of circuit 2) | | |
|-----------------------------------|---|--|--|
| Origin | Pump down pressure switch: CO36 = 1, 2, 3, 4 and compressors start-up and digital input not active for the time set in CO39 Pump down transducer: CO36 = 1, 2, 3, 4, compressors start-up and the set CO37 is not reached in the interval time CO39. | | |
| Reset | From thermoregulation start-up and ID not active From thermoregulation start-up with evaporating pressure higher than CO37 + CO38 (differential) | | |
| Restart | Automatic - Manual and logged after AL21 events per hour if AL23=1 (reset procedure in function menu). If AL23 = 0 it is automatic and not logged. | | |
| Symbol | On the display the symbol Δ is blinking | | |
| Action | Alarm relay + buzzer ON when it becomes manual | | |

b1rC - b2rC recovery disabled from high condensing temperature/pressure in Chiller

| Label on alarm | b1rC (recovery disabled message from circuit 1) |
|--------------------|--|
| visualization menu | b2rC (recovery disabled message from circuit 2) |

| Origin | In normal running condition when the temperature/pressure probe value is higher than the set rC06 |
|---------|---|
| Reset | When the temperature/pressure probe value is lower than the rC06 – rC07(differential) Unloading start after the time delay Par. rC08 |
| Restart | Automatic |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm relay + buzzer OFF |

b1tF- b2tf Condenser fan overload alarm

| Label on alarm visualization menu | b1tF (Condenser fan overload alarm of the circuit #1) b2tF (Condenser fan overload alarm of the circuit #2) | | | |
|-----------------------------------|---|--|--|--|
| Origin | hen the digital input is active | | | |
| Reset | hen the digital input is not active | | | |
| Restart | Manual (reset from the function menu) | | | |
| Symbol | On the display the symbol $	riangle$ is blinking | | | |
| Action | Alarm relay + buzzer ON | | | |

b1UA, b2UA Expansion valve 1 or Expansion Valve 2 Alarm

| Label on alarm visualization menu | b1UA (expansion valve 1 alarm) b2UA (expansion valve 2 alarm) | |
|-----------------------------------|---|--|
| Origin | When the electronic expansion valve is on alarm | |
| Reset | Automatic when the alarm is solved | |
| Restart | Automatic | |
| Symbol | ⚠ blinking | |
| Action | Alarm relay + buzzer ON | |
| Regolatori | | |
| Loads | Load of the circuit OFF | |

C1dt - C2dt - C3dt - C4dt - C5dt - C6dt High compressor discharge temperature alarm

| Label on alarm visualization menu | C1dt (High discharge temperature of the compressor 1)C6dt (High discharge temperature of the compressor 6) | | | |
|-----------------------------------|--|--|--|--|
| Origin | The compressor discharge temperature is higher than AL39 setpoint. ATTENTION The display resolution is 0.1°C until the read out is 00.0, ever 100°C it is 1°C. | | | |
| | The display resolution is 0.1°C until the read-out is 99.9, over 100°C it is 1°C. | | | |
| Reset | If the probe value of the high discharge temperature is lower than "AL39 - AL40 (differential)" | | | |
| Restart | Automatic. Manual when there are AL41 per hour (Reset procedure in Menu function). | | | |
| Symbol | On the display the symbol Δ is blinking | | | |
| Action | Alarm Relay and buzzer on | | | |
| Compressor involved | OFF | | | |

| 04110 | COLID | OALID | OHID | OFLID | 00110 | |
|---------|-------|-----------|----------|--------|-------------------------------------|-----|
| (:1HP - | CHP | - C.XHP - | . (.AHP- | CSHP = | - C6HP compressor high pressure ala | rms |

| | C1HP (compressor 1 high pressure alarm) – C6HP (compressor 6 high pressure alarm) |
|--------|--|
| Origin | The unit is running and the digital input of the compressor high pressure switch is active |
| Reset | Digital input not active |

| Restart | Reset procedure in Menu function | | | |
|----------------|--|--|--|--|
| | Reset procedure in Menu function | | | |
| | Always manual AL54 = 0 | | | |
| | Always automatic AL54 =16 | | | |
| | From manual to utomatic if AL54 value is between 1 and 15 | | | |
| Symbol | On the display the symbol | | | |
| Action | Alarm Relay + and buzzer on | | | |
| Regulation | | | | |
| Condensing fan | If FA02=0 the fan is forced at maximum speed for 60 seconds then switched off | | | |
| | If FA02=1 the fan is forced at maximum speed for 60 seconds then regulate according to normal fan regulation | | | |

| C1Mn - C2Mn - C3Mn - C4Mn - C5Mn - C6Mn -Compressor maintenance |
|---|
|---|

| Label on alarm visualization menu | C1Mn (Compressor 1 maintenance)C6Mn (Compressor 6 maintenance) | | | | | |
|-----------------------------------|--|--|--|--|--|--|
| Origin | Compressor running hours > Hour counter setpoint | | | | | |
| Reset | Hour reset in function menu | | | | | |
| Restart | Manual | | | | | |
| Symbol | On the display the symbol Λ is blinking | | | | | |
| Action | Alarm relay + buzzer ON | | | | | |
| Regulation | | | | | | |
| Action | Only display warning messages | | | | | |
| Loads | Not changed | | | | | |

| C10P - C20P - C30P - C4 | op Coop = Coop Pressure switch alarm / C | compressor on |
|-------------------------|--|---------------|
| | | |

| Label on alarm visualization menu | C1oP (Compressor 1pressure switch C6oP (Compressor 6 pressure switch) |
|-----------------------------------|---|
| Origin | The alarm is not signalled: during the AL01 delay after turning on the compressor, during the AL12 delay that starts after the AL11 delay when the unit is properly running |
| Reset | Digital input not active |
| Restart | Automatic - Manual after AL013 events per hour (Reset procedure in Menu function). If AL76=1 the alarm is only a warning and the compressor remains on |
| Symbol | On the display the symbol Δ is blinking |
| Action | Alarm Relay + and buzzer on |

OIL ALARM FROM PRESSOSTAT SWITCH OR OIL LEVEL SWITCH (screw)

Occasionally it is possible to find both the safety systems, the delay, the active input duration and the number of events per hour allow to set-up both the protections.

Par. AL11 Oil alarm delay after on compressor.

It allows to set a time delay before signalling the oil or the oil level switch alarms after the on compressor.

Par. AL12 Duration of the pressure switch / oil level switch in normal operating conditions.

Duration of the oil level switch activation during normal running condition.

It allows to set the time delay before signalling the alarm. **AL11** defines the delay counting, it helps to override the low pressure or the low oil level determined, for example, by a new partialization step of the compressor itself.

Par. AL13 Maximum number of alarm events per hour.

It determs the maximum number of alarm events before switching the restart from automatic to manual.

| C1PD - C2PD - COMPR | ESSOR OIL DIFFERENTIAL PRESSURE |
|-----------------------------------|---|
| Label on alarm visualization menu | C1Pd (compressor 1) C2Pd (compressor 2) |
| Origin | Pistons compressor: Compressor oil pressure – evaporating pressure < AL78 Screw compressor: Condensing pressure – compressor oil pressure > AL78 |
| Reset | Pistons compressor: Compressor oil pressure – evaporating pressure > AL78 + AL79 Screw compressor: Condensing pressure – compressor oil pressure < AL78 - AL79 |
| Restart | Automatic – Manual after AL80 events per hour (Reset procedure in Menu function). |
| Symbol | On the display the symbol $	riangle$ is blinking |
| Action | Alarm Relay and buzzer on |
| Compressor / circuit involved | OFF If more than one compressor is configured in the circuressors are OFF |

C1tr - C2tr - C3tr - C4tr - C5tr - C6tr Compressor overload alarm

| 0111 - 0211 - 0311 - 0411 - | Coli - Coli Compressor overioad alarm | | | | | | |
|-----------------------------------|--|--|--|--|--|--|--|
| Label on alarm visualization menu | C1tr (Compressor 1 overload alarm)C6tr (Compressor 6 overload alarm) | | | | | | |
| Origin | With active digital input. | | | | | | |
| | The alarm is not detected within the AL19 time delay after the on compressor | | | | | | |
| Reset | When the digital input is not active | | | | | | |
| Restart | AL77=0: | | | | | | |
| | Manual reset in Alrm menu if AL20=1÷16 | | | | | | |
| | Manual reset in cOtr menu; if AL20=0 or number of alarm per hour = AL20, password is requested | | | | | | |
| | AL77=1: | | | | | | |
| | Automatic reset if the number of alarm per hour < AL20 or if AL20=16 | | | | | | |
| | Manual reset in Alrm menu if the nummer of alarm per hour = AL20 | | | | | | |
| Symbol | On the display the symbol $ \Delta $ is blinking | | | | | | |
| Action | Alarm relay + buzzer ON | | | | | | |
| Compressor involved | OFF if AL47=0 or AL47=1 | | | | | | |
| Compressor not involved | OFF if AL47=1 | | | | | | |

noL Keyaboard Alarm

| Label on alarm visualization menu | keyaboard Alarm description |
|-----------------------------------|--|
| noL | No data communication between the keyaboard and the regulator. |

Alarm relay and buzzer

Alarm relay / buzzer outputs

| Origin | Alarms still active Alarms not reset |
|-------------------|---|
| Reset relay alarm | Whitout alarms In stand- by or remote ON-O FF if AL42 = 1 |
| Buzzer silencing | By pushing one of the key of the front panel |

The alarm relay is enabled only by configurating the corresponding output resource.


48. MANUAL ALARMS

CONCEPT OF NUMBER OF ALARMS PER HOUR

For some alarms is possible to set a number of alarms per hour:

- if the alarm occours a number of time lower than the value set, the alarm is automatic reset
- if the alarm occours a number of time equal the value set, the alarm is manual reset

Each hour is divided in 16th intervals (each interval is 3600 / 16 = 225 seconds).



After the unit start-up, each interval is marked as "not active". During the interval counting, for 255seconds, if at least an alarm event appears, the interval itself is marked "Active".

Starting from the first interval the instrument calculates the 16 intervals and, at the end, it restats overwriting from the first.

In this way the last hour is always monitored and counted the active intervals. when the number of active intervals reaches the threshold set with the corresponding parameter the alarm becomes manual.

By setting the threshold (parameter)=0 the alarm is manual from its first activation while if the threshold=16 the alarm is always automatic .

49. ALARMS LIST

49.1 MACHINE ALARMS

| Alarm Code | Alarm description | Comp. | Anti freeze heaters Boiler | Support heaters | Evaporator Pump / Supply fan | Condenser Pump | Domestic hot water Water pump | Solar panel Water pump | Ventilaz. cond. Cir1 Cir2 | Auxiliary relay |
|------------------|--|---------|----------------------------------|--------------------|------------------------------------|-------------------|--|---------------------------------|---------------------------------|--------------------|
| ACF1 AC13 | Configuration alarm | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| ACFL | Condenser flow alarm | OFF | | | | OFF (3) | | | OFF | |
| AEE | Eeprom alarm | OFF | | | OFF | OFF | | | OFF | OFF |
| AEFL | Evaporator flow alarm | OFF | OFF (boiler) | | OFF (3) | | | | OFF | |
| AEht | High water temperature inlat evaporator | OFF | | | | | | | | |
| AEUn | Unloading signalling from high temp. of evaporator water | | | | | | | | | |
| AHFL | Domestic hot water flow switch alarm | OFF (6) | | | | OFF | OFF | | | |
| ALC1 | General alarm | OFF | | | OFF | OFF | OFF | OFF | OFF | |
| ALC2 | Genearl alarm type 2 | OFF (3) | | | OFF (3) | OFF (3) | OFF (3) | OFF (3) | OFF (3) | |
| ALOC | Generic alarm | OFF | | | OFF | OFF | | | OFF | OFF |
| ALSF | Phase sequence alarm | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| ALti | Low air temperature of the evaporator inlet (air / air unit) Alarm | | | | | | | | | |
| ALti | Low evaporator inlet temperature in air/air unit | | | | | | | | | |
| AP1 AP8 | Probe alarm | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) |
| APE1 APE8 | I/O Expansion probe alarm | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | |
| APFL | Solar panel flow switch alarm | OFF (6) | | | | | | OFF | OFF | |
| APr1 APr2 | Remote keyboard probe alarm | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) | OFF (1) |

| APU1 APU4 | IEV Electronic Expansion Valve probe alarm | (7) | (7) | (7) | (7) | (7) | (7) | (7) | (7) | |
|------------------|--|---------|---------------------|-----|-----|-----|-----|-----|-----|-----|
| ASLA | Serial communication failure with I/O expansion | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | |
| AtAS | Domestic hot water pump overload | OFF (6) | | | | | | | | |
| AtC1 | Condenser 1 water pump overload alarm | OFF (4) | | | | OFF | | | OFF | |
| AtC2 | Condenser 2 water pump overload alarm | OFF (4) | | | | OFF | | | OFF | |
| AtE1 | Evaporator 1 water pump overload alarm | OFF (4) | OFF (boiler) (5) | | OFF | | | | OFF | |
| AtE2 | Evaporator 2 water pump overload alarm | OFF (4) | OFF (boiler) (5) | | OFF | | | | OFF | |
| AtHS | Domestic hot water heaters overload | | | | | | | | | |
| AtSF | Fan supply overload alarm | OFF | | OFF | OFF | | | | OFF | |
| AUAL | Serial communication failure with IEV expansion valve driver | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | |
| AtrE | Remote terminal Visograph 2.0 communication alarm | (1) | (1) | (1) | (1) | (1) | (1) | (1) | (1) | (1) |
| Atr1 Atr2 | Remote terminal VI622 / TI620 communication alarm | (1) | (1) | (1) | (1) | (1) | (1) | (1) | (1) | (1) |

- (1) = if the probe is the regulation probe
- (2) = with probe configured as auxiliary relay control
- (3) = with manual alarm procedure
- (4) = Off compressors with only 1 water pump configured or with 2 pumps but both in alarm from the corresponding digital inputs.
- (5) = Boiler heaters off with only 1 water pump configured or with 2 pumps but both in alarm from the corresponding digital inputs (in this case the boiler heaters are on only with thermoregulation anti-freeze setpoint as evaporator protection function)
- (6) Compressors switched off in case of only production of domestic hot water
- (7) In case of expansion valve probe alarm all load of the circuit are OFF

49.2 CIRCUIT ALARM

| Alarm Code | Alarm description | Compressors of the circuit | Compressors of the other | Fan condensing of the circuit (<i>n</i>) | Fan condensing of the other |
|-----------------|--|----------------------------|--------------------------|--|-----------------------------|
| | | (n) | circuit | | circuit |
| b(n)AC | Anti-freeze in chiller of the circuit (n) | OFF | | OFF | |
| b(n)Ac | Anti-freeze circuit (n) message in chiller | | | | |
| b(n)AH | Anti-freeze in heat pump of the circuit (n) | OFF | | OFF | |
| b(<i>n</i>)Ah | Anti-freeze circuit (n) message in heat pump | | | | |
| b(<i>n</i>)Cu | Unloading from condenser high temp/press of the circuit (n) | | | | |
| b(<i>n</i>)Cu | Unloading from evaporator low temp/press of the circuit (n) | OFF | | OFF | |
| b(<i>n</i>)dF | Bad defrost circuit (n) | | | | |
| b(<i>n</i>)ds | Circuit (n) disabled from keyboard | OFF | | OFF | |
| b(n)HP | High pressure switch of the circuit (n) | OFF | | OFF after 60 seconds | |
| b(<i>n</i>)hP | High condensing pressure of the circuit (n) | OFF | | OFF after 60 seconds | |
| b(<i>n</i>)hP | High condensing temperature from NTC of the circuit (n) | OFF | | OFF after 60 seconds | |
| b(<i>n</i>)LP | Low pressure switch of the circuit (n) | OFF | | OFF | |
| b(n)LP | Low condensing pressure - (evaporating with low pressure transducer) with transducer of the circuit of the (n) | OFF | | OFF | |
| b(n)IP | Low condensing temperature NTC circuit (n) | OFF | | OFF | |
| b(<i>n</i>)PH | Pump down alarm in stop regulation of the circuit (n) | OFF | | OFF | |
| b(<i>n</i>)PL | Pump down in regulation start-up of the circuit (n) | OFF | | OFF | |
| b(n)rC | Recovery function disabled in circuit (n) | | | | |
| b(<i>n</i>)tF | Fan overload circuit (n) | OFF | | OFF | |
| b(<i>n</i>)UA | Expansion valve 1 or valve 2 alarm (n) | OFF | | OFF | |

(n) identifies the circuit 1 or 2

49.3 COMPRESSOR ALARM

| Alarm Code | Alarm description | Compressor (n) | Compressors not involved |
|---------------|--|----------------|--------------------------|
| C(n)dS | Compressor (n) disabled from keyboard | OFF | |
| C(n)dt | Compressor high discharge temperature | OFF | |
| C(n)HP | Compressor(n) high pressure switch | OFF | |
| C(n)oP | Compressor(n) oil pressure switch / Oil level switch | OFF | |
| C(n)Pd | Compressor oil differential | OFF | |
| C(n)tr | Compressor(n) overload | OFF | |

(n) identifies the compressor 1, 2, 3, 4, 5, 6

49.4 WARNING

| Alarm Code | Alarm description | | | |
|---------------|---|--|--|--|
| noL | Link problem between the Ichill and the remote keyboard | | | |
| AEP1 | Evaporator 1 water pump maintenance | | | |
| AEP2 | Evaporator 2 water pump maintenance support | | | |
| ACP1 | Condenser 1 water pump maintenance | | | |
| ACP2 | Condenser 2 water pump maintenance | | | |
| ASAn | Domestic hot water pump maintenance | | | |
| ASUn | Solar panel water pump maintenance | | | |
| ArtC | Clock to be set | | | |
| ArtF | Clock failure | | | |
| C(n)Mn | Compressor(n) maintenance | | | |

50. ANALOG AND DIGITAL OUTPUT CONFIGURATION

50.1 ICHILL INPUT / OUTPUT CONFIGURATION

Analog input Pb1 - Pb2 - Pb5 - Pb6

- 0. Not enabled
- 1. Temperature probe PTC for compressor 1 discharge
- 2. Temperature probe **PTC** for compressor 2 discharge
- 3. Temperature probe PTC for compressor 3 discharge
- 4. Temperature probe **PTC** for compressor 4 discharge
- 5. Not used
- 6. Not used
- 7. Temperature probe **PTC** for solar panel
- 8. Temperature probe **NTC** for evaporator inlet
- 9. Temperature probe NTC for evaporator 1 outlet
- 10. Temperature probe NTC for evaporator 2 outlet
- 11. Temperature probe NTC for common evaporator outlet
- 12. Temperature probe NTC for common hot water condenser / recovery inlet
- 13. Temperature probe NTC for hot water of the condenser / recovery circuit 1 inlet
- 14. Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 inlet
- 15. Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 outlet
- 16. Temperature probe NTC for hot water of the condenser / recovery circuit 2 outlet
- 17. Temperature probe **NTC** for hot water of the condenser / recovery common outlet
- 18. Temperature probe NTC for free cooling water inlet circuit
- 19. Temperature probe NTC for dynamic setpoint external air / boiler / change over
- 20. Temperature probe NTC for combined defrost circuit 1
- 21. Temperature probe NTC for combined defrost circuit 2
- 22. Temperature probe NTC for auxiliary output 1
- 23. Temperature probe NTC for auxiliary output 2
- 24. Temperature probe NTC domestic hot water 1
- 25. Temperature probe NTC domestic hot water 2
- 26. Temperature probe NTC solar panel
- 27. Temperature probe **NTC** recovery function
- 28. Temperature probe NTC for condensing circuit 1
- 29. Temperature probe NTC for condensing circuit 2

After the number 28 the configuration can be selected from **o 1** to **c75** that allows to set an analogue input as digital input (see polarity of the digital input/outputs).

Analog input Configuration Pb3 - Pb4

- 0 Not enabled
- 1 Temperature probe **PTC** for compressor 1 discharge
- 2 Temperature probe PTC for compressor 2 discharge
- 3 Temperature probe **PTC** for compressor 3 discharge
- 4 Temperature probe **PTC** for compressor 4 discharge
- 5 Not used
- 6 Not used
- 7 Temperature probe **PTC** for solar panel
- 8 Temperature probe **NTC** for evaporator inlet
- 9 Temperature probe **NTC** for evaporator 1 outlet
- 10 Temperature probe **NTC** for evaporator 2 outlet
- 11 Temperature probe NTC for common evaporator outlet
- 12 Temperature probe **NTC** for common hot water condenser / recovery inlet
- 13 Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 inlet
- 14 Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 inlet
- 15 Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 outlet
- 16 Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 outlet
- 17 Temperature probe NTC for hot water of the condenser / recovery common outlet
- 18 Temperature probe **NTC** for free cooling water inlet circuit

- 19 Temperature probe NTC for dynamic setpoint external air / boiler / change over
- 20 Temperature probe NTC for combined defrost circuit 1
- 21 Temperature probe NTC for combined defrost circuit 2
- 22 Temperature probe NTC for auxiliary output 1
- 23 Temperature probe NTC for auxiliary output 2
- 24 Temperature probe NTC domestic hot water 1
- 25 Temperature probe **NTC** domestic hot water 2
- 26 Temperature probe NTC solar panel
- 27 Temperature probe **NTC** recovery function
- 28 Condenser probe circuit 1 (temperature NTC / pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 29 Condenser probe circuit 2 (temperature NTC / pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 30 Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 31 Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 32 Aux 1 output probe control (4÷20 mA / ratio-metric 0÷ 5Volt)
- 33 Aux 2 output probe control (4÷20 mA / ratio-metric 0÷5Volt)
- 34 Dynamic setpoint probe (4÷20 mA)
- 35 Compressor 1 or circuit 1 pressure probe
- 36 Compressor 2 or circuit 2 pressure probe

After the number 35 the display read-out goes from "o 1" to "c75 that allows to set an analogue input as digital input (see polarity input of digital inputs).

Digital Input Configuration Id1 - Id11

- 0. Not enabled
- 1. Remote ON / OFF
- 2. Remote chiller / heat pump
- 3. Flow switch/ Supply fan overload
- 4. Flow switch of heated side
- 5. Antifreeze heater circuit 1
- 6. Antifreeze heater circuit 2
- 7. High pressure switch circuit 1
- 8. High pressure switch circuit 2
- 9. Low pressure switch circuit 110. Low pressure switch circuit 2
- 10. Low pressure switch circuit 2
- 11. Compressor 1 high pressure12. Compressor 2 high pressure
- 13. Compressor 3 high pressure
- 14. Compressor 4 high pressure
- 15. Not used
- 16. Not used
- 17. Compressor 1 overload
- 18. Compressor 2 overload
- 19. Compressor 3 overload
- 20. Compressor 4 overload
- 21. Not used
- 22. Not used
- 23. Condenser fan overload of circuit 1
- 24. Condenser fan overload of circuit 2
- 25. Condenser fan overload of circuit 1 and 2 (comun)
- 26. Water pump overload of evaporator 1
- 27. Water support pump overload of evaporator
- 28. Water pump overload of condenser 1
- 29. Water support pump overload of condenser
- 30. Recovery request circuit 1
- 31. Recovery request circuit 2
- 32. Start/End defrost circuit 1
- 33. Start/End defrost circuit 2
- 34. Energy Saving
- 35. Pressure switch / compressor 1 oil
- 36. Pressure switch / compressor 2 oil
- 37. Pressure switch / compressor 3 oil
- 38. Pressure switch / compressor 4 oil
- 39. Not used

- 40. Not used
- 41. Pump down pressure switch of circuit 1
- 42. Pump down pressure switch of circuit 2
- 43. Generic alarm from digital input with stop regulation n° 1
- 44. Generic alarm from digital input with stop or signal regulation n° 2
- 45. Operation working mode: by RTC or keyboard
- 46. Operation mode with supplay fan only
- 47. Digital input of thermoregulation request (condensing unit)
- 48. Digital input of cooling request (condensing unit)
- 49. Digital input of heating request (condensing unit)
- 50. Request step 2 (condensing unit)
- 51. Request step 3 (condensing unit)
- 52. Request step 4 (condensing unit)
- 53. Request step 5 (condensing unit)
- 54. Request step 6 (condensing unit)
- 55. Request step 7 (condensing unit)
- 56. Request step 8 (condensing unit)
- 57. Request step 9 (condensing unit)
- 58. Request step 10 (condensing unit)
- 59. Request step 11 (condensing unit)
- 60. Request step 12 (condensing unit)
- 61. Request step 13 (condensing unit)
- 62. Request step 14 (condensing unit)
- 63. Request step 15 (condensing unit)
- 64. Request step 16 (condensing unit)
- 65. Domestic hot water flow switch
- 66. Solar panel flow switch
- 67. Only domestic hot water
- 68. Domestic hot water heaters overload
- 69. Domestic hot water pump overload
- 70. Domestic hot water second set point
- 71. Phase sequence alarm
- 72. Domestic hot water priority
- 73. Free cooling water pump flow switch
- 74. Expansion valve 1 alarm
- 75. Expansion valve 2 alarm
- 76. Condenser antifreeze alarm circuit n° 1
- 77. Condenser antifreeze alarm circuit n° 2
- 78. Compressor 1 of condensing unit
- 79. Compressor 2 of condensing unit
- 80. Compressor 3 of condensing unit
- 81. Compressor 4 of condensing unit
- 82. Not used
- 83. Not used
- 84. First compressor circuit 1 of condensing unit
- 85. Second compressor circuit 1 of condensing unit
- 86. Third compressor circuit 1 of condensing unit
- 87. Fourth compressor circuit 1 of condensing unit
- 88. Not used
- 89. First compressor circuit 2 of condensing unit
- 90. Second compressor circuit 2 of condensing unit
- 91. Third compressor circuit 2 of condensing unit
- 92. Common circuit recovery request
- 93. Unloading circuit 1
- 94. Unloading circuit 2

Digital Output (relay) Configuration RL1- RL8

- 0. Not enabled
- 1. Alarm
- 2. Evaporator water pump / Supply fan
- Support water pump of the evaporator

- 4. Evaporator anti-freeze heater circuit 1
- 5. Evaporator anti-freeze heater circuit 2
- 6. Supply / boiler heaters circuit 1
- 7. Supply / boiler heaters circuit 2
- 8. Condenser anti-freeze heater circuit 1
- 9. Condenser anti-freeze heater circuit 2
- 10. Water pump of the condenser recovery circuit
- 11. Support water pump of the condenser recovery circuit
- 12. 4-way valve for chiller / heat pump inversion of the circuit 1
- 13. 4-way valve for chiller / heat pump inversion of the circuit 2
- 14. 1° condenser fan step ON/OFF control of the circuit 1
- 15. 2° condenser fan step ON/OFF control of the circuit 1
- 16. 3° condenser fan step ON/OFF control of the circuit 1
- 17. 4° condenser fan step ON/OFF control of the circuit 1
- 18. 1° condenser fan step ON/OFF control of the circuit 2
- 19. 2° condenser fan step ON/OFF control of the circuit 2
- 20. 3° condenser fan step ON/OFF control of the circuit 2
- 21. 4° condenser fan step ON/OFF control of the circuit 2
- 22. Solenoid valve of the pump-down circuit 1
- 23. Solenoid valve of the pump-down circuit 2
- 24. Recovery valve circuit 1
- 25. Recovery valve circuit 2
- 26. Free cooling ON/OFF valve
- 27. Auxiliary output 1
- 28. Auxiliary output 2
- 29. Solenoid valve Intermittent for screw compressor 1
- 30. Solenoid valve Intermittent for screw compressor 2
- 31. Solenoid valve of the liquid injection for compressor 1
- 32. Solenoid valve of the liquid injection for compressor 2
- 33. Domestic hot valve 1
- 34. Domestic hot valve 2
- 35. Domestic hot heater 1
- 36. Domestic hot heater 2
- 37. Domestic hot heater 3
- 38. Solar panel water pump
- 39. Solar panel valve
- 40. Domestic hot water pump
- 41. Hybrid exchanger 1 circuit 1
- 42. Hybrid exchanger 2 circuit 1
- 43. Hybrid exchanger 1 circuit 2
- 44. Hybrid exchanger 2 circuit 2
- 45. Cooling/Heating status circuit 1
- 46. Cooling/Heating status circuit 2
- 47. Defrost status circuit 1
- 48. Defrost status circuit 2
- 49. Status of the regulation circuit 1
- 50. Status of the regulation circuit 2
- 51. Domestic hot water status
- 52. STD-BY/Remote OFF status
- 53. Solenoid water valve circuit 1
- 54. Solenoid water valve circuit 2
- 55. Direct start-up : compressor 1 relay PW start: relay PW 1 of the compressor 1
- 56. PW start: relay PW 2 of the compressor 1
- 57. Capacity step valve 1 compressor 1
- 58. Capacity step valve 2 compressor 1
- 59. Capacity step valve 3 compressor 1
- 60. By-pass gas valve compressor 1
- 61. Direct start: compressor 2 start
 PW start: relay 1 of the compressor 2
- 62. PW start: relay PW 2 of the compressor 2
- 63. Capacity step valve 1 compressor 2

- 64. Capacity step valve 2 compressor 2
- 65. Capacity step valve 3 compressor 2
- 66. By-pass gas valve compressor 2
- 67. Direct start: compressor 3 relay PW start: relay PW 1 of the compressor3
- 68. PW start: relay PW 2 of the compressor 3
- 69. Capacity step valve 1 compressor 3
- 70. Capacity step valve 2 compressor 3
- 71. Capacity step valve 3 compressor 3
- 72. By-pass gas valve compressor 3
- 73. Direct start: compressor 4 relay PW start: PW 1 of the compressor 4
- 74. PW start: relay PW 2 of the compressor 4
- 75. Capacity step valve 1 of the compressor 4
- 76. Capacity step valve 2 of the compressor 4
- 77. Capacity step valve 3 of the compressor 4
- 78. By-pass gas valve compressor 4

Proportional output configuration OUT 1 and OUT 2 (0 ÷ 10 Vdc)

- 0 Not enabled
- 1 Modulated evaporator water pump
- 2 Modulated Free cooling valve
- 3 not used
- 4 Auxiliary output 0÷10V n° 1
- 5 Auxiliary output 0÷10V n° 2
- 6 Proportional output for modulating compressor 1
- 7 Proportional output for modulating compressor 2
- 8 Condenser fan circuit 1
- 9 Condenser fan circuit 2

After selection number 9 it is possible to configure the analog output as digital output with the same meaning of the relays configuration; every analog output can be configured from "o 1" to "c50" (see relay configuration table).

Proportional output configuration OUT 3 and OUT 4 (0 ÷ 10 Vdc/PWM)

- 0 Not enabled
- 1 Modulated evaporator water pump (0..10 Vdc)
- 2 Modulated Free cooling valve (0..10 Vdc)
- 3 not used
- 4 Auxiliary output 0÷10V n° 1 (0..10 Vdc)
- 5 Auxiliary output 0÷10V n° 2 (0..10 Vdc)
- 6 Proportional output for modulating compressor 1 (0..10 Vdc)
- 7 Proportional output for modulating compressor 2 (0..10 Vdc)
- 8 Condenser fan circuit 1 (0..10 Vdc)
- 9 Condenser fan circuit 2 (0..10 Vdc)
- 10 Condenser fan circuit 1 (PWM)
- 11 Condenser fan circuit 2 (PWM)

After selection number 11 it is possible to configure the analog output as digital output with the same meaning of the relays configuration; every analog output can be configured from "o 1" to "c50" (see relay configuration table).

OTHER OUTPUTS

- LAN to connect I/O Expansion
- Serial output TTL to connect the HotKey, or Personal computer (through hardware interface) for parameters programming with Wizmate software, or XJ485RS device for connection to XWEB supervisor system.
- Remote keyboard (LED or LCD depending from the Ichill model).

50.2 I/O EXPANSION INPUT/OUTPUT CONFIGURATION

Analog input Pb1 - Pb2 - Pb6 - Pb7- Pb8

- 0. Not enabled
- 1. Temperature probe PTC for compressor 1 discharge
- 2. Temperature probe PTC for compressor 2 discharge
- 3. Temperature probe PTC for compressor 3 discharge
- 4. Temperature probe PTC for compressor 4 discharge
- 5. Not used
- 6. Not used
- 7. Temperature probe **PTC** for solar panel
- 8. Temperature probe NTC for evaporator inlet
- 9. Temperature probe **NTC** for evaporator 1 outlet
- 10. Temperature probe **NTC** for evaporator 2 outlet
- 11. Temperature probe NTC for common evaporator outlet
- 12. Temperature probe NTC for common hot water condenser / recovery inlet
- 13. Temperature probe NTC for hot water of the condenser / recovery circuit 1 inlet
- 14. Temperature probe NTC for hot water of the condenser / recovery circuit 2 inlet
- 15. Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 outlet
- 16. Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 outlet
- 17. Temperature probe NTC for hot water of the condenser / recovery common outlet
- 18. Temperature probe **NTC** for free cooling water inlet circuit
- 19. Temperature probe NTC for dynamic setpoint external air / boiler / change over
- 20. Temperature probe NTC for combined defrost circuit 1
- 21. Temperature probe NTC for combined defrost circuit 2
- 22. Temperature probe NTC for auxiliary output 1
- 23. Temperature probe NTC for auxiliary output 2
- 24. Temperature probe NTC domestic hot water 1
- 25. Temperature probe NTC domestic hot water 2
- 26. Temperature probe NTC solar panel
- 27. Temperature probe **NTC** recovery function
- 28. Temperature probe NTC for condensing circuit 1
- 29. Temperature probe **NTC** for condensing circuit 2

After the number 28 the configuration can be selected from **o 1** to **c75** that allows to set an analogue input as digital input (see polarity of the digital input/outputs).

Analog input Configuration Pb3 - Pb4 - Pb5

- 0 Not enabled
- 1 Temperature probe **PTC** for compressor 1 discharge
- 2 Temperature probe **PTC** for compressor 2 discharge
- 3 Temperature probe **PTC** for compressor 3 discharge
- 4 Temperature probe **PTC** for compressor 4 discharge
- 5 Not used
- 6 Not used
- 7 Temperature probe **PTC** for solar panel
- 8 Temperature probe **NTC** for evaporator inlet
- 9 Temperature probe **NTC** for evaporator 1 outlet
- 10 Temperature probe **NTC** for evaporator 2 outlet
- 11 Temperature probe **NTC** for common evaporator outlet
- 12 Temperature probe **NTC** for common hot water condenser / recovery inlet
- 13 Temperature probe NTC for hot water of the condenser / recovery circuit 1 inlet
- 14 Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 inlet
- 15 Temperature probe **NTC** for hot water of the condenser / recovery circuit 1 outlet 16 Temperature probe **NTC** for hot water of the condenser / recovery circuit 2 outlet
- 17 Temperature probe **NTC** for hot water of the condenser / recovery common outlet
- 18 Temperature probe NTC for free cooling water inlet circuit
- 19 Temperature probe NTC for dynamic setpoint external air / boiler / change over
- 20 Temperature probe NTC for combined defrost circuit 1
- 21 Temperature probe NTC for combined defrost circuit 2
- 22 Temperature probe NTC for auxiliary output 1

- 23 Temperature probe NTC for auxiliary output 2
- 24 Temperature probe NTC domestic hot water 1
- 25 Temperature probe NTC domestic hot water 2
- 26 Temperature probe NTC solar panel
- 27 Temperature probe **NTC** recovery function
- 28 Condenser probe circuit 1 (temperature NTC / pressure 4+20 mA / ratio-metric 0+5 Volt)
- 29 Condenser probe circuit 2 (temperature NTC / pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 30 Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 31 Evaporator pressure probe circuit 1 (pressure 4÷20 mA / ratio-metric 0÷5Volt)
- 32 Aux 1 output probe control (4÷20 mA / ratio-metric 0÷5Volt)
- 33 Aux 2 output probe control (4÷20 mA / ratio-metric 0÷ 5Volt)
- 34 Dynamic setpoint probe (4÷20 mA)
- 35 Compressor 1 or circuit 1 pressure probe
- 36 Compressor 2 or circuit 2 pressure probe

After the number 35 the display read-out goes from "o 1" to "c75 that allows to set an analogue input as digital input (see polarity input of digital inputs).

Digital Input Configuration Id1 - Id11

- 0. Not enabled
- 1. Remote ON / OFF
- 2. Remote chiller / heat pump
- 3. Flow switch/ Supply fan overload
- 4. Flow switch of heated side
- 5. Antifreeze heater circuit 1
- 6. Antifreeze heater circuit 2
- 7. High pressure switch circuit 1
- 8. High pressure switch circuit 2
- 9. Low pressure switch circuit 1
- 10. Low pressure switch circuit 2
- 11. Compressor 1 high pressure
- 12. Compressor 2 high pressure
- 13. Compressor 3 high pressure
- 14. Compressor 4 high pressure
- 15. Not used
- 16. Not used
- 17. Compressor 1 overload
- 18. Compressor 2 overload
- 19. Compressor 3 overload
- 20. Compressor 4 overload
- 21. Not used
- 22. Not used
- 23. Condenser fan overload of circuit 1
- 24. Condenser fan overload of circuit 2
- 25. Condenser fan overload of circuit 1 and 2 (comun)
- 26. Water pump overload of evaporator 1
- 27. Water support pump overload of evaporator
- 28. Water pump overload of condenser 1
- 29. Water support pump overload of condenser
- 30. Recovery request circuit 1
- 31. Recovery request circuit 2
- 32. Start/End defrost circuit 1
- 33. Start/End defrost circuit 2
- 34. Energy Saving
- 35. Pressure switch / compressor 1 oil
- 36. Pressure switch / compressor 2 oil
- 37. Pressure switch / compressor 3 oil
- 38. Pressure switch / compressor 4 oil
- 39. Not used
- 40. Not used
- 41. Pump down pressure switch of circuit 1
- 42. Pump down pressure switch of circuit 2

- 43. Generic alarm from digital input with stop regulation n° 1
- 44. Generic alarm from digital input with stop or signal regulation n° 2
- 45. Operation working mode: by RTC or keyboard
- 46. Operation mode with supplay fan only
- 47. Digital input of thermoregulation request (condensing unit)
- 48. Digital input of cooling request (condensing unit)
- 49. Digital input of heating request (condensing unit)
- 50. Request step 2 (condensing unit)
- 51. Request step 3 (condensing unit)
- 52. Request step 4 (condensing unit)
- 53. Request step 5 (condensing unit)
- 54. Request step 6 (condensing unit)
- 55. Request step 7 (condensing unit)
- 56. Request step 8 (condensing unit)
- 57. Request step 9 (condensing unit)
- 58. Request step 10 (condensing unit)
- 59. Request step 11 (condensing unit)
- 60. Request step 12 (condensing unit)
- 61. Request step 13 (condensing unit)
- 62. Request step 14 (condensing unit)
- 63. Request step 15 (condensing unit)
- 64. Request step 16 (condensing unit)
- 65. Domestic hot water flow switch
- 00. Oalassassal (la cas l'est
- 66. Solar panel flow switch
- 67. Only domestic hot water
- 68. Domestic hot water heaters overload
- 69. Domestic hot water pump overload
- 70. Domestic hot water second set point
- 71. Phase sequence alarm
- 72. Domestic hot water priority
- 73. Free cooling water pump flow switch
- 74. Expansion valve 1 alarm
- 75. Expansion valve 2 alarm
- 76. Condenser antifreeze alarm circuit nº 1
- 77. Condenser antifreeze alarm circuit n° 2
- 78. Compressor 1 of condensing unit
- 79. Compressor 2 of condensing unit
- 80. Compressor 3 of condensing unit
- 81. Compressor 4 of condensing unit
- 82. Not used
- 83. Not used
- 84. First compressor circuit 1 of condensing unit
- 85. Second compressor circuit 1 of condensing unit
- 86. Third compressor circuit 1 of condensing unit
- 87. Fourth compressor circuit 1 of condensing unit
- 88. Not used
- 89. First compressor circuit 2 of condensing unit
- 90. Second compressor circuit 2 of condensing unit
- 91. Third compressor circuit 2 of condensing unit
- 92. Common circuit recovery request
- 93. Unloading circuit 1
- 94. Unloading circuit 2

Digital Output (relay) Configuration RL1- RL8

- 0. Not enabled
- 1. Alarm
- 2. Evaporator water pump / Supply fan
- 3. Support water pump of the evaporator
- 4. Evaporator anti-freeze heater circuit 1
- 5. Evaporator anti-freeze heater circuit 2
- 6. Supply / boiler heaters circuit 1
- 7. Supply / boiler heaters circuit 2

- Condenser anti-freeze heater circuit 1
- 9. Condenser anti-freeze heater circuit 2
- 10. Water pump of the condenser recovery circuit
- 11. Support water pump of the condenser recovery circuit
- 12. 4-way valve for chiller / heat pump inversion of the circuit 1
- 13. 4-way valve for chiller / heat pump inversion of the circuit 2
- 14. 1° condenser fan step ON/OFF control of the circuit 1
- 15. 2° condenser fan step ON/OFF control of the circuit 1
- 16. 3° condenser fan step ON/OFF control of the circuit 1
- 17. 4° condenser fan step ON/OFF control of the circuit 1
- 18. 1° condenser fan step ON/OFF control of the circuit 2
- 19. 2° condenser fan step ON/OFF control of the circuit 2
- 20. 3° condenser fan step ON/OFF control of the circuit 2
- 21. 4° condenser fan step ON/OFF control of the circuit 2
- 22. Solenoid valve of the pump-down circuit 1
- 23. Solenoid valve of the pump-down circuit 2
- 24. Recovery valve circuit 1
- 25. Recovery valve circuit 2
- 26. Free cooling ON/OFF valve
- 27. Auxiliary output 1
- 28. Auxiliary output 2
- 29. Solenoid valve Intermittent for screw compressor 1
- 30. Solenoid valve Intermittent for screw compressor 2
- 31. Solenoid valve of the liquid injection for compressor 1
- 32. Solenoid valve of the liquid injection for compressor 2
- 33. Domestic hot valve 1
- 34. Domestic hot valve 2
- 35. Domestic hot heater 1
- 36. Domestic hot heater 2
- 37. Domestic hot heater 3
- 38. Solar panel water pump
- 39. Solar panel valve
- 40. Domestic hot water pump
- 41. Hybrid exchanger 1 circuit 1
- 42. Hybrid exchanger 2 circuit 1
- 43. Hybrid exchanger 1 circuit 2
- 44. Hybrid exchanger 2 circuit 2
- 45. Cooling/Heating status circuit 1
- 46. Cooling/Heating status circuit 2
- 47. Defrost status circuit 1
- 48. Defrost status circuit 2
- 49. Status of the regulation circuit 1
- 50. Status of the regulation circuit 2
- 51. Domestic hot water status
- 52. STD-BY/Remote OFF status
- 53. Solenoid water valve circuit 1
- 54. Solenoid water valve circuit 2
- 55. Direct start-up : compressor 1 relay PW start: relay PW 1 of the compressor 1
- 56. PW start: relay PW 2 of the compressor 1
- 57. Capacity step valve 1 compressor 1
- 58. Capacity step valve 2 compressor 1
- 59. Capacity step valve 3 compressor 1
- 60. By-pass gas valve compressor 1
- 61. Direct start: compressor 2 start
 - PW start: relay 1 of the compressor 2
- 62. PW start: relay PW 2 of the compressor 2
- 63. Capacity step valve 1 compressor 2
- 64. Capacity step valve 2 compressor 2
- 65. Capacity step valve 3 compressor 2
- 66. By-pass gas valve compressor 2
- 67. Direct start: compressor 3 relay

- PW start: relay PW 1 of the compressor3
- 68. PW start: relay PW 2 of the compressor 3
- 69. Capacity step valve 1 compressor 3
- 70. Capacity step valve 2 compressor 3
- 71. Capacity step valve 3 compressor 3
- 72. By-pass gas valve compressor 3
- 73. Direct start: compressor 4 relay PW start: PW 1 of the compressor 4
- 74. PW start: relay PW 2 of the compressor 4
- 75. Capacity step valve 1 of the compressor 4
- 76. Capacity step valve 2 of the compressor 4
- 77. Capacity step valve 3 of the compressor 4
- 78. By-pass gas valve compressor 4

Proportional output configuration OUT 1 (0 ÷ 10 Vdc)

- 0 Not enabled
- 1 Modulated evaporator water pump
- 2 Modulated Free cooling valve
- 3 not used
- 4 Auxiliary output n° 1
- 5 Auxiliary output n° 2
- 6 Proportional output for modulating compressor 1
- 7 Proportional output for modulating compressor 2
- 8 Condenser fan circuit 1
- 9 Condenser fan circuit 2

After selection number 9 it is possible to configure the analog output as digital output with the same meaning of the relays configuration; every analog output can be configured from "o 1" to "c50" (see relay configuration table).

Proportional output configuration OUT 3 and OUT 4 (0 ÷ 10 Vdc / 4..20Ma / PWM)

- 0 Not enabled
- 1 Modulated evaporator water pump
- 2 Modulated Free cooling valve
- 3 not used
- 4 Auxiliary output 0÷10V n° 1
- 5 Auxiliary output 0÷10V n° 2
- 6 Proportional output for modulating compressor 1
- 7 Proportional output for modulating compressor 2
- 8 Condenser fan circuit 1
- 9 Condenser fan circuit 2
- 10 Condenser fan circuit 1
- 11 Condenser fan circuit 2

After selection number 11 it is possible to configure the analog output as digital output with the same meaning of the relays configuration; every analog output can be configured from "o 1" to "c50" (see relay configuration table).

51. TABLE OF PARAMETERS

| Parameter | Description | min | max | M. u. | Resolution |
|-----------|----------------------------|--------------|------------|----------|------------|
| ST 1 | Chiller Setpoint | ST02 | ST03 | °C/°F | dec/int |
| ST 2 | Chiller minimum Setpoint | -50.0 -58 | ST01 | °C °F | Dec int |
| ST 3 | Chiller maximum Setpoint | ST01 | 110 230 | °C °F | Dec int |
| ST 4 | Heat pump setpoint | ST05 | ST06 | °C/°F | dec/int |
| ST 5 | Heat pump minimum Setpoint | -50.0 -58 | ST04 | °C °F | Dec int |
| ST 6 | Heat pump maximum Setpoint | ST04 | 110 230 | °C °F | Dec int |

| ST 7 | Regulation band in chiller mode | 0.1 | 25.0 | °C | Dec |
|----------------|--|----------|---------------|----------|------------|
| 07.0 | | 0 | 45 | °F | int |
| ST 8 | Regulation band in chiller heat pump | 0.1 0 | 25.0 45 | °C °F | Dec int |
| ST 9 | Regulation probe selection in chiller | | | | |
| | 0= Temperature probe NTC for evaporator inlet 1= Temperature probe NTC for evaporator outlet 1 | | | | |
| | 2= Temperature probe NTC for evaporator outlet 2 | | | | |
| | 3= Temperature probe NTC for common evaporator outlet | | | | |
| | 4= Temperature NTC probe from remote panel 1 or internal temperature | 0 | 5 | | |
| | probe of Visograph 2.0 | | | | |
| | 5= Temperature NTC probe from remote panel 2 or remote temperature probe of Visograph 2.0 | | | | |
| ST 10 | Regulation probe selection in heat pump | 1 | | <u> </u> | |
| | 0= Temperature probe NTC for evaporator inlet | | | | |
| | 1= Temperature probe NTC for evaporator outlet 1 | | | | |
| | 2= Temperature probe NTC for evaporator outlet 2 | | | | |
| | 3= Temperature probe NTC for common evaporator outlet 4= Temperature NTC probe from remote panel 1 or internal temperature | | | | |
| | probe of Visograph 2.0 | | | | |
| | 5= Temperature NTC probe from remote panel 2 or remote temperature | 0 | 11 | | |
| | probe of Visograph 2.0 | | | | |
| | 6= Temperature probe for water common inlet of the condenser | | | | |
| | 7= Temperature probe for water inlet of the circuit # 1 condenser | | | | |
| | 8= Temperature probe for water inlet of the circuit # 2 condenser 9= Temperature probe for water outlet of the circuit # 1 condenser | | | | 1 |
| | 10= Temperature probe for water outlet of the circuit # 1 condenser | | | | |
| | 11= Temperature probe for water common otlet of the condenser | | | | |
| ST 11 | Type of thermoregulation | 1 | 1 | 1 | |
| | 0= Proportional | 0 | 1 | | |
| | 1= Neutral zone | | | | |
| Dorom 1 | Visualizzazione display | l poster | I ma = == | NA | Desciuti- |
| Parameter dP 1 | Description Default read-out of the top display | min 0 | max 16 | M. u. | Resolution |
| dP 2 | Default read-out of the top display Default read-out of the bottom display | 0 | 20 | | 1 |
| dP 3 | Default display read-out configuration top / bottom | <u> </u> | | | |
| | 0= Configurable | | | | |
| | 1= Top display: Evaporator IN, Bottom display: Evaporator OUT | 0 | 3 | | |
| | 2= Top display: Condenser IN, Bottom display: Condenser OUT | | | | |
| | 3=Top display: temperature/Condensing pressure, Bottom Display: evaporating pressure | | | | |
| dP 4 | Top display default read-out of the remote terminal_1 | 1 | | | |
| | 0= the read-out depends on the paremeters dP01 – dP02 – dP03 | 0 | 1 | | |
| | 1= the read-out shows the NTC probe of the remote panel. | 1 | | | |
| dP 5 | Top display default read-out of the remote terminal_2 | 1 | | | |
| | 0= the read-out depends on the paremeters dP01 – dP02 – dP03 | 0 | 1 | | |
| dP 6 | 1= the read-out shows the NTC probe of the remote panel. Visograph: firs probe visualized | 0 | 39 | - | |
| dP 7 | Visograph: his probe visualized Visograph: second probe visualized | 0 | 39 | | 1 |
| dP 8 | Visograph: second probe visualized Visograph: third probe visualized | 0 | 39 | 1 | |
| dP 9 | Visograph: fourth probe visualized | 0 | 39 | | |
| dP 10 | Visualization in STD-BY | | | | |
| | 0= "STD-BY" | 0 | 2 | | |
| | 1= same visualization of dP1 and dP2 2= "OFF" | | - | | |
| Parameter | Description | min | max | M. u. | Resolution |
| . arameter | Unità | 111111 | IIIdx | M. a. | Resolution |
| CF 1 | Type of unit | | | | |
| | 0= Air / air Chiller | | 2 | | 1 |
| | 1= Air / water Chiller | 0 | 2 | | |
| | 2= Water / water Chiller | 1 | | | |
| CF 2 | Selection type rof unit | | | | |
| | 1= only chiller 2= only heat pump | 1 | 3 | | |
| | 3= chiller and heat pump | | | | |
| CF 3 | Condensing unit | 1 | | † | 1 |
| - | 0= no | 0 | 1 | | |
| | 1= si | | | ļ | |
| CF 4 | Compressors number for circuit 1 | | | | |
| | 1= 1 2= 2 | 1 | 4 | | |
| | \ \alpha = \alpha | 1 1 | 4 | 1 | |
| | 3= 3 | | | | |
| | 3= 3 4= 4 | | | | |

| CF 5 | Compressors number for circuit 2 | | | | |
|-------|--|-------|------|-----|-----|
| • • | 0= 0 | | | | |
| | | _ | 0 | | |
| | 1= 1 | 0 | 3 | | |
| | 2= 2 | | | | |
| | 3= 3 | | | | |
| CF 6 | Number of compressor parzialization | | | | |
| | 0= none | | | | |
| | | 0 | 3 | | |
| | 1= 1 | U | 3 | | |
| | 2= 2 | | | | |
| | 3= 3 | | | | |
| CF 7 | Pressure or temperature analogue input functioning | | | | |
| | 0 = Temperature / pressure NTC – 4÷20 mA : | | | | |
| | The condensing temperature is controlled with NTC probe while for the | | | | |
| | | | | | |
| | evaporating pressures of the circuits 1 and 2 and the pressure probe | | | | |
| | configured as auxiliary output 1 and 2 are controlled with 4÷20mA | | | | |
| | transducers. | | | | |
| | 1 = Pressure control with 4÷20 mA: | | | | |
| | To control the evaporating and condensing pressures it is necessary a | | | | |
| | , , , | 0 | 3 | | |
| | 4÷20mA transducer. | | | | |
| | 2 = Temperature / pressure NTC – 0÷5Vdc: | | | | |
| | The condensing temperature is controlled with NTC probe while for the | | | | |
| | evaporating pressures of the circuits 1 and 2 and the pressure probe | | | | |
| | configured as auxiliary output 1 and 2 are controlled with 0÷5Vdc transducers. | | | | |
| | 3 = Pressure control with 0÷5Vdc: | | | | |
| | | | | | |
| | To control the evaporating and condensing pressures it is necessary a | | | | |
| | ratiometric 0÷5Vdc transducer. | | | | |
| CF 8 | PB1 Configuration | 0 | 29 | | |
| | If configured as digital input | o 1 | c94 | | |
| CF 9 | PB2 Configuration | 0 | 29 | | |
| J | | 01 | c94 | | |
| 05.40 | If configured as digital input | | | | |
| CF 10 | PB3 Configuration | 0 | 36 | | |
| | If configured as digital input | o 1 | c94 | | |
| CF 11 | PB4 Configuration | 0 | 36 | | |
| | If configured as digital input | o 1 | c94 | | |
| CF 12 | PB5 Configuration | 0 | 29 | | |
| CF 12 | | _ | _ | | |
| | If configured as digital input | 01 | c94 | | |
| CF 13 | PB6 Configuration | 0 | 29 | | |
| | If configured as digital input | o 1 | c94 | | |
| CF 14 | Not used | 0 | 0 | | |
| CF 15 | Not used | 0 | 0 | | |
| | | | | | _ |
| CF 16 | PB1 Offset | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| CF 17 | PB2 Offset | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| CF 18 | PB3 Offset | -12.0 | 12.0 | °C | Dec |
| CF 10 | FB3 Offset | | | | |
| | | -21 | 21 | .°F | int |
| | | -5.0 | 5.0 | bar | dec |
| | | -72 | 72 | psi | int |
| CF 19 | PB4 Offset | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| | | -5.0 | 5.0 | | |
| | | | | bar | dec |
| | 227.0% | -72 | 72 | psi | int |
| CF 20 | PB5 Offset | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| | | -5.0 | 5.0 | bar | dec |
| | | -72 | 72 | psi | int |
| CF 21 | PB6 Offset | -12.0 | 12.0 | °C | Dec |
| 01 21 | I DO Olioti | | | °F | |
| | | -21 | 21 | _ | int |
| | | -5.0 | 5.0 | bar | dec |
| | | -72 | 72 | psi | int |
| CF 22 | Not used | 0 | 0 | | |
| CF 23 | Not used | 0 | 0 | | |
| CF 24 | Pressure value at 4mA or 0.5 Vdc of the PB3 transducer | -1.0 | 50.0 | Bar | Dec |
| GF 24 | Tressure value at 4HIA OF 0.3 VUC OF THE FDS TRANSQUEET | | | _ | |
| | | -14 | 725 | psi | int |
| CF 25 | Pressure value at 20mA or 5 Vdc of the PB3 transducer | -1.0 | 50.0 | Bar | Dec |
| | | -14 | 725 | psi | int |
| CF 26 | Pressure value at 4mA or 0.5 Vdc of the PB4 transducer | -1.0 | 50.0 | Bar | Dec |
| | | -14 | 725 | psi | int |
| CE 27 | Propouro value at 20m A or 5 \/da af the DD4 trans-diseas | | | - | |
| CF 27 | Pressure value at 20mA or 5 Vdc of the PB4 transducer | -1.0 | 50.0 | Bar | Dec |
| | | -14 | 725 | psi | int |
| CF 28 | Not used | 0 | 0 | | |
| CF 29 | Not used | 0 | 0 | | |
| CF 30 | Configuration of ID1 | 0 | c94 | | |
| | | | | | |
| CF 31 | Configuration of ID2 | 0 | c94 | | |
| | Configuration of ID3 | 0 | c94 | I | |
| CF 32 | Configuration of IDC | | | | |

| CF 33 | Configuration of ID4 | 0 | c94 | |
|-------|--|-----|-----|--|
| CF 34 | Configuration of ID5 | 0 | c94 | |
| CF 35 | Configuration of ID6 | 0 | c94 | |
| CF 36 | Configuration of ID7 | 0 | c94 | |
| CF 37 | Configuration of ID8 | 0 | c94 | |
| CF 38 | Configuration of ID9 | 0 | c94 | |
| CF 39 | Configuration of ID10 | 0 | c94 | |
| CF 40 | Configuration of ID11 | 0 | c94 | |
| CF 41 | Configuration of RL1 | 0 | c78 | |
| CF 42 | Configuration of RL2 | 0 | c78 | |
| CF 43 | Configuration of RL3 | 0 | c78 | |
| CF 44 | Configuration of RL4 | 0 | c78 | |
| CF 45 | Configuration of RL5 | 0 | c78 | |
| CF 46 | Configuration of RL6 | 0 | c78 | |
| CF 47 | Configuration of RL7 | 0 | c78 | |
| CF 48 | Configuration of RL8 | 0 | c78 | |
| CF 49 | Not used | | 070 | |
| CF 50 | Proportional output OUT 1 | 0 | 9 | |
| 0. 30 | 0= not configured | U | 3 | |
| | 1= modulation evaporator water pump 0÷10V | | | |
| | 2= Free cooling modulating output 0÷10V | | | |
| | 3= not used | | | |
| | 4= auxiliary output AUX1 0÷10V | | | |
| | 5= auxiliary output AUX2 0÷10V | | | |
| | 6= inverter compressor 1 0÷10V | | | |
| | 7= inverter compressor 2 0÷10V | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | |
| | 9= modulating condenser fan circuit 2 0÷10V | | | |
| | ŭ | | | |
| | o1c50 ON / OFF with the same meaning of relè configuration | o 1 | c54 | |
| CF 51 | Proportional output OUT 2 | 0 | 9 | |
| | 0= not configured | | | |
| | 1= modulation evaporator water pump 0÷10V | | | |
| | 2= Free cooling modulating output 0÷10V | | | |
| | 3= not used | | | |
| | 4= auxiliary output AUX1 0÷10V | | | |
| | 5= auxiliary output AUX2 0÷10V | | | |
| | 6= inverter compressor 1 0÷10V | | | |
| | 7= inverter compressor 2 0÷10V | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | |
| | 9= modulating condenser fan circuit 2 0÷10V | | | |
| | 01/0 11/1 | | | |
| 05.50 | o1c50 ON / OFF with the same meaning of relè configuration | o 1 | c54 | |
| CF 52 | Proportional output OUT 3 | 0 | 11 | |
| | 0= not configured | | | |
| | 1= modulation evaporator water pump 0÷10V | | | |
| | 2= Free cooling modulating output 0÷10V | | | |
| | 3= not used 4= auxiliary output AUX1 0÷10V | | | |
| | , , | | | |
| | 5= auxiliary output AUX2 0÷10V 6= inverter compressor 1 0÷10V | | | |
| | 7= inverter compressor 1 0=10V | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | |
| | 9= modulating condenser fan circuit 2 0÷10V | | | |
| | 10= modulating condenser fan circuit 1 PWM | | | |
| | 11= modulating condenser fan circuit 2 PWM | | | |
| | | | | |
| | o1c50 ON / OFF output with the same meaning of relè | o 1 | c54 | |
| CF 53 | Proportional output OUT 4 | 0 | 11 | |
| | 0= not configured | | | |
| | 1= modulation evaporator water pump 0÷10V | | | |
| | 2= Free cooling modulating output 0÷10V | | | |
| | 3= not used | | | |
| | 4= auxiliary output AUX1 0÷10V | | | |
| | 5= auxiliary output AUX2 0÷10V | | | |
| | 6= inverter compressor 1 0÷10V | | | |
| | 7= inverter compressor 2 0÷10V | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | |
| | 9= modulating condenser fan circuit 2 0÷10V | | | |
| | 10= modulating condenser fan circuit 1 PWM | | | |
| | 11= modulating condenser fan circuit 2 PWM | | | |
| | at all ONLOGE autout with the agency are all at 12 | | | |
| | o1c50 ON / OFF output with the same meaning of relè | o 1 | c54 | |

| CF 54 | Remote keyboard 1 configuration | | | | |
|--------------|--|--|-----------|----------|--|
| | 0= Not enabled | | | | |
| | 1= Enabled model with ambient temperature sensor | 0 | 2 | | |
| | | | | | |
| | 2= Enabled model without ambient temperature sensor | | | | |
| CF 55 | Remote Panel 2 configuration | | | | |
| 0. 00 | 0= Not enabled | | | | |
| | | 0 | 2 | | |
| | 1= Enabled model with ambient temperature sensor | 1 | - | | |
| | 2= Enabled model without ambient temperature sensor | | | | |
| CF 56 | Offset of the probe of the remote terminal 1 | -12.0 | 12.0 | °C | Dec |
| CF 36 | Onset of the probe of the remote terminal 1 | | | | |
| | | -21 | 21 | °F | int |
| CF 57 | Offset of the probe of the remote terminal 2 | -12.0 | 12.0 | °C | Dec |
| | · | -21 | 21 | °F | int |
| 05.50 | | | | ' | IIIC |
| CF 58 | Icon function | | | | |
| | 0= * chiller / * heat pump | 0 | 1 | | |
| | | | | | |
| | 1= | | | | |
| CF 59 | 0= Chiller / Heat pump selection by keyboard | | | | |
| | 1= Chiller / Heat pump selection by digital input | 0 | 2 | | |
| | 2. Chiller / Heat pump colorion by angles input | | _ | | |
| | 2= Chiller / Heat pump selection by analogue input | | | | _ |
| CF 60 | Automatic change over setpoint for chiller/ heat pump selection (CF79 = 2) | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| CF 61 | Automatic change over differential (CE70 2) | | | °C | |
| OF 01 | Automatic change over differential (CF79 = 2) | 0.1 | 25.0 | | Dec |
| | | 0 | 45 | °F | int |
| CF 62 | °C or °F selection | 0 | 1 | | |
| J. J. | 0= °C / °BAR | 1 | ' | 1 | |
| | | | 1 | 1 | |
| | 1= °F / °psi | 1 | | | <u> </u> |
| CF 63 | Power supply frequency | 1 | | | |
| | 0= 50 Hz | 1 | | | |
| | | | 1 | 1 | |
| | 1= 60 Hz | 1 _ | _ | 1 | |
| | 2= Vcc power supply | 0 | 2 | 1 | |
| | (ATTENTION | | | | |
| | | | | | |
| | When CF83 = 2 the proportional outputs for fan control are not enabled) | | | | |
| | | | | | |
| CF 64 | Serial address | 1 | 247 | | |
| CF 65 | Firmware Release (only reading) | Sola le | ettura | | |
| CF 66 | Eeprom parameter map (only reading) | Sola le | | | |
| | | | | | |
| CF 67 | Compressor 1 capacity | 0 | 100% | <u></u> | <u> </u> |
| CF 68 | Compressor 2 capacity | 0 | 100% | | |
| | | | | | |
| CF 69 | Compressor 3 capacity | 0 | 100% | | ļ |
| CF 70 | Compressor 4 capacity | 0 | 100% | | |
| CF 71 | Not used | 0 | 0 | | |
| CF 72 | | 0 | 0 | | |
| | Not used | U | U | | |
| CF 73 | Maximum number of start up of the compressor in 15 minutes | _ | 4.5 | | |
| | 0= Not enabled | 0 | 15 | | |
| CF 74 | Working mode of the compressor | + | | | |
| CF /4 | | | | | |
| | 0 = chiller and heat pump | 0 | 2 | | |
| | 1 = only chiller | U | _ | | |
| | 2 = only heat pump | | | | |
| AF == | • ' ' | _ | 4 | | |
| CF 75 | Enable hybrid exchangers | 0 | 1 | | |
| CF 76 | Buzzer presence (0=disabled, 1=enabled) | 0 | 1 | | 1 |
| CF 77 | Chiller operation (1=only compressor; 2=only Free cooling; 3=compressors | 1 | | | |
| J. 11 | | 1 | 3 | | |
| | and Free cooling) | 1 | | | <u> </u> |
| CF 78 | Enable I/O expansion | 1 | | | |
| | 0= not enabled | 0 | 1 | | |
| | 1= enabled | 1 | | | |
| 05.56 | | 1 | | | 1 |
| CF 79 | Enable expansion valve 1 | 1 | | | |
| | 0= not enabled | 0 | 1 | | |
| | 1= enabled | | 1 | 1 | |
| CE CC | | + | - | | 1 |
| CF 80 | Enable expansion valve 2 | | | 1 | |
| | 0= not enabled | 0 | 1 | | |
| | 1= enabled | | 1 | 1 | |
| CF 81 | Expansion valve serial address | 1 | 15 | | 1 |
| OF 01 | | | ເວ | | 1 |
| CF 82 | Evaporating probe position | 1 | | | |
| | 0= Ichill | 0 | 1 | | |
| | 1= Electronic expansion valve IEV | 1 | | | |
| OF 00 | | | 050 | l | + |
| CF 83 | Compressor delay activation after electronic expansion valve start command | 0 | 250 | sec | |
| CF 84 | Enable Visograph remote keyboard | 1 | | | 1 |
| | 0= no | 0 | 1 | | |
| | | 1 | ' | | |
| | 1= yes | | | | |
| Parameter | Description | min | max | M. u. | Resolution |
| | • | | | | |
| El 1 | I/O expansion lan address | 0 | 15 | | 1 |
| El 2 | | 0 | 29 | | 1 |
| | I/O expansion Pb1 Configuration | 0 | c94 | | |
| | I II O OMPANION I DI CONINGUIGION | | | | |
| FI ? | | ^ | ~~ | | |
| El 3 | | 0 | 29 | | |
| EI 3 | I/O expansion Pb2 Configuration | 0 | 29 c94 | | |

| | T | | | | |
|----------------|---|--------------|-------------|------------|------------|
| El 4 | I/O companies Dia O o of more time | 0 | 36 | | |
| El 5 | I/O expansion Pb3 Configuration | 0 | c94 36 | | |
| EIS | I/O expansion Pb4 Configuration | 0 | c94 | | |
| El 6 | 1/O expansion Fb4 Configuration | 0 | 36 | | |
| | I/O expansion Pb5 Configuration | 0 | c94 | | |
| El 7 | | 0 | 29 | | - |
| | I/O expansion Pb6 Configuration | 0 | c94 | | |
| El 8 | | 0 | 29 | | |
| | I/O expansion Pb7 Configuration | 0 | c94 | | |
| EI 9 | | 0 | 29 | | |
| | I/O expansion Pb8 Configuration | 0 | c94 | | _ |
| EI 10 | 1/O : DIA :: :: | -12.0 | 12.0 | °C | Dec |
| EI 11 | I/O expansion Pb1 calibration | -21 | 21 | °F | int |
| EIII | I/O expansion Pb2calibration | -12.0 -21 | 12.0 21 | °C °F | Dec int |
| El 12 | 1/O expansion F b2calibration | -12.0 | 12.0 | °C | Dec |
| L1 12 | | -21 | 21 | °F | int |
| | | -5.0 | 5.0 | bar | dec |
| | I/O expansion Pb3 calibration | -72 | 72 | psi | int |
| EI 13 | | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| | | -5.0 | 5.0 | bar | dec |
| E1 4 4 | I/O expansion Pb4 calibration | -72 12.0 | 72 | psi | int |
| EI 14 | | -12.0 -21 | 12.0 21 | °C °F | Dec int |
| | | -21 -5.0 | 5.0 | bar | dec |
| | I/O expansion Pb5 calibration | -3.0 -72 | 72 | psi | int |
| EI 15 | TO OXPANION I DO CAMBIANO | -12.0 | 12.0 | °C | Dec |
| | | -21 | 21 | °F | int |
| | | -5.0 | 5.0 | bar | dec |
| | I/O expansion Pb6 calibration | -72 | 72 | psi | int |
| El 16 | | -12.0 | 12.0 | °C | Dec |
| | I/O expansion Pb7 calibration | -21 | 21 | °F | int |
| EI 17 | I/O company long Ph O colling the co | -12.0 | 12.0 | °C | Dec |
| EI 18 | I/O expansion Pb8 calibration | -21 -1.0 | 21 50.0 | °F Bar | int Dec |
| EI 10 | I/O expansion Pb3: minimum pressure value | -1.0 | 725 | psi | int |
| El 19 | 1/0 expansion r bo. minimum pressure value | -1.0 | 50.0 | Bar | Dec |
| | I/O expansion Pb3: maximum pressure value | -14 | 725 | psi | int |
| EI 20 | | -1.0 | 50.0 | Bar | Dec |
| | I/O expansion Pb4: minimum pressure value | -14 | 725 | psi | int |
| El 21 | | -1.0 | 50.0 | Bar | Dec |
| | I/O expansion Pb4: maximum pressure value | -14 | 725 | psi | int |
| El 22 | I/O companying Ph.5. minimum massage value | -1.0 | 50.0 | Bar | Dec |
| El 23 | I/O expansion Pb5: minimum pressure value | -14 -1.0 | 725 50.0 | psi Bar | int Dec |
| E1 23 | I/O expansion Pb5: maximum pressure value | -1.0 -14 | 725 | psi | int |
| El 24 | I/O expansion ID1 configuration | 0 | c96 | POI | |
| El 25 | I/O expansion ID2 configuration | 0 | c96 | | |
| El 26 | I/O expansion ID3 configuration | 0 | c96 | | |
| El 27 | I/O expansion ID4 configuration | 0 | c96 | | |
| El 28 | I/O expansion ID5 configuration | 0 | c96 | | |
| El 29 | I/O expansion ID6 configuration | 0 | c96 | | |
| El 30 | I/O expansion ID7 configuration | 0 | c96 | | |
| EI 31 | I/O expansion ID8 configuration | 0 | c96 | | |
| EI 32 | I/O expansion ID9 configuration | 0 | c96 | | |
| EI 33 | I/O expansion RL1 configuration | 0 | c78 | | |
| El 34 | I/O expansion RL2 configuration | 0 | c78 | | |
| El 35 | I/O expansion RL3 configuration | 0 | c78 | | |
| El 36 El 37 | I/O expansion RL4 configuration | 0 | c78 | | |
| El 38 | I/O expansion RL5 configuration I/O expansion RL6 configuration | 0 | c78 c78 | | |
| El 39 | I/O expansion RL6 configuration | 0 | c78 | | |
| El 40 | I/O expansion RL7 configuration I/O expansion 0-10V / 4-20mA output selection | 0 | 1 | | |
| L: 70 | 1/0 expansion o 101/ + Zonia output sciention | U | ı | l | |

| EI 41 | I/O expansion proportional output OUT 1 | 0 | 9 | | |
|--|--|---|---|---|---|
| | 0= not configured 1= modulation evaporator water pump 0÷10V | | | | |
| | 2= Free cooling modulating output 0÷10V 3= not used | | | | |
| | 4= auxiliary output AUX1 0÷10V | | | | |
| | 5= auxiliary output AUX2 0÷10V | | | | |
| | 6= inverter compressor 1 0÷10V 7= inverter compressor 2 0÷10V | | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | | |
| | 9= modulating condenser fan circuit 2 0÷10V | | | | |
| | o1c50 ON / OFF with the same meaning of relè configuration | o 1 | c50 | | |
| El 42 | I/O expansion proportional output OUT 2 0= not configured | 0 | 11 | | |
| | 1= modulation evaporator water pump 0÷10V | | | | |
| | 2= Free cooling modulating output 0÷10V | | | | |
| | 3= not used 4= auxiliary output AUX1 0÷10V | | | | |
| | 5= auxiliary output AUX2 0÷10V | | | | |
| | 6= inverter compressor 1 0÷10V 7= inverter compressor 2 0÷10V | | | | |
| | 8= modulating condenser fan circuit 1 0÷10V | | | | |
| | 9= modulating condenser fan circuit 2 0÷10V 10= modulating condenser fan circuit 1 PWM | | | | |
| | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM | | | | |
| | | | -50 | | |
| EI 43 | o1c50 ON / OFF output with the same meaning of relè I/O expansion proportional output OUT 3 | 01 | c50 11 | - | |
| | 0= not configured | | ., | | |
| | 1= modulation evaporator water pump 0÷10V 2= Free cooling modulating output 0÷10V | | | | |
| | 3= not used | | | | |
| | 4= auxiliary output AUX1 0÷10V | | | | |
| | 5= auxiliary output AUX2 0÷10V 6= inverter compressor 1 0÷10V | | | | |
| | 7= inverter compressor 2 0÷10V | | | | |
| | 8= modulating condenser fan circuit 1 0÷10V 9= modulating condenser fan circuit 2 0÷10V | | | | |
| | | | | | |
| | 10= modulating condenser fan circuit 1 PWM | | | | |
| | | | | | |
| | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM 01c50 ON / OFF output with the same meaning of relè | 01 | c50 | | |
| Parameter Sd 1 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM 01c50 ON / OFF output with the same meaning of relè Description | min | max | M. u. | Resolution |
| Parameter Sd 1 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM 01c50 ON / OFF output with the same meaning of relè | min -30.0 -54 | max 30.0 54 | °C °F | Resolution Dec int |
| | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM 01c50 ON / OFF output with the same meaning of relè Description | min -30.0 -54 -30.0 | 30.0 54 30.0 | °C °F °C | Dec int Dec |
| Sd 1 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM 01c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode | min -30.0 -54 | max 30.0 54 | °C °F | Dec int |
| Sd 1 Sd 2 Sd 3 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode | min -30.0 -54 -30.0 -54 -50.0 -58 | 30.0 54 30.0 54 110.0 230 | °C °F °C °F | Dec int Dec int |
| Sd 1 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode | min -30.0 -54 -30.0 -54 -50.0 | 30.0 54 30.0 54 110.0 230 110.0 | °C °F °C °F | Dec int Dec int Dec |
| Sd 1 Sd 2 Sd 3 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 | °°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°°° | Dec int Dec |
| Sd 1 Sd 2 Sd 3 Sd 4 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 | °° °° °° °° °° °° °° °° °° °° °° °° °° | Dec int Dec int Dec int Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 | ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 | ° + ° + ° + ° + ° + ° + ° + ° + ° + ° + | Dec int Dec |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 30.0 | ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 | ************************************** | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -558 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 | + + + + + + + + + + + + + + + + + + + | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -558 -30.0 -50.0 -50.0 -50.0 -50.0 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 110.0 | 0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Winter outside temperature analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -58 -30.0 -58 -30.0 -58 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 110.0 30.0 | 0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -58 -30.0 -58 -30.0 -58 -50.0 -58 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 110.0 54 30.0 55 56 56 56 56 56 56 56 56 56 | 10 10 10 10 10 10 10 10 10 10 10 10 10 1 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 Sd 12 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Winter outside temperature analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -50.0 -58 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 30.0 54 30.0 55 56 56 56 56 56 56 56 56 56 | + + + + + + + + + + + + + + + + + + + | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Summer outside temperature analog 1 Summer outside temp. differential analog 1 Winter outside temp. differential analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 30.0 54 54 54 54 54 54 54 54 54 54 | 0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 Sd 12 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -50.0 -58 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 30.0 54 30.0 55 56 56 56 56 56 56 56 56 56 | 0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 Sd 12 Sd 13 Sd 14 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Summer outside temperature analog 1 Summer outside temp. differential analog 1 Winter outside temp. differential analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 54 54 54 54 54 54 54 54 54 | + 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 Sd 12 Sd 13 Sd 14 Sd 15 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Summer outside temperature analog 1 Winter outside temp. differential analog 1 Dynamic set point: summer offset analog 2 Dynamic set point: summer offset analog 1 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 30.0 54 54 54 54 54 54 54 54 54 54 | 0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 +0 | Dec int |
| Sd 1 Sd 2 Sd 3 Sd 4 Sd 5 Sd 6 Sd 7 Sd 8 Sd 9 Sd 10 Sd 11 Sd 12 Sd 13 Sd 14 | 10= modulating condenser fan circuit 1 PWM 11= modulating condenser fan circuit 2 PWM o1c50 ON / OFF output with the same meaning of relè Description Maximum dynamic Offset in chiller mode Maximum dynamic Offset in heat pump mode External air setpoint in chiller mode External air setpoint in heat pump mode External air differential in chiller mode External air differential in heat pump mode Dynamic set point: summer offset analog 1 Dynamic set point: winter offset analog 1 Summer outside temperature analog 1 Winter outside temperature analog 1 Winter outside temp. differential analog 1 Dynamic set point: summer offset analog 2 Dynamic set point: winter offset analog 2 Dynamic set point: winter offset analog 2 Dynamic set point: winter offset analog 2 | min -30.0 -54 -30.0 -54 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -58 -50.0 -58 -50.0 -58 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 -30.0 -54 | max 30.0 54 30.0 54 110.0 230 110.0 230 30.0 54 30.0 54 30.0 54 110.0 230 30.0 54 54 54 54 54 54 54 54 54 54 | 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 + 0 + | Dec int |

| Sd 17 | | -30.0 | 30.0 | °C | Dec |
|--|--|--|--|--|---|
| | Summer outside temp. differential analog 2 | -54 | 54 | °F | int |
| Sd 18 | | -30.0 | 30.0 | °C | Dec |
| | Winter outside temp. differential analog 2 | -54 | 54 | °F | int |
| Sd 19 | | -30.0 | 30.0 | °C | Dec |
| | Dynamic set point: summer offset relay AUX1 | -54 | 54 | °F | int |
| Sd 20 | | -30.0 | 30.0 | °C | Dec |
| | Dynamic set point: winter offset relay AUX1 | -54 | 54 | °F | int |
| Sd 21 | | -50.0 | 110.0 | °C | Dec |
| | Summer outside temperature relay AUX1 | -58 | 230 | °F | int |
| Sd 22 | | -50.0 | 110.0 | °C | Dec |
| | Winter outside temperature relay AUX1 | -58 | 230 | °F | int |
| Sd 23 | | -30.0 | 30.0 | °C | Dec |
| | Summer temperature differential relay AUX1 | -54 | 54 | °F | int |
| Sd 24 | | -30.0 | 30.0 | °C | Dec |
| | Winter temperature differential relay AUX1 | -54 | 54 | °F | int |
| Sd 25 | | -30.0 | 30.0 | °C | Dec |
| | Dynamic set point: summer offset relay AUX2 | -54 | 54 | °F | int |
| Sd 26 | | -30.0 | 30.0 | °C | Dec |
| | Dynamic set point: winter offset relay AUX2 | -54 | 54 | °F | int |
| Sd 27 | | -50.0 | 110.0 | °C | Dec |
| | Summer outside temperature relay AUX2 | -58 | 230 | °F | int |
| Sd 28 | | -50.0 | 110.0 | °C | Dec |
| | Winter outside temperature relay AUX2 | -58 | 230 | °F | int |
| Sd 29 | , | -30.0 | 30.0 | °C | Dec |
| | Summer temperature differential relay AUX2 | -54 | 54 | °F | int |
| Sd 30 | | -30.0 | 30.0 | °C | Dec |
| | Winter temperature differential relay AUX2 | -54 | 54 | °F | int |
| Parameter | Description | min | max | M. u. | Resolution |
| ES 1 | Start of the Time band 1 (0÷24) | 0 | 24.00 | Hr | 10 Min |
| ES 2 | End of the Time Band 1 (0÷24) | 0 | 24.00 | Hr | 10 Min |
| ES 3 | Start of the Time band 2 (0÷24) | 0 | 24.00 | | 10 Min |
| ES 4 | | | | Hr Hr | |
| | End of the Time Band 2 (0÷24) | 0 | 24.00 | | 10 Min |
| ES 5 | Start of the Time band 3 (0÷24) | 0 | 24.00 | Hr | 10 Min |
| ES 6 | End of the Time Band 3 (0÷24) | 0 | 24.00 | Hr | 10 Min |
| ES 7 | Monday: energy saving activated | 0 - 0 | 7 - 7 | | |
| 1 | 1 A | 1 0 - 0 | 1 - 1 | | |
| FC 2 | Automatic unit on-off | 0-0 | , - , | | |
| ES 8 | Tuesday energy saving activated | 0 - 0 | 7 - 7 | | |
| | Tuesday energy saving activated Automatic unit on-off | + | | | |
| ES 8 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated | + | | | |
| ES 9 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off | 0 - 0 | 7 - 7 | | |
| | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated | 0 - 0 | 7 - 7 | | |
| ES 9 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off | 0 - 0 | 7 - 7 7 - 7 | | |
| ES 9 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated | 0 - 0 | 7 - 7 7 - 7 | | |
| ES 9 ES 10 ES 11 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off | 0-0 | 7 - 7 7 - 7 7 - 7 | | |
| ES 9 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated | 0 - 0 0 - 0 0 - 0 | 7 - 7 7 - 7 7 - 7 | | |
| ES 9 ES 10 ES 11 ES 12 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off | 0-0 | 7 - 7 7 - 7 7 - 7 | | |
| ES 9 ES 10 ES 11 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Sunday energy saving activated | 0 - 0 0 - 0 0 - 0 0 - 0 | 7 - 7 7 - 7 7 - 7 7 - 7 | | |
| ES 9 ES 10 ES 11 ES 12 ES 13 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 | | |
| ES 9 ES 10 ES 11 ES 12 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Sunday energy saving activated | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 30.0 | °C | Dec |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 30.0 54 | °F | int |
| ES 9 ES 10 ES 11 ES 12 ES 13 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 | °F °C | int Dec |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 | °F °C °F | int Dec int |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -30.0 -30.0 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 30.0 54 25.0 45 30.0 | °F °C °F °C | int Dec int Dec |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -30.0 -30.0 -54 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 30.0 54 25.0 45 30.0 54 | °F °C °F °C | int Dec int Dec int |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -30.0 -30.0 -54 0.1 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 | °F °C °F °C | int Dec int Dec int Dec |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -30.0 -30.0 -54 | 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 7 - 7 30.0 54 25.0 45 30.0 54 | °F °C °F °C | int Dec int Dec int |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 0 - 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 | °F °C °F °C °F | int Dec int Dec int Dec int Dec int |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -30.0 -30.0 -54 0.1 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 | °F °C °F °C | int Dec int Dec int Dec |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 1 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 25.0 45 25.0 | °F °C °F °C °F °C °F | int Dec int Dec int Dec int min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 | °F °C °F °C °F 10 min | int Dec int Dec int Dec int min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 1 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 25.0 25.0 | °F °C °F °C °F °C °F 10 min | int Dec int Dec int Dec int Dec int The min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 25.0 45 25.0 | °F °C °F °C °F 10 min Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 25.0 24.00 24.00 24.00 24.00 24.00 | °F °C °F °C °F 10 min Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 25.0 45 25.0 | °F °C °F °C °F 10 min Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 -30.0 -54 0.1 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 25.0 24.00 24.00 24.00 24.00 24.00 | °F °C °F °C °F 10 min Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 3 Domestic hot water (0÷24) Start of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) | 0-0 0-0 0-0 0-0 0-0 0-0 0-0 -30.0 -54 0.1 0 1 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 24.00 24.00 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) | 0-0 0-0 0-0 0-0 0-0 0-0 0-0 -30.0 -54 0.1 0 1 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 ES 26 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in heat pump mode Energy Saving setpoint offset in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 2 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) Monday: Domestic hot water 2 nd set point activation Tuesday: Domestic hot water 2 nd set point activation | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 1 0 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 7 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 ES 26 ES 27 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 2 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) End of the Time band 5 Domestic hot water (0÷24) | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 0 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 7 7 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 ES 26 ES 27 ES 28 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 2 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) Monday: Domestic hot water 2 nd set point activation Tuesday: Domestic hot water 2 nd set point activation Thursday: Domestic hot water 2 nd set point activation | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 0 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 7 7 7 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 ES 26 ES 27 ES 28 ES 29 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Energy Saving differential in chiller mode Energy Saving differential in chi | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 0 0 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 24.00 24.00 24.00 24.00 24.00 7 7 7 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |
| ES 9 ES 10 ES 11 ES 12 ES 13 ES 14 ES 15 ES 16 ES 17 ES 18 ES 19 ES 20 ES 21 ES 22 ES 23 ES 24 ES 25 ES 26 ES 27 ES 28 | Tuesday energy saving activated Automatic unit on-off Wednesday energy saving activated Automatic unit on-off Thursday energy saving activated Automatic unit on-off Friday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Saturday energy saving activated Automatic unit on-off Sunday energy saving activated Automatic unit on-off Energy Saving setpoint offset in chiller mode Energy Saving setpoint offset in chiller mode Energy Saving differential in chiller mode Energy Saving differential in heat pump mode Energy Saving differential in heat pump mode Maximum ON time when the unit is switched on by keyboard starting from OFF state by RTC 0= Not enabled Start of the Time band 1 Domestic hot water (0÷24) End of the Time band 2 Domestic hot water (0÷24) Start of the Time band 2 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) End of the Time band 3 Domestic hot water (0÷24) Monday: Domestic hot water 2 nd set point activation Tuesday: Domestic hot water 2 nd set point activation Thursday: Domestic hot water 2 nd set point activation | 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 0 - 0 -30.0 -54 0.1 0 0 0 0 0 0 0 | 7-7 7-7 7-7 7-7 7-7 7-7 7-7 30.0 54 25.0 45 30.0 54 25.0 45 25.0 45 24.00 24.00 24.00 24.00 7 7 7 7 | °F °C °F °C °F 10 min Hr Hr Hr Hr | int Dec int Dec int Dec int Dec int Min 10 Min 10 Min 10 Min 10 Min 10 Min |

| ES 32 | 2nd set point Domestic hot water offset | -30.0 | 30.0 | °C | Dec |
|-----------|--|------------|-------------|----------------|------------|
| ES 33 | 2nd set point Domestic hot water differential | -54 0.1 | 54 25.0 | °F °C | int Dec |
| L5 55 | 21d Set point Domestic not water differential | 0.1 | 45 | °F | int |
| Parameter | Description | min | max | M. u. | Resolution |
| Cr1 | Type of functioning compressor rack 0= Not enabled 1= regulation by ST09 probe | 0 | 2 | | |
| Cr2 | 2 = regolation by pressure probe (Evaporator pressure probe) Set point compressor suction probe | Cr03 | Cr04 | Bar Psi | Dec int |
| Cr3 | Minimum set point compressor suction probe | 0 | Cr02 | Bar Psi | Dec int |
| Cr4 | Maximum set point compressor suction probe | Cr02 | 50 725 | Bar Psi | Dec int |
| Cr5 | Regulation band suction probe | 0.1 1 | 14.0 203 | Bar Psi | Dec int |
| Cr6 | Set energy saving compressor rack | 0.0 0 | 14.0 203 | Bar psi | Dec int |
| Cr7 | Differential energy savingcompressor rack | 0.1 1 | 14.0 203 | Bar Psi | Dec int |
| Cr8 | Number of compressors enabled in case of failure probe $0 \div 6$ | 0 | 6 | | |
| Cr9 | Number od ventilation step in case of failure probe $0 \div 4$ | 0 | 4 | | |
| Parameter | Description | min | max | M. u. | Resolution |
| CO 1 | Minimum compressor ON time after the start-up. | 0 | 250 | 10 sec | 10 sec |
| CO 3 | Minimum compressor OFF time after the switching off. ON delay time between two compressors or compressor and valve. During this time the led of the next resource is blinking. | 1 | 250 250 | 10 sec Sec | 10 sec |
| CO 4 | OFF delay time between two compressors or compressor and valve. During | 0 | 250 | Sec | |
| CO 5 | this time the led of the next resource is blinking. Output time delay after the main power supply start-up to the unit. All the loads are delayed in case of frequently power failures. | 0 | 250 | 10 Sec | 10 sec |
| CO 6 | Functioning (see Capacity Control) | | | | |
| | 0= With on/off steps 1= Continuous with steps and direct action 2= Continuous with steps and reverse action 3= Continuous with steps and direct total action | 0 | 3 | | |
| CO 7 | Start-up with minimum compressor power / automatic start-unloading valve 0 = Only at the compressor start-up (Minimum power automatic start-unloading valve off) 1= At the compressor start-up and during the termoregulation (Minimum power / automatic start-unloading valve off) 2 = Only at the screw compressor start-up (Minimum power automatic start-unloading valve off) 3= At the compressor start-up and during the termoregulation (Minimum power / Unloading valve ON with compressor off) | 0 | 3 | | |
| CO 8 | Relay ON time of the Solenoid valve Intermittent for screw compressor, with 0 the function is not enabled. | 0 | 250 | Sec | |
| CO 9 | Relay OFF time of the Solenoid valve Intermittent for screw compressor | 0 | 250 | Sec | |
| CO 10 | Kind of compressor start-up 0= Direct (vedi avviamento compressors) 1= Part - winding | 0 | 1 | | |
| CO 11 | If CO10= 1 part - winding start-up time. To change the time delay between the two contactors of the two compressor circuits. | 0 | 100 | Dec. di Sec | 0.1 sec |
| CO 12 | Not used | | | | |
| CO 13 | By-pass gas valve start-up time / automatic start-unloading valve (capacity step control) | 0 | 250 | sec | |
| CO 14 | Compressor rotation (See compressor rotation) 0 = Sequential 1 = Compressors rotation based on time running hours 2 = Compressors rotation based on number of starts-up | 0 | 2 | | |
| CO 15 | Circuit balancing (See Circuit balancing) 0= Circuit saturation 1= Circuit balancing | 0 | 1 | | |
| CO 16 | Operative mode of the evaporator pump / supply fan (See Evaporator pump function) 0= Not enabled (evaporator pump or supply fan). 1= Continuous. When the unit is running in Chiller or HP the pump or the supply fan is running. 2= With compressor. When a compressor is running also the pump or the supply fan is running. | 0 | 2 | | |

| CO 17 | ON compressor delay after water pump / supply fan start-up (See water pump functioning). | 1 | 250 | sec | 10sec |
|----------------|---|--------------|--------------|------------|------------|
| CO 18 | OFF delay evaporator water pump / supply fan after compressor switching OFF. This delay is also active when the unit is turned in stand-by (See | 0 | 250 | Min | |
| CO 19 | evaporator water pump function). Number of time running hours for pump rotation (See water pump group | 0 | 999 | 10Hr | 10Hr |
| CO 20 | function) Time to make run the pumps together before rotating from one to the other | 0 | 250 | Sec | |
| CO 21 | (See water pump group function) Operative mode for condenser water pump (See condenser water pump function) 0= Not enabled. 1= Continuous. When the unit is running in Chiller or HP the is running. 2= With compressor. When a compressor is running also the pump is running. | 0 | 2 | | |
| CO 22 | Free | | | | |
| CO 23 | OFF delay condenser water pump after compressor switching OFF. This delay is also active when the unit is turned in stand-by (See evaporator water pump function). | 0 | 250 | Min | |
| CO 24 | Number of time running hours for pump rotation (See water pump group function). | 0 | 999 | 10Hr | 10Hr |
| CO 25 | Time to make run the pumps together before rotating from one to the other (See water pump group function). | 0 | 250 | Sec | |
| CO 26 | Compressor 1 operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 27 | Compressor 2 operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 28 | Compressor 3 operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 29 | Compressor 4 operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 30 | Not used | 0 | 0 | | |
| CO 31 CO 32 | Not used "Evaporator pump / Supply fan" operation time to generate maintenance | 0 | 0 | | |
| | warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 33 | 2nd Evaporator pump operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 34 CO 35 | Condenser pump operation time to generate maintenance warning | 0 | 999 999 | 10 Hr | 10 Hr |
| CO 36 | 2nd Condenser pump operation time to generate maintenance warning Pump down operating mode (See pump down ON/OFF function) | U | 999 | 10 Hr | 10 Hr |
| | 0= Not enabled 1= Unit off with pump–down, unit on without pump–down 2= Unit off with pump–down, unit on with pump–down 3= Chiller mode off with pump–down, chiller mode on without pump–down 4= Chiller mode off with pump–down, chiller mode on with pump–down | 0 | 4 | | |
| CO 37 | Pump-down pressure setpoint (See pump down ON/OFF function) | 0.0 | 50.0 725 | Bar psi | Dec int |
| CO 38 | Pump-down pressure differential (See pump down ON/OFF function) | 0.1 1 | 12.0 174 | Bar psi | Dec int |
| CO 39 | Maximum pump–down time duration at start-up and stop (See pump down ON/OFF function) | 0 | 250 | Sec | |
| CO 40 | Unloading compressor setpoint in chiller. From high temperature of the evaporator water inlet (See unloading function). | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| CO 41 | Unloading Differential. From high temperature of the evaporator water inlet (See unloading function). | 0.1 0 | 25.0 45 | °C °F | Dec int |
| CO 42 | Delay time to engage the Unloading function from high temperature of the evaporator water inlet (See unloading function). | 1 | 250 | 10 Sec | 10 sec |
| CO 43 | Maximum unloading duration time to keep activated the Unloading function from high temperature of the evaporator water inlet (See unloading function). | 0 | 250 | Min | |
| CO 44 | Unloading compressor setpoint. From temperature / pressure in chiller mode | -50.0 | 110.0 | °C | Dec |
| | (See unloading function). | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| CO 45 | Unloading Differential. From temperature / pressure in chiller mode (See | 0.1 | 725 25.0 | Psi °C | int Dec |
| 50 45 | unloading function). | 0.1 | 25.0 45 | °F | int |
| | allocating randicity. | 0.1 | 14.0 | Bar | Dec |
| | | 1 | 203 | Psi | int |
| CO 46 | Unloading compressor setpoint. From temperature / pressure in HP mode | -50.0 | 110.0 | °C | Dec |
| | (See unloading function). | -58 0.0 | 230 50.0 | °F Bor | int |
| | | 0.0 | 725 | Bar Psi | Dec int |
| CO 47 | Unloading Differential. From temperature / pressure in HP mode (See | 0.1 | 25.0 | °C | Dec |
| | unloading function). | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| CO 48 | Maximum unloading duration time from temporature /pressure control | 1 | 203 | Psi Min | int |
| CO 49 | Maximum unloading duration time from temperature/pressure control. Number of steps for circuit with active unloading | 1 | 250 | Min | |
| | 1= 1st step 2= 2nd step | 1 | 3 | | |
| | 3= 3rd step | | | | |

| CO 50 | Minimum ON time of the capacity step after the unloading function start (only for capacity compressor) | 0 | 250 | Sec | |
|----------------|--|-----------|-------------|---------------|------------|
| CO 51 | Setpoint of the solenoid valve (on) of the liquid injection | 0 | 150 | °C | Dec / int |
| CO 52 | Setpoint of the solenoid valve (off) of the liquid injection | 32 0.1 | 302 25.0 | °F °C | int Dec |
| | . , , , , , | 0 | 45 | °F | int |
| CO 53 | Maximum time of work in neutral zone without insert resource | 0 | 250 | Min | 10 Min |
| CO 54 | Maximum time of work in neutral zone without rotation resource | 0 | 999 | Hr | 1Hr |
| CO 55 | Set point unloading compressor from low evaporator water temperature | -50.0 | 110.0 | °C | Dec |
| 00.50 | | -58 | 230 | °F | int |
| CO 56 | Differential unloading compressor from low evaporator water temperature | 0.1 | 25.0 45 | °C °F | Dec |
| | | 0 0.1 | 45 14.0 | Bar | int Dec |
| | | 1 | 203 | Psi | int |
| CO 57 | Maximum unloading duration time from low evaporator water temperature | 0 | 250 | Min | |
| CO 58 | maximum time pump-down in stopped CO58 = 0 Not enabled | 0 | 250 | Sec | |
| CO 59 | maximum time pump-down in started CO59 = 0 Not enabled | 0 | 250 | Sec | |
| CO 60 | Maximum time start up compressor inverter controlled | | | | |
| 00 00 | Maximum time start up compressor inverter controlled | 0 | 250 | sec | |
| CO 61 | Minimum value proportional output from start up compressor | 0 | 100 | % | |
| CO 62 | Minimum time capacity variation from start up compressor inverter controlled | 0 | 250 | sec | |
| CO 63 | Minimum percentage continuative of work of the compressor inverter controlled before to start counting CO64 time | 0 | 100 | % | |
| CO 64 | Maximum time continuative of work of the compressor with percentage less of CO63 | 0 | 250 | Min | 10 Min |
| CO 65 | Time of forcing the compressor inverter controlled to the maximum power | 0 | 250 | sec | sec |
| CO 66 | Maximum time continuative of work of the compressor inverter controlled | 0 | 999 | Hr | 1Hr |
| CO 67 | Minimum value of the compressor 1 inverter controlled | 1 | CO68 | 3 % | |
| CO 68 | Maximum value of the compressor 1 inverter controlled | CO67 | 100 | % | |
| CO 69 | Minimum value of the compressor 2 inverter controlled | 1 | CO70 | | |
| CO 70 | Maximum value of the compressor 2 inverter controlled | CO69 | | % | |
| CO 71 | Minimum time capacity variation compressor inverter controlled | 1 | 250 | sec | |
| CO 72 | Maximum operating time of a single compressor | 0 | 250 | Min | |
| CO 73 | Domestic hot water pump hour counter | 0 | 999 | 10 Hr | 10 Hr |
| CO 74 | Solar panel water pump hour counter | 0 | 999 | 10 Hr | 10 Hr |
| CO 75 | Forced time to reverse the 4 way valve when the compressor is switched off | 0 | 250 | sec | |
| CO 76 | Maximum number of compressors to use in Chiller | 1 | 15 | | |
| CO 77 CO 78 | Maximum number of compressors to use in Heat pump Maximum number of compressors to use in Domestic hot water | 1 | 15 15 | | |
| CO 79 | Maximum % output of the inverter compressor in Chiller | 1 | 100 | % | |
| CO 80 | Maximum % output of the inverter compressor in Heat pump | 1 | 100 | % | |
| CO 81 | Maximum % output of the inverter compressor in Domestic hot water | 1 | 100 | % | |
| CO 82 | Outside temperature to reduce inverter compressor speed in Heat pump | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| CO 83 | Hyetorogic tomporature to reduce inverter compressor appeal in Uset Times | 0.1 | 725 25.0 | Psi °C | int |
| 00 03 | Hysteresis temperature to reduce inverter compressor speed in Heat pump | 0.1 | 25.0 45 | °F | Dec int |
| | | 0.1 | 14.0 | Bar | Dec |
| | | 1 | 203 | Psi | int |
| CO 84 | Compressor speed if outside temperature > CO82 | 0 | 100 | % | |
| CO 85 | Evaporator water pump OFF time if the set point is reached | 0 | 250 | 10 min | |
| CO 86 | Evaporator water pump OFF time if the machine is STD-BY or OFF | 0 | 250 | 10 Ore | |
| CO 87 | Evaporator water pump ON time | 0 | 250 | Sec | 10sec |
| CO 88 | Condenser water pump OFF time if the set point is reached | 0 | 250 | 10 min | |
| CO 89 CO 90 | Condenser water pump OFF time if the machine is STD-BY or OFF Condenser water pump ON time | 0 | 250 250 | 10 Ore Sec | 10sec |
| CO 90 | Minimum time between to switch on of the compressor | 0 | 250 | sec | 10560 |
| CO 92 | Compressor activation delay starting from water solenoid valve activation | 0 | 250 | sec | |
| CO 93 | Water solenoid valve de-activation delay starting from compressor de- | 0 | 250 | sec | |
| CO 94 | activation % output of the inverter compressor in defrost | 1 | 100 | % | |
| CO 95 | Free cooling water pump operation time to generate maintenance warning | 0 | 999 | 10 Hr | 10 Hr |
| CO 96 | % output of the inverter compressor in unloading | 1 | 100 | % | 10111 |
| 30 00 | 1 /0 daipat d. tilo involtor demprededer in diriodding | • | . 50 | 70 | l . |

| CO 97 | Disable condenser water pump with contemporary chiller + domestic hot | | | | |
|-----------|--|----------|-------------|------------|------------|
| 00 91 | water operation | | | | |
| | 0= water pump enabled | 0 | 1 | | |
| | 1= water pump disabled | | | | |
| CO 98 | Compressor contemporary operation time for rotation | 0 | 250 | sec | |
| CO 99 | Enable supply fan / evaporator water pump when condensing unit doesn't | 0 | 1 | | |
| | require compressors activation | U | ı | | |
| Parameter | Description | min | max | M. u. | Resolution |
| US 1 | Auxiliary relay 1 operating mode (See graph and auxiliary relay functions) | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | 0 | 4 | | |
| | 2= Available only when the unit is on with direct action 3= Always available with reverse action | | | | |
| | 4= Available only when the unit is on with reverse action | | | | |
| US 2 | Analog input configuration for auxiliary relay 1 control. Allows to select which | | | | |
| 002 | probe value Pb1Pb10 controls the relay | 1 | 20 | | |
| US 3 | | -50.0 | | °C | Dec |
| | | -58 | US5 | °F | int |
| | | 0.0 | 033 | Bar | Dec |
| | Auxiliary relay 1 summer minimum set point | 0 | | Psi | int |
| US 4 | | | 110.0 | °C | Dec |
| | | US5 | 230 | °F | int |
| | Auxiliary ralay 1 summar maximum set point | | 50.0 725 | Bar Psi | Dec int |
| US 5 | Auxiliary relay 1 summer maximum set point | + | 120 | °C | Dec |
| 555 | | | | °F | int |
| | | US3 | US4 | Bar | Dec |
| | Auxiliary relay 1 summer set point | | | Psi | int |
| US 6 | | -50.0 | | °C | Dec |
| | | -58 | US8 | °F | int |
| | | 0.0 | 000 | Bar | Dec |
| | Auxiliary relay 1 winter minimum set point | 0 | 440.0 | Psi | int |
| US 7 | | | 110.0 | ŝõ | Dec |
| | | US8 | 230 50.0 | Bar | int Dec |
| | Auxiliary relay 1 winter maximum set point | | 725 | Psi | int |
| US 8 | Tradition Foldy 1 winter maximum set point | | 720 | °C | Dec |
| | | | | °F | int |
| | | US6 | US7 | Bar | Dec |
| | Auxiliary relay 1 winter set point | | | Psi | int |
| US 9 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | Audilian valav 4 avrasa sa differential | 0.1 | 14.0 | Bar | Dec |
| US 10 | Auxiliary relay 1 summer differential | 0.1 | 203 25.0 | Psi °C | int Dec |
| 03 10 | | 0.1 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 1 winter differential | 1 | 203 | Psi | int |
| US 11 | Auxiliary relay 2 operating mode (See graph and auxiliary relay functions) | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | 0 | 4 | | |
| | 2= Available only when the unit is on with direct action | | | | |
| | 3= Always available with reverse action | | | | |
| US 12 | 4= Available only when the unit is on with reverse action Analogue input configuration for auxiliary relay 2 control . Allows to select | | | | |
| 30 12 | which probe value Pb1Pb10 controls the relay | 1 | 20 | | |
| US 13 | . , | -50.0 | | °C | Dec |
| • | | -58 | US15 | °F | int |
| | | 0.0 | 0313 | Bar | Dec |
| | Auxiliary relay 2 summer minimum set point | 0 | | Psi | int |
| US 14 | | | 110.0 | °C | Dec |
| | | US15 | 230 | °F Bor | int |
| | Auxiliary relay 2 summer maximum set point | 1 | 50.0 725 | Bar Psi | Dec int |
| US 15 | Admirary rolay 2 Summer maximum set point | | 120 | °C | Dec |
| 30 10 | | | | °F | int |
| | | US13 | US14 | Bar | Dec |
| | Auxiliary relay 2 summer set point | <u> </u> | <u> </u> | Psi | int |
| US 16 | | -50.0 | | °C | Dec |
| | | -58 | US18 | °F | int |
| | And the manager of the control of th | 0.0 | | Bar | Dec |
| US 17 | Auxiliary relay 2 winter minimum set point | 0 | 440.0 | Psi | int |
| 115 17 | | 1 | 110.0 | °C | Dec |
| 00 17 | | | 230 | ٥F | int |
| 00 17 | | US18 | 230 50.0 | °F Bar | int Dec |

| US 18 | | | | °C | Dec |
|--------|---|--------------|-------|------------|------------|
| | | US16 | 11017 | °F | int |
| | | 0516 | US17 | Bar | Dec |
| | Auxiliary relay 2 winter set point | | | Psi | int |
| US 19 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 2 summer differential | 1 | 203 | Psi | int |
| US 20 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Auxiliary relay 2 winter differential | 1 | 203 | Psi | int |
| US 21 | Maximum operating time of auxiliary realys | 0 | 250 | min | |
| US 22 | Auxiliary proportional output n° 1 operating mode | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | • | | | |
| | 2= Available only when the unit is on with direct action | 0 | 4 | | |
| | 3= Always available with reverse action | | | | |
| | 4= Available only when the unit is on with reverse action | | | | |
| US 23 | Analogue input configuration for auxiliary control 1 | | | | |
| | Allows to select which probe value Pb1Pb10 controls output | 1 | 20 | | |
| US 24 | 7 mono to conset mineri prose tando i si mi si o conmene canpar | -50.0 | | °C | Dec |
| | | -58 | | °F | int |
| | | 0.0 | US26 | Bar | Dec |
| | Analog output 1 summer minimum set point | 0.0 | | Psi | int |
| US 25 | | | 110.0 | °C | Dec |
| 00 23 | | | 230 | °F | int |
| | | US26 | 50.0 | Bar | Dec |
| | Analog output 1 summer maximum set point | | 725 | Psi | int |
| US 26 | Analog output i summer maximum set point | | 123 | °C | Dec |
| 03 20 | | | | °F | int |
| | | US24 | US25 | Bar | Dec |
| | Analog output 1 aummar aat point | | | Psi | int |
| US 27 | Analog output 1 summer set point | -50.0 | | °C | |
| 03 21 | | -50.0 -58 | | °F | Dec int |
| | | | US29 | | Dec |
| | Analog output 1 winter minimum act point | 0.0 | | Bar Psi | int |
| US 28 | Analog output 1 winter minimum set point | - 0 | 110.0 | °C | Dec |
| 05 26 | | | 230 | °F | |
| | | US29 | | | int |
| | Analog output 1 winter maximum act paint | | 50.0 | Bar | Dec |
| 110.00 | Analog output 1 winter maximum set point | | 725 | Psi °C | int |
| US 29 | | | | °F | Dec |
| | | US27 | US28 | Bar | int |
| | Analog output 1 winter act point | | | | Dec |
| US 30 | Analog output 1 winter set point | 0.1 | 25.0 | Psi °C | int |
| 03 30 | | 0.1 | 25.0 | °F | Dec |
| | | 0 | 45 | | int |
| | Analan autout 4 augusta andifferential | 0.1 | 14.0 | Bar | Dec |
| 110.04 | Analog output 1 summer differential | 1 | 203 | Psi | int |
| US 31 | | 0.1 | 25.0 | °C °F | Dec |
| | | 0 | 45 | | int |
| | Analog output 1 winter differential | 0.1 | 14.0 | Bar | Dec |
| 116.33 | Analog output 1 winter differential | 1 | 203 | Psi | int |
| US 32 | Analog output 1 minimum value | 0 | US33 | % | |
| US 33 | Analog output 1 maximum value | US32 | 100 | % | |
| US 34 | Auxiliary proportional output n° 2 operating mode | | | | |
| | 0= Not enabled | | | | |
| | 1= Always available with direct action | 0 | 4 | | |
| | 2= Available only when the unit is on with direct action | | | | |
| | 3= Always available with reverse action | | | | |
| 110.55 | 4= Available only when the unit is on with reverse action | | | | |
| US 35 | Analogue input configuration for auxiliary 2 control | 1 | 20 | | |
| | Allows to select which probe value Pb1Pb10 controls output | | | | |
| US 36 | | -50.0 | | °C | Dec |
| | | -58 | US38 | °F | int |
| | | 0.0 | 0000 | Bar | Dec |
| | Analog output 2 summer minimum set point | 0 | | Psi | int |
| US 37 | | | 110.0 | °C | Dec |
| | | US38 | 230 | °F | int |
| | | 0000 | 50.0 | Bar | Dec |
| | Analog output 2 summer maximum set point | | 725 | Psi | int |
| US 38 | | | | °C | Dec |
| | | US36 | US37 | °F | int |
| | | 0536 | 0537 | Bar | Dec |
| | Analog output 2 summer set point | | | Psi | int |
| - | | • | | | |

| US 39 | | | | | |
|-----------------------------|--|-------------|-----------|-------------|--------------|
| 00 00 | | -50.0 | | °C | Dec |
| | | | | °F | |
| | | -58 | US41 | | int |
| | | 0.0 | 0011 | Bar | Dec |
| | Analog output 2 winter minimum set point | 0 | | Psi | int |
| US 40 | There year, a minute of point | | 1100 | °C | |
| 03 40 | | | 110.0 | | Dec |
| | | US41 | 230 | °F | int |
| | | 0341 | 50.0 | Bar | Dec |
| | Analog output 2 winter maximum set point | | 725 | Psi | int |
| | Arialog output 2 winter maximum set point | | 125 | | |
| US 41 | | | | °C | Dec |
| | | | 11040 | °F | int |
| | | US39 | US40 | Bar | Dec |
| | Analan autori Quintan art maint | | | | |
| | Analog output 2 winter set point | | | Psi | int |
| US 42 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | | _ | | |
| | | 0.1 | 14.0 | Bar | Dec |
| | Analog output 2 summer differential | 1 | 203 | Psi | int |
| US 43 | | 0.1 | 25.0 | °C | Dec |
| 00 .0 | | _ | | °F | |
| | | 0 | 45 | | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Analog output 2 winter differential | 1 | 203 | Psi | int |
| US 44 | | 0 | US45 | % | |
| | Analog output 2 minimum value | | | | |
| US 45 | Analog output 2 maximum value | US44 | 100 | % | |
| US 46 | Operation mode under minimum value | 0 | 1 | | |
| | | | | | |
| US 47 | Probe 1 selection for evaporator water pump modulation in chiller | 0 | 20 | | <u> </u> |
| US 48 | Probe 2 selection for evaporator water pump modulation in chiller | 0 | 20 | | |
| US 49 | Set point for maximum speed of modulationg evaporator water pump in chiller | -50.0 | 110.0 | °C | Dec |
| UO 49 | Set point for maximum speed of modulationg evaporator water pump in chiller | | | | |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| | | 0 | | Psi | int |
| | | | 725 | | |
| US 50 | Proportional band for maximum speed of modulationg evaporator water pump | 0.1 | 25.0 | °C | Dec |
| | l in chiller | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | | | | | |
| | | 1 | 203 | Psi | int |
| US 51 | Minimum speed of the evaporator water pump in chiller | 0 | 100 | % | |
| US 52 | | 0 | | % | |
| | Maximum speed of the evaporator water pump in chiller | | 100 | % | |
| US 53 | Probe 1 selection for evaporator water pump modulation in Heat Pump | 0 | 20 | | |
| US 54 | Probe 2 selection for evaporator water pump modulation in Heat Pump | 0 | 20 | | |
| US 55 | | -50.0 | 110.0 | °C | D |
| 03 33 | Set point for maximum speed of modulationg evaporator water pump in Heat | | | _ | Dec |
| | Pump | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | Bar | Dec |
| | | 0 | 725 | Psi | |
| | | | | | int |
| US 56 | Proportional band for maximum speed of modulationg evaporator water pump | 0.1 | 25.0 | °C | Dec |
| | in Heat Pump | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | | _ | | | |
| | | 1 | 203 | Psi | int |
| US 57 | Minimum speed of the evaporator water pump in Heat Pump | 0 | 100 | % | |
| US 58 | Maximum speed of the evaporator water pump in Heat Pump | 0 | 100 | % | |
| | | | | | |
| US 59 | Speed of the water pump in Free Cooling | 0 | 100 | % | |
| US 60 | Speed of the water pump when compressor OFF | 0 | 100 | % | |
| | AUX 1 relay operation mode | , <u> </u> | | ,,, | 1 |
| IIC 64 | I AUA I IEIAV UUEIAUUH HIUUE | | | | |
| US 61 | | | | | |
| US 61 | 1= only in Chiller | 4 | 2 | | |
| US 61 | 1= only in Chiller | 1 | 3 | | |
| US 61 | 1= only in Chiller 2= only in Heat pump | 1 | 3 | | |
| | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | 1 | 3 | | |
| US 61 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode | 1 | 3 | | |
| | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode | | | | |
| | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller | 1 | 3 | | |
| | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump | | | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | | | | |
| | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | | | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode | 1 | 3 | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller | | | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump | 1 | 3 | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump | 1 | 3 | | |
| US 62 US 63 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | 1 | 3 | | |
| US 62 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode | 1 | 3 | | |
| US 62 US 63 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller | 1 | 3 | | |
| US 62 US 63 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode | 1 | 3 | | |
| US 62 US 63 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump | 1 | 3 | | |
| US 62 US 63 US 64 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump | 1 1 | 3 3 | M | Page listing |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 only in Chiller 2= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description | 1 | 3 | M. u. | Resolution |
| US 62 US 63 US 64 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 only in Chiller 2= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description | 1 1 | 3 3 | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output | 1 1 | 3 3 | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Tescription Fan configuration output 0 = Not enabled | 1 1 | 3 3 | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on | 1 1 1 min | 3 3 max | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on | 1 1 | 3 3 | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps | 1 1 1 min | 3 3 max | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation | 1 1 1 min | 3 3 max | M. u. | Resolution |
| US 63 US 64 Parameter FA 1 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation 4 = Proportional speed control | 1 1 1 min | 3 3 max | M. u. | Resolution |
| US 63 US 64 Parameter FA 1 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation 4 = Proportional speed control | 1 1 1 min | 3 3 max | M. u. | Resolution |
| US 62 US 63 US 64 Parameter | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation 4 = Proportional speed control Fan operating mode | 1 1 1 min 0 | 3 3 max 4 | M. u. | Resolution |
| US 63 US 64 Parameter FA 1 | 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 relay operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 1 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump AUX 2 analog output operation mode 1= only in Chiller 2= only in Heat pump 3= in Chiller and Heat pump Description Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation 4 = Proportional speed control | 1 1 1 min | 3 3 max | M. u. | Resolution |

| FA3 | If the condenser fan control is the triac output, when the regulation starts the trigger output will drive the condenser fan at the maximum voltage for the time FA 3 then, then the regulation will follow the temperature/pressure of the probe. | 0 | 250 | Sec | |
|-------|--|--------------|--------------|--------------|------------|
| FA 4 | Phase shifting of the fan motor | 0 | 8 | Micro Sec | 250μs |
| FA 5 | Number of condensing circuits 0= one condenser circuit 1= tow condenser circuits | 0 | 1 | | |
| FA 6 | Pre-ventilation time before turning on the compressor in chiller mode. To turn on the fan at the maximum speed before the compressor and reduce the successive condensing temperature/pressure increasing. (only if FA01=4) | 0 | 250 | Sec | |
| FA7 | Minimum speed for condenser fan in Chiller mode. To set the minimum fan speed percentage value (30100%), it is related to the fan power supply. | 0 | 100 | % | |
| FA8 | Maximum speed for condenser fan in Chiller mode. To set the maximim fan speed percentage value (30100%), it is related to the fan power supply. | 0 | 100 | % | |
| FA 9 | Proportional speed control FA01 = 4 | -50.0 | 110.0 | °C | Dec |
| | Temperature or pressure limit to enable the minimum speed FA 7 | -58 | 230 | °F | int |
| | ON/OFF regulation FA01 = 2/3 SETpoint step n° 1 | 0.0 | 50.0 725 | Bar | Dec int |
| FA 10 | Proportional speed control FA01 = 4 | -50.0 | 110.0 | Psi °C | Dec |
| 17.10 | Temperature or pressure limit to enable the maximum speed FA 8 | -58 | 230 | °F | int |
| | ON/OFF regulation FA01 = 2/3 | 0.0 | 50.0 | Bar | Dec |
| | SETpoint step n° 2 | 0 | 725 | Psi | int |
| FA 11 | Proportional speed control FA01 = 4 | 0.1 | 25.0 | °C | Dec |
| | Proportional band for condenser fan control in chiller | 0 | 45 | °F | int |
| | To set the temperature/pressure differential between the minimum and the maximum of the fan speed regulation. | 0.1 1 | 14.0 203 | Bar Psi | Dec int |
| | ON/OFF regulation FA01 = 2/3 Differential step circuit n° 1 | | 200 | 1 01 | iii. |
| FA 12 | Proportional speed control FA01 = 4 | 0.1 | 25.0 | °C | Dec |
| | CUT-OFF differential in chiller. To set a temperature/pressure differential to | 0 | 45 | °F | int |
| | stop the fan. | 0.1 | 14.0 | Bar | Dec |
| | ON/OFF regulation FA01 = 2/3 Differential step circuit n° 2 | 1 | 203 | Psi | int |
| FA 13 | Over ride CUT- OFF in chiller. To set a temperature/pressure differential to | 0.1 | 25.0 | °C | Dec |
| | keep the minimum fan speed. | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| FA 14 | CUT-OFF time delay. To set a time delay before activating the CUT-OFF | 1 | 203 | Psi | int |
| | function after the fan start-up. | | | | |
| | If after the compressor start-up the proportional regulator requires to turn off | 0 | 250 | Sec | |
| | the fan (cut-off) and FA14±0, the fan is on at the minimum speed for the time | | | | |
| FA 15 | set in this parameter. If FA14=0 the function is disabled. Night speed in chiller. To set the maximum fan speed percentage value | 0 | 100 | % | |
| FA 16 | (30100%), it is related to the fan power supply. Minimum speed for condenser fan in Heat Pump mode. | | 100 | 70 | |
| 1710 | To set the minimum fan speed percentage value (30100%), it is related to the fan power supply. | 0 | 100 | % | |
| FA 17 | Maximum speed for condenser fan in Heat Pump mode. To set the maximum fan speed percentage value (30100%), it is related to the fan power supply. | 0 | 100 | % | |
| FA 18 | Proportional speed control FA01 = 4 | -50.0 | 110.0 | °C | Dec |
| | Temperature or pressure limit to enable the minimum speed FA16 | -58 | 230 | °F | int |
| | ON/OFF regulation FA01 = 2/3 | 0.0 | 50.0 | Bar | Dec |
| FA 40 | SETpoint step n° 1 | 0 | 725 | Psi | int |
| FA 19 | Proportional speed control FA01 = 4 Temperature or pressure limit to enable the maximum speed FA17 | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| | ON/OFF regulation FA01 = 2/3 | 0.0 | 50.0 | Bar | Dec |
| | SETpoint step n° 2 | 0 | 725 | Psi | int |
| FA 20 | Proportional speed control FA01 = 4 | 0.1 | 25.0 | °C | Dec |
| | Proportional band for condenser fan control in heat pump | 0 | 45 | °F | int |
| | To set the temperature/pressure differential between the minimum and the | 0.1 | 14.0 | Bar | Dec |
| | maximum of the fan speed regulation. ON/OFF regulation FA01 = 2/3 | 1 | 203 | Psi | int |
| | Differential step circuit n° 1 | | | | |
| FA 21 | Proportional speed control FA01 = 4 | 0.1 | 25.0 | °C | Dec |
| | CUT-OFF differential in heat pump. To set a temperature/pressure differential | 0 | 45 | °F | int |
| | to stop the fan. | 0.1 | 14.0 | Bar | Dec |
| | ON/OFF regulation FA01 = 2/3 | 1 | 203 | Psi | int |
| | Differential step circuit n° 2 | | | | |

| FA 22 | | | | | |
|-------------------------------|--|---|--|--------------------------------|---|
| | Over ride CUT- OFF in Heat pump. To set a temperature/pressure differential | 0.1 | 25.0 | °C | Dec |
| | to keep the minimum fan speed. | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | | 1 | 203 | Psi | int |
| FA 23 | Night speed in Heat pump. To set the maximum fan speed percentage value | 0 | 400 | 0/ | |
| | (30100%), it is related to the fan power supply. | 0 | 100 | % | |
| FA 24 | Hot start setpoint | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| FA 25 | Hot start differential | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| FA 26 | ON/OFF regulation FA01 = 2/3 | -50.0 | 110.0 | °C | Dec |
| | SETpoint step n° 3 | -58 | 230 | °F | int |
| | 52 Form 6:55 11 5 | 0.0 | 50.0 | Bar | Dec |
| | | 0 | 725 | Psi | int |
| FA 27 | ON/OFF regulation FA01 = 2/3 | -50.0 | 110.0 | °C | Dec |
| 172 | SETpoint step n° 4 | -58 | 230 | °F | int |
| | OE TPOINT STOP IT 4 | 0.0 | 50.0 | Bar | Dec |
| | | 0 | 725 | Psi | int |
| FA 28 | ON/OFF regulation FA01 = 2/3 | -50.0 | 110.0 | °C | Dec |
| 1 7 20 | SETpoint step n° 3 | -58 | 230 | °F | int |
| | OE TPOINT STOP IT S | 0.0 | 50.0 | Bar | Dec |
| | | 0.0 | 725 | Psi | int |
| FA 29 | ON/OFF regulation FA01 = 2/3 | -50.0 | 110.0 | °C | Dec |
| FA 29 | SETpoint step n° 4 | -50.0 | 230 | °F | int |
| | SETPOINT STEP IT 4 | 0.0 | 50.0 | - | - |
| | | | | Bar | Dec |
| EA 20 | Dro ventilation in Lloot Dumn | 0 | 725 | Psi | int |
| FA 30 | Pre ventilation in Heat Pump | 0 | 250 | Sec | Sec |
| FA 04 | (only if FA01 = 4) | _ | | | |
| FA 31 | Post ventilation in Heat Pump | 0 | 250 | Sec | 10Sec |
| FA 32 | Outside temperature to enable post ventilation in Heat Pump | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| FA 33 | Condenser fan speed during post ventilation | 0 | 100 | % | |
| | Condenser fan in defrost | | | | |
| FA 34 | Condenser fan max modulation speed in defrost | 0 | 100 | % | |
| FA 35 | Temp/press to force condenser fan max speed in defrost | -50.0 | 110.0 | °C | Dec |
| FA 35 | 1.1 | -58 | 230 | °F | int |
| | | | | | |
| | | | | Bar | Dec |
| | | 0.0 | 50.0 | Bar Psi | Dec int |
| Parameter | Description | 0.0 0 | 50.0 725 | Psi | int |
| Parameter | Description Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode | 0.0 0 min | 50.0 725 max | Psi M. u. | int Resolution |
| Parameter Ar 1 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. | 0.0 0 | 50.0 725 max 110.0 | Psi M. u. °C | int |
| | • | 0.0 0 min | 50.0 725 max | Psi M. u. | int Resolution |
| Ar 1 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. | 0.0 0 min -50.0 -58 | 50.0 725 max 110.0 230 | Psi M. u. °C °F | int Resolution Dec int |
| | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. | 0.0 0 min -50.0 -58 | 50.0 725 max 110.0 230 | Psi M. u. °C °F | int Resolution Dec int Dec |
| Ar 1 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. | 0.0 0 min -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 | Psi M. u. °C °F °C °F | int Resolution Dec int |
| Ar 1 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. | 0.0 0 min -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 110.0 | Psi M. u. °C °F °C °F | int Resolution Dec int Dec |
| Ar 1 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. | 0.0 0 min -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 | Psi M. u. °C °F °C °F | Int Resolution Dec int Dec Int |
| Ar 2 Ar 3 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 110.0 230 | Psi M. u. °C °F °C °F | int Resolution Dec int Dec Int Dec int |
| Ar 1 Ar 2 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 110.0 230 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 110.0 230 | Psi M. u. °C °F °C °F | int Resolution Dec int Dec Int Dec int |
| Ar 2 Ar 3 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 | 50.0 725 max 110.0 230 25.0 45 110.0 230 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator inlet. 2= Evaporator outlet 1 and 2. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Artifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2 = Evaporator outlet 1 and 2 and common outlet 4 = External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2. 3= Evaporator out | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2. 3= Evaporator out | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. 4= Condenser water outlet 1 / 2 and common outlet | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 and common outlet 5= External temperature | 0.0 0 min -50.0 -58 0.1 0 -50.0 -58 0.1 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |
| Ar 1 Ar 2 Ar 3 Ar 4 Ar 5 Ar 6 | Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in Chiller mode. Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated. Regulation band for antifreeze in HP mode. Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2 and common outlet 4= External temperature Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. 4= Condenser water outlet 1 / 2 and common outlet 5= External temperature Anti-freeze heaters or condenser/evaporator water pump control with unit in | 0.0 0 min -50.0 -58 0.1 0 -50.0 0 | 50.0 725 max 110.0 230 25.0 45 110.0 230 25.0 45 1 | Psi M. u. °C °F °C °F °C °F | int Resolution Dec int Dec Int Dec int Dec |

| Ar 10 | Anti-freeze heaters control for condenser/evaporator faulty probe: 0= Anti-freeze heaters OFF | 0 | 1 | | |
|-------|---|--------------|--------------|----------|------------|
| | 1= Anti-freeze heaters ON | | | | |
| Ar 11 | Boiler function 0=Not enabled 1=Enabled for integration heating 2= Enabled for heating | 0 | 2 | | |
| Ar 12 | External air temperaure setpoint for boiler heaters (on) | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| Ar 13 | Temperature differential for boiler heaters (off) | 0.1 | 25.0 45 | °C °F | Dec int |
| Ar 14 | Time delay before turning the boiler on | 0 | 250 | | Min |
| Ar 15 | Setpoint for boiler heaters (on) in chiller | -50.0 -58 | 110.0 230 | °F | Dec int |
| Ar 16 | Proportional band for boiler heaters in chiller | 0.1 | 25.0 45 | °F | Dec int |
| Ar 17 | Setpoint for boiler heaters (on) in HP | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| Ar 18 | Proportional band for boiler heaters in HP | 0.1 0 | 25.0 45 | °F | Dec int |
| Ar 19 | External air setpoint to stop the compressor as integration function | -50.0 -58 | 110.0 230 | °F | Dec int |
| Ar 20 | External air differential to stop the compressor as integration function | 0.1 | 25.0 45 | °C °F | Dec int |
| Ar21 | Termoregulation probe anti freeze alarm in chiller mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature | 0 | 4 | • | |
| Ar22 | Termoregulation probe anti freeze alarm in heat pump mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature | 0 | 4 | | |
| Ar23 | Termoregulation probe anti freeze alarm water condenser 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. 4= Condenser water outlet 1 / 2 and common outlet 5= External temperature | 0 | 5 | | |
| Ar24 | Water pump / antifreeze alarm in OFF/ stand-by 0= Aways in OFF 1= ON only with thermoregulation control | 0 | 1 | | |
| Ar25 | Termoregulation probe water pump in antifreeze mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature Set point starting water pump in antifreeze alarm | -50.0 | 4 110.0 | °C | Dec |
| Ar27 | Differential starting water pump in antifreeze alarm | -58 0.1 | 230 25.0 | °F °C | int Dec |
| AIZI | | 0.1 | 45 | °F | int |
| Ar28 | Resistenze condensatore | -50.0 | 110.0 | °C | Dec |
| | Set point condenser antifreeze heaters in chiller | -58 | 230 | °F | int |
| Ar29 | Differential condenser antifreeze heaters in chiller | 0.1 | 25.0 45 | °C °F | Dec int |
| Ar30 | Set point condenser antifreeze heaters in heat pump | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| Ar31 | Differential condenser antifreeze heaters in heat pump | 0.1 0 | 25.0 45 | °C °F | Dec int |
| Ar32 | Enable condenser antifreeze heaters in OFF or STAND-BY 0= always off 1= enabled (ON or OFF depending on regulation request) | 0 | 1 | | |
| Ar33 | Condenser antifreeze heaters status in case of probe faulty 0 = OFF 1= ON | 0 | 1 | | |
| | Pompa acqua condensatore per funzionamento | antigelo | | | |
| Ar34 | Enable condenser water pump in OFF or STAND-BY Pompa/e acqua condensatore per antigelo in OFF o Stand-by 0= always off | 0 | 1 | | |
| | 1= enabled (ON or OFF depending on regulation request) | | | | |

| Ar35 | Condenser water pump probe selection for antifreeze operation 0= water pump not used per antifreeze 1= condenser common inlet probe 2= condenser common inlet probe, and condenser inlet circuit 1 probe, and condenser inlet circuit 2 probe 3= condenser outlet circuit 1 probe and condenser outlet circuit 2 probe 4= condenser common outlet probe, and condenser outlet circuit 1 probe, and condenser outlet circuit 2 probe 5= external temperature probe | 0 | 5 | | |
|--------------|---|--------------------------|-----------------------------|------------------------|--------------------------|
| Ar36 | Set point condenser water pump for antifreeze | -50.0 -58 | 110.0 230 | åô | Dec int |
| Ar37 | Differential condenser water pump for antifreeze | 0.1 0 | 25.0 45 | å Õ | Dec int |
| | Allarme antigelo condensatore | | • | | |
| Ar38 | Condenser antifreeze alarm delay starting from unit switching on | 0 | 250 | Sec | |
| Ar39 | Condenser antifreeze alarm delay in chiller | 0 | 250 | Sec | |
| Ar40 | Condenser antifreeze alarm events per hour to generate manual reset alarm in chiller | 0 | 16 | | |
| Ar41 | Condenser antifreeze alarm delay in heating | 0 | 250 | Sec | |
| Ar42 | Condenser antifreeze alarm events per hour to generate manual reset alarm in heat pump | 0 | 16 | | |
| Parameter | Description | min | max | M. u. | Resolution |
| dF 1 | Defrost configuration: 0= Not enabled 1= Start and stop for temperature / pressure 2= Start depends on probe selected by par. dF24 and stop for time duration (dF05) 3= Start depends on probe selected by par. dF24 and stop for external contact 4= Defrost only with condenser fan 5= Start from digital input and stop on probe selected by par. dF24 | 0 | 5 | | |
| dF 2 | Temperature or pressure of the defrost start-up | -50.0 | 110.0 | °C °F | Dec |
| | | -58 0.0 0 | 230 50.0 725 | bar psi | int Dec Int |
| dF 3 | Temperature or pressure of the defrost stop | -50.0 | 110.0 | °C | Dec |
| u. • | Tomporata of process of the soliton | -58 0.0 | 230 50.0 | °F bar | int Dec |
| JE 4 | | 0 | 725 | psi | Int |
| dF 4 dF 5 | Minimum defrost duration. Maximum defrost duration. | 0 | 250 250 | Sec Min | |
| dF 6 | Time delay between the defrost of two circuits | 0 | 250 | Min | |
| dF 7 | OFF compressor delay before the defrost | 0 | 250 | Sec | |
| dF 8 | OFF compressor delay after the defrost | 0 | 250 | Sec | |
| dF 9 | Defrost interval time of the same circuit | 1 | 99 | Min | |
| dF 10 | Temperature setpoint for combined defrost of the 1st circuit | -50.0 -58 | 110.0 230 | ŝ | Dec int |
| dF 11 | Temperature setpoint for combined defrost end of the 1st circuit. | -50.0 -58 | 110.0 230 | °F | Dec int |
| dF 12 | Temperature setpoint for combined defrost of the 2nd circuit | -50.0 -58 | 110.0 230 | °F | Dec int |
| dF 13 | Temperature setpoint for combined defrost end of the 2nd circuit. | -50.0 -58 | 110.0 230 | °C °F | Dec int |
| dF 14 | Activation of all the steps of the 1st circuit during the defrost. 0= Not enabled 1= Enabled | 0 | 1 | | |
| dF 15 | Activation of all the steps of the 2nd circuit during the defrost. 0= Not enabled 1= Enabled | 0 | 1 | | |
| dF 16 | Time delay between two compressor ON in defrost mode | 0 | 250 | Sec | |
| dF 17 | Fan control during defrost / dripping time 0= Not enabled 1= Only in defrost 2= For both functions defrost / dripping time | 0 | 2 | 200 | 5 |
| dF 18 | Pressure / temperature setpoint to force the ventilation ON during the defrost. | -50.0 -58 0.0 0 | 110.0 230 50.0 725 | °C °F bar psi | Dec int Dec Int |
| dF 19 | Minimum time delay before a forced defrost | 0 | 250 | sec | |
| dF 20 | Pressure / temperature setpoint for a forced defrost | -50.0 -58 0.0 | 110.0 230 50.0 | °C °F bar | Dec int Dec |
| | | 0 | 725 | psi | int |
| | | _ | | | |

| dF 21 | Forced defrost differential | 0.1 | 25.0 | °C | Dec |
|----------------|--|----------|-------|-------|------------|
| · | . 5.554 45564 dillololitical | 0.1 | 45 | °F | int |
| | | | | | |
| | | 0.1 | 14.0 | Bar | Dec |
| | | 1 | 203 | Psi | int |
| dF 22 | Defrost start-up with 2 circuits | | | | |
| | 0= Independent | | | | |
| | | 0 | 2 | | |
| | 1= If both have reached the necessary requirements | | | | |
| | 2= If one has reached the necessary requirements | | | | |
| dF 23 | End defrost for two circuits and common ventilation. | | | | |
| | 0= Independent | | | | |
| | | 0 | 2 | | |
| | 1= If both have reached the necessary end defrost requirements | | | | |
| | 2= If one has reached the necessary end defrost requirements | | | | |
| dF 24 | Start / stop defrost probe | | | | |
| u | 0= start and stop with condenser temperatur / pressure probe | | | | |
| | | | | | |
| | 1= start with evaporator pressure probe / stop with condenser temperatur / | | | | |
| | pressure probe | 0 | 3 | | |
| | 2= start with condenser temperatur / pressure probe / stop with evaporator | | | | |
| | | | | | |
| | pressure probe | | | | |
| | 3= start and stop with evaporator pressure probe | | | | |
| dF 25 | Stop supply fan diuring defrost cycle | 0 | 1 | | |
| u. 20 | | U | ' | | |
| | 0= Not enabled | | | | |
| | 1= enable | | | | |
| dF 26 | Set point to enable defrost with condenser fan | -50.0 | 110.0 | °C | Dec |
| u. 20 | Set point to oriable defreet with condenser rain | | | - | |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | bar | Dec |
| | | 0 | 725 | psi | int |
| 4E 27 | | _ | | | |
| dF 27 | | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | bar | Dec |
| | Hybrid evolungers set point 1 in shiller | | | | |
| | Hybrid exchangers set point 1 in chiller | 0 | 725 | psi | int |
| dF 28 | | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | | Dec |
| | 1, | | | bar | |
| | Hybrid exchangers set point 2 in chiller | 0 | 725 | psi | int |
| dF 29 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | - | | | |
| | | 0.1 | 14.0 | Bar | Dec |
| | Hybrid exchangers differential 1 in chiller | 1 | 203 | Psi | int |
| dF 30 | | 0.1 | 25.0 | °C | Dec |
| ui 30 | | _ | | | |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Hybrid exchangers differential 2 in chiller | 1 | 203 | Psi | int |
| dF 31 | | -50.0 | 110.0 | °C | |
| ar 31 | | | | | Dec |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | bar | Dec |
| | Hybrid evelopages set point 1 in heat nums | | | | |
| | Hybrid exchangers set point 1 in heat pump | 0 | 725 | psi | int |
| dF 32 | | -50.0 | 110.0 | °C | Dec |
| | | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | | |
| | This will some and a single of the single of | | | bar | Dec |
| | Hybrid exchangers set point 2 in heat pump | 0 | 725 | psi | int |
| dF 33 | | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| | | | | | |
| | | 0.1 | 14.0 | Bar | Dec |
| | Hybrid exchangers differential 1 in heat pump | 1 | 203 | Psi | int |
| dF 34 | <u> </u> | 0.1 | 25.0 | °C | Dec |
| u. UT | | | | | |
| | | 0 | 45 | °F | int |
| | | 0.1 | 14.0 | Bar | Dec |
| | Hybrid exchangers differential 2 in heat pump | 1 | 203 | Psi | int |
| 4E 2E | | <u> </u> | _50 | | iii. |
| dF 35 | Probe selection of the Hybrid exchangers | | | 1 | |
| | 0= outside temperature | 0 | 1 | 1 | |
| | 1= condenser temperature/pressure | | | | |
| 4E 26 | | | | | + |
| dF 36 | Forced time Hybrid exchangers in chiller mode when the compressor is | 0 | 250 | sec | |
| | switched on | | | | <u></u> |
| dF 37 | | -30.0 | 30.0 | °C | Dec |
| - - | | | | °F | |
| | | -54 | 54 | | int |
| | | -14.0 | 14.0 | Bar | Dec |
| | Max. offset of the Defrost dinamic set point | -203 | 203 | Psi | int |
| dF 38 | and the second s | -50.0 | | °C | |
| ur 36 | a | | 110.0 | | Dec |
| | Outside temperature set point of the Defrost dinamic set point | -58 | 230 | °F | int |
| dF 39 | | -30.0 | 30.0 | °C | Dec |
| 00 | Outside temperature differential of the Defrect dinamic set saint | | | °F | |
| | Outside temperature differential of the Defrost dinamic set point | -54 | 54 | | int |
| Parameter | Description | min | max | M. u. | Resolution |
| | | | | | |
| rC 1 | Domestic hot water regulation mode | 0 | 2 | | |
| | | | | | |

| 0 | rC 2 | Recovery modes | | | | |
|--|---|--|---|---|--|---|
| 1 = 2 indipendent circuit 2 = both the circuit in parallel 2 = both the circuit in parallel 3 | .02 | | | | _ | |
| 2 | | | 0 | 250 | Sec | |
| TC 3 | | | | | | |
| TC 4 Delay stime delay with step forced off after the recovery valve activation 0 250 Min | rC 3 | | 0 | 250 | Sec | |
| C 5 Recovery minimum time 0 250 Min | | | | | | |
| Minimum interval time between the end and the beginning of the next | | | | | | |
| recovery | | | | | | Doc |
| C Temperature setpoint to disable the recovery | 10 6 | | | | | |
| Temperature setpoint to disable the recovery | | recovery | | | | |
| Temperature setpoint to disable the recovery | | | | | 1 | |
| C 1 | *C 7 | Tanananati wa aata sint ta disabla tha waxayan. | | | | |
| C 8 | 10 7 | remperature setpoint to disable the recovery | | | | |
| Temperature differential to restore the recovery | | | | | | |
| Temperature differential to restore the recovery 0 250 Min | | | | | | |
| Maximum time with recovery disabled (if temperature/pressure within rC6- 0 1 | 0.0 | T | | | | Int |
| TC 10 Set point heat recovery | | | 0 | 250 | Min | |
| C 10 | rC 9 | | 0 | 1 | | |
| Parameter Para | | | _ | | | _ |
| Parameter Para | rC 10 | Set point heat recovery | | | _ | |
| Parameter Para | | | rC11 | rC12 | | - |
| If C 11 Minimum value of the heat recovery set point | | | 1011 | 1012 | | Dec |
| TC 12 Maximum value of the heat recovery set point TC 12 Maximum value of the heat recovery set point TC 13 T1 10.0 **C Psi int int int T1 10.0 **C Psi int Psi int T1 10.0 **C Psi int T1 10.0 **C Psi int Ps | | | | | | int |
| CT 12 | rC 11 | Minimum value of the heat recovery set point | -50.0 | | | Dec |
| Maximum value of the heat recovery set point | | | | rC10 | °F | int |
| rC 12 Maximum value of the heat recovery set point rC 13 Differential heat recovery RC 13 RC 15 RE 20 Dec 11 RE 2014 N. U. 1 RE 201 | | | 0.0 | 1010 | Bar | Dec |
| rC13 Differential heat recovery | | | 0 | | | int |
| Parameter Description | rC 12 | Maximum value of the heat recovery set point | | 110.0 | _ | Dec |
| Total Differential heat recovery | | | -C40 | 230 | °F | int |
| Parameter Description Differential heat recovery Differential heat | | | 1010 | 50.0 | Bar | Dec |
| Differential heat recovery 0.1 2.50 °C Dec int 0.1 4.40 Bar int Dec i | | | 1 | | 1 | |
| Parameter Description nin max M. u. Resolution FS 1 Domestic hot water regulation mode 0 0 2 0 0 0 | rC 13 | Differential heat recovery | 0.1 | 25.0 | °C | Dec |
| Parameter Description min max Mu. Resolution FS 1 Domestic hot water regulation mode 0 0 2 1 1 1 1 1 1 1 1 1 | | , | | | °F | int |
| Parameter Description min max Mu. Resolution FS 1 Domestic hot water regulation mode 0 0 2 1 1 1 1 1 1 1 1 1 | | | 0.1 | 14.0 | Bar | Dec |
| Parameter Description Demostic hot water regulation mode 0 | | | | | | |
| FS 1 Domestic hot water regulation mode 0 = not enabled 1=valves in water circuit 2=valves in water circuit 2=valves in water circuit 2=valves in yea circuit 0 = heating / cooling 1 = domestic hot water thermoregulation priority 0 = heating / cooling 1 = domestic hot water thermoregulation set point FS 3 Domestic hot water thermoregulation set point FS 4 Domestic hot water thermoregulation band FS 5 Domestic hot water thermoregulation band FS 6 Domestic hot water thermoregulation band FS 6 Domestic hot water thermoregulation band FS 6 Domestic hot water thermoregulation band FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Domestic hot water thermoregulation band FS 9 Domestic hot water set point FS 9 Dec 'C' FS 0 PS 0 | Parameter | Description | min | | | |
| 0= not enabled 1=valves in gas circuit 2=valves in gas circuit 0 = heating / cooling 1 = domestic hot water thermoregulation priority 2 = domestic hot water by digital input FS 3 Domestic hot water by digital input FS 4 Domestic hot water by digital input FS 5 Domestic hot water thermoregulation set point FS 6 Domestic hot water thermoregulation band FS 7 Domestic hot water thermoregulation band FS 8 Minimum value of the domestic hot water set point FS 9 Maximum value of the domestic hot water set point FS 9 Heaters enabling during the domestic hot water set point FS 9 Operation working time to activate the heaters during the domestic hot water set point FS 10 Time delay to activate the domestic hot water thermoregulation FS 11 Reversing cycle delay during domestic hot water thermoregulation O = interval time O = interval time O = interval time O = interval time O = leading of the domestic hot water thermoregulation O = interval time O = interval time D = weekly D = daily FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation O = 2400 Hr 100 min FS 17 Hour selection for the Antilegionella activation O = 2400 Hr 100 min FS 17 Hour selection for the Antilegionella activation O = 2400 Hr 100 min FS 18 Day selection for the Antilegionella activation O = 2400 Hr 100 min | | • | | | u | rtocoration |
| 1=valves in water circuit 2=valves in gas circuit 2=valves in gas circuit 2=valves in gas circuit 0 = heating / cooling 1 = domestic hot water thermoregulation priority 0 = heating / cooling 1 = domestic hot water 2 = domestic hot water by digital input FS 3 Domestic hot water thermoregulation set point FS 4 Domestic hot water thermoregulation band 0 | FS 1 | | U | 2 | | |
| Second Process Seco | | | | | | |
| FS 2 Domestic hot water thermoregulation priority 0 = heating / cooling 1 = domestic hot water y digital input FS 3 Domestic hot water by digital input FS 4 Domestic hot water thermoregulation set point FS 5 Domestic hot water thermoregulation band FS 5 Domestic hot water thermoregulation band FS 6 Domestic hot water thermoregulation band FS 6 Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Dec int FS 8 Dec int FS 9 Dec int FS 9 Dec int FS 9 Dec int FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cetyeation FS 16 Maximum value of the Antilegionella set point FS 17 For the Antilegionella activation FS 18 Day selection for the Antilegionella activation 0 = Antilegionella function of the Antilegionella activation 0 = Antilegionella function of the Antilegionella activation 0 = Antilegionella cetivation of the Antilegionella activation FS 10 Dec interval time 1 = weekly 2 = daily FS 11 Antilegionella function of the Antilegionella activation FS 12 Dec interval time 1 = weekly 2 = daily FS 14 Antilegionella set point FS 15 Dec int FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation FS 17 Hour selection for the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation FS 16 Dec interval time Antilegionella function of the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation Dec interval time Antilegionella function of the Antilegionella activation Dec interval time Ant | | | | | | |
| Composition | | | 0 | 0 | | |
| 1 = domestic hot water 2 = domestic hot water by digital input FS3 Domestic hot water thermoregulation set point FS0 FS06 °C/°F dec/int FS4 Domestic hot water thermoregulation band 0.1 25.0 °C Dec int FS5 Minimum value of the domestic hot water set point FS0 FS06 °C Dec int FS6 Maximum value of the domestic hot water set point FS05 110.0 °C Dec int FS7 Full loads enabling to reach the domestic hot water set point FS7 Full loads enabling during the domestic hot water thermoregulation 0 = not enabled 1 = compressors + heaters 2 = only heaters 3 = only compressors 3 = only compressors FS9 Operation working time to activate the heaters during the domestic hot water thermoregulation 0 = 999 sec int FS11 Reversing cycle delay during domestic hot water thermoregulation 0 = one therwal time 0 = interval time 0 = | FS 2 | Domestic not water thermoregulation priority | U | | | |
| Part | | O besting / seeling | | | | |
| FS 3 Domestic hot water thermoregulation set point FS 4 Domestic hot water thermoregulation band Domestic hot water set point Domestic hot set point Domestic hot water set point Domestic h | | | | | | |
| FS 4 Domestic hot water thermoregulation band Domestic hot water thermoregulation Solution Minimum value of the domestic hot water set point FS 6 Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0 1 1 25.0 °C Dec int FS 6 Maximum value of the domestic hot water set point FS 9 Heaters enabling during the domestic hot water thermoregulation 0 1 1 FS 8 FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve O 999 sec int FS 11 Reversing cycle delay during domestic hot water thermoregulation O interval time 1 weekly 2 daily FS 13 Delay time between two Antilegionella cycles O 250 Hr 0 FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation O 24.00 Hr 10 min FS 18 Day selection for the Antilegionella activation O 7 | | 1 = domestic hot water | | | | |
| Domestic hot water thermoregulation band Domestic hot water thermoregulation band Minimum value of the domestic hot water set point FS 6 Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation 0 = interval time 1= weekly 2= daily FS 13 Delay time between two Antilegionella cycles Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point Maximum value of the Antilegionella activation Day selection for the Antilegionella activation | | 1 = domestic hot water | | | | |
| Domestic hot water thermoregulation band Solidar So | | 1 = domestic hot water 2 = domestic hot water by digital input | FS05 | | | dec/int |
| Minimum value of the domestic hot water set point FS 6 Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1= weekly 2= daily FS 13 Delay time between two Antilegionella cycles Minimum value of the Antilegionella set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Day selection for the Antilegionella activation O 7 Interval time 1-58 FS 16 Maximum value of the Antilegionella activation O 7 Interval time 1-58 FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation O 7 Interval time 1-58 FS 16 FS 17 FS 18 Day selection for the Antilegionella activation O 7 FS 18 Day selection for the Antilegionella activation | FS 3 | 1 = domestic hot water 2 = domestic hot water by digital input | | | | |
| Minimum value of the domestic hot water set point FS 6 Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation 0 = interval time 1= weekly 2= daily FS 13 Delay time between two Antilegionella cycles Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point Maximum value of the Antilegionella activation Day selection for the Antilegionella activation O = 7 Into O = 58 Into O = C O = int O = C O = int O = C O = int O = i | FS 3 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point | 0.1 | 25.0 | °C °F | Dec |
| Maximum value of the domestic hot water set point FS05 230 °F int FS7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation D 1 | FS 3 FS 4 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point | 0.1 0 | 25.0 45 | °C °F | Dec int |
| Maximum value of the domestic hot water set point FS 7 Full loads enabling to reach the domestic hot water set point FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation D 1 | FS 3 FS 4 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band | 0.1 0 -50.0 | 25.0 45 | °C °F °C | Dec int Dec |
| FS 8 Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1= weekly 2= daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Day selection for the Antilegionella activation O 1 1 2 250 Min 250 Min 250 Min 250 FS 14 0 250 FS 16 C/°F dec/int FS 15 FS 16 C Dec int int FS 17 Hour selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band | 0.1 0 -50.0 -58 | 25.0 45 FS06 | °C °F °C °F | Dec int Dec int |
| Heaters enabling during the domestic hot water thermoregulation 0 = not enabled 1 = compressors + heaters 2 = only heaters 3 = only compressors FS 9 | FS 3 FS 4 FS 5 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point | 0.1 0 -50.0 -58 | 25.0 45 FS06 110.0 | °C °F °C °C | Dec int Dec int Dec |
| 0 = not enabled 1 = compressors + heaters 2 = only heaters 3 = only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation D 1 | FS 3 FS 4 FS 5 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 | °C °F °C °C | Dec int Dec int Dec |
| 1= compressors + heaters 2= only heaters 3= only compressors FS 9 | FS 3 FS 4 FS 5 FS 6 FS 7 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 | °C °F °C °C | Dec int Dec int Dec |
| 2= only heaters 3= only compressors FS 9 Operation working time to activate the heaters during the domestic hot water thermoregulation FS 10 Time delay to activate the domestic hot water valve FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Department of the Antilegionella activation Departm | FS 3 FS 4 FS 5 FS 6 FS 7 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 | °C °F °C °F | Dec int Dec int Dec |
| Sample S | FS 3 FS 4 FS 5 FS 6 FS 7 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 1 | °C °F °C °F | Dec int Dec int Dec |
| FS 9Operation working time to activate the heaters during the domestic hot water thermoregulation0250MinFS 10Time delay to activate the domestic hot water valve0999secintFS 11Reversing cycle delay during domestic hot water thermoregulation0999secintFS 12Antilegionella function operating mode 0 = interval time 1= weekly 2= daily024FS 13Delay time between two Antilegionella cycles0250Hr0FS 14Antilegionella Set pointFS15FS16°C/°Fdec/intFS 15Minimum value of the Antilegionella set pointFS15FS16°C °FDec intFS 16Maximum value of the Antilegionella set pointFS14110.0 230°C °FDec intFS 17Hour selection for the Antilegionella activation024.00Hr10 minFS 18Day selection for the Antilegionella activation07 | FS 3 FS 4 FS 5 FS 6 FS 7 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 1 | °C °F °C °F | Dec int Dec int Dec |
| thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation O 999 sec int Reversing cycle delay during domestic hot water thermoregulation O 999 sec int Antilegionella function operating mode O = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles O 250 Hr O FS 14 Antilegionella Set point FS 15 FS 16 °C/°F dec/int FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation D 24.00 Hr 10 min TS 18 Day selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 FS 6 FS 7 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters | 0.1 0 -50.0 -58 FS05 | 25.0 45 FS06 110.0 230 1 | °C °F °C °F | Dec int Dec int Dec |
| FS 10Time delay to activate the domestic hot water valve0999secintFS 11Reversing cycle delay during domestic hot water thermoregulation0999secintFS 12Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily022FS 13Delay time between two Antilegionella cycles0250Hr0FS 14Antilegionella Set pointFS15FS16°C/°Fdec/intFS 15Minimum value of the Antilegionella set pointFS14°C -58Dec intFS 16Maximum value of the Antilegionella set pointFS14110.0 230°C °FDec intFS 17Hour selection for the Antilegionella activation024.00Hr10 minFS 18Day selection for the Antilegionella activation07Int | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 | °C °F °C °F | Dec int Dec int Dec |
| FS 11 Reversing cycle delay during domestic hot water thermoregulation FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation FS 18 Day selection for the Antilegionella activation O 999 sec int 0 2 2 Dec PS 14 FS 15 FS 16 °C°F dec/int FS 15 FS 16 °C°F dec/int FS 17 Hour selection for the Antilegionella set point FS 18 Day selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 | °C °F °C °F | Dec int Dec int Dec |
| FS 12 Antilegionella function operating mode 0 = interval time 1= weekly 2= daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Antilegionella function operating mode 0 2 0 250 Hr 0 Core dec/int FS 15 FS 16 °C/°F dec/int FS 16 °C Dec °F Int 110.0 °C Dec 230 °F int FS 17 Hour selection for the Antilegionella activation 0 24.00 Hr 10 min FS 18 Day selection for the Antilegionella activation 0 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 1 | °C °F °C °F °C °F | Dec int Dec int Dec int |
| FS 12 Antilegionella function operating mode 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Antilegionella function operating mode 0 2 Dec 0 2 Dec 0 C | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| 0 = interval time 1 = weekly 2 = daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Delay time between two Antilegionella cycles 0 250 Hr 0 6 dec/int FS 15 FS 16 °C °F dec/int FS 17 FS 10 °C Dec °F int FS 17 Hour selection for the Antilegionella activation 0 24.00 Hr 10 min TS 18 Day selection for the Antilegionella activation 0 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| Telegraph Tele | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water thermoregulation Reversing cycle delay during domestic hot water thermoregulation | 0.1 0 -50.0 -58 FS05 0 | 25.0 45 FS06 110.0 230 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| 2= daily FS 13 Delay time between two Antilegionella cycles FS 14 Antilegionella Set point FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation FS 18 Day selection for the Antilegionella activation Decuments TS 10 Decuments TS 11 Decuments TS 12 Decuments TS 13 Decuments TS 14 Decuments TS 15 Decuments TS 16 Decuments TS 17 Decuments TS 18 Day selection for the Antilegionella activation TS 18 Decuments TS | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water thermoregulation Antilegionella function operating mode | 0.1 0 -50.0 -58 FS05 0 0 | 25.0 45 FS06 110.0 230 1 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| FS 13 Delay time between two Antilegionella cycles 0 250 Hr 0 FS 14 Antilegionella Set point FS15 FS16 °C/°F dec/int FS 15 Minimum value of the Antilegionella set point FS14 °C Dec FS 16 Maximum value of the Antilegionella set point FS14 110.0 °C Dec FS 17 Hour selection for the Antilegionella activation 0 24.00 Hr 10 min FS 18 Day selection for the Antilegionella activation 0 7 10 min | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time | 0.1 0 -50.0 -58 FS05 0 0 | 25.0 45 FS06 110.0 230 1 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| FS 14 Antilegionella Set point FS 15 FS 16 °C/°F dec/int FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Day selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly | 0.1 0 -50.0 -58 FS05 0 0 | 25.0 45 FS06 110.0 230 1 1 1 250 999 | °C °F °C °F °C °F | Dec int Dec int Dec int int |
| FS 15 Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation FS 18 Day selection for the Antilegionella activation FS 18 C Dec int FS 14 110.0 °C Dec int FS 17 Hour selection for the Antilegionella activation O 24.00 Hr 10 min TS 18 Day selection for the Antilegionella activation | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily | 0.1 0 -50.0 -58 FS05 0 0 0 | 25.0 45 FS06 110.0 230 1 1 1 250 999 999 | °C °F °C °F °C °F Min sec sec | Dec int Dec int Dec int int int |
| Minimum value of the Antilegionella set point FS 16 Maximum value of the Antilegionella set point Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Day selection for the Antilegionella activation Day selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles | 0.1 0 -50.0 -58 FS05 0 0 0 0 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 | °C °F °C °F °C °F Hr | Dec int Dec int Dec int int int o |
| FS 16 Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation Maximum value of the Antilegionella activation Maximum value of the Antilegionella set point FS 18 Day selection for the Antilegionella activation The interval of the Antilegionella set point FS 18 Day selection for the Antilegionella activation The interval of the Antilegionella set point The interval of the Antilegion | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 | °C °F °C °C °F °C | Dec int Dec int Dec int int Oec int Oec int O dec/int |
| Maximum value of the Antilegionella set point FS 17 Hour selection for the Antilegionella activation FS 18 Day selection for the Antilegionella activation Day selection for the Antilegionella activation O 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 | °C °F °C °F °C °F °C °F °C °F °C °C °F °C °C °F °C | Dec int Dec int Dec int Dec int O dec/int Dec |
| FS 17 Hour selection for the Antilegionella activation 0 24.00 Hr 10 min FS 18 Day selection for the Antilegionella activation 0 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 | °C °F °C °F °C °F °C °F °C °F °C °F | Dec int Dec int Dec int Occint Int Int Occint Occint Dec int |
| FS 18 Day selection for the Antilegionella activation 0 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point Minimum value of the Antilegionella set point | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 FS15 -50.0 -58 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 110.0 | °C °F °C °C °C °F °C °C °C °F °C | Dec int Dec int Dec int Dec int Dec int O dec/int Dec int Dec int Dec int |
| FS 18 Day selection for the Antilegionella activation 0 7 | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 FS 16 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point Minimum value of the Antilegionella set point | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 -58 FS14 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 110.0 230 | °C °F °C °F °C °F °C °F | Dec int Dec int Dec int Dec int O dec/int Dec int Dec int |
| 2 dy decement of the firming of the decement | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 FS 16 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point Minimum value of the Antilegionella set point | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 -58 FS14 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 110.0 230 | °C °F °C °F °C °F °C °F | Dec int Dec int Dec int Dec int O dec/int Dec int Dec int |
| ro 19 Minimum operating working time of the Antilegionella cycle 1 250 min | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 9 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 FS 16 FS 17 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point Minimum value of the Antilegionella set point Maximum value of the Antilegionella set point Hour selection for the Antilegionella activation | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 -58 FS14 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 110.0 230 24.00 | °C °F °C °F °C °F °C °F | Dec int Dec int Dec int Dec int O dec/int Dec int Dec int |
| | FS 3 FS 4 FS 5 FS 6 FS 7 FS 8 FS 10 FS 11 FS 12 FS 13 FS 14 FS 15 FS 16 FS 17 FS 18 | 1 = domestic hot water 2 = domestic hot water by digital input Domestic hot water thermoregulation set point Domestic hot water thermoregulation band Minimum value of the domestic hot water set point Maximum value of the domestic hot water set point Full loads enabling to reach the domestic hot water set point Heaters enabling during the domestic hot water thermoregulation 0= not enabled 1= compressors + heaters 2= only heaters 3= only compressors Operation working time to activate the heaters during the domestic hot water thermoregulation Time delay to activate the domestic hot water valve Reversing cycle delay during domestic hot water thermoregulation Antilegionella function operating mode 0 = interval time 1= weekly 2= daily Delay time between two Antilegionella cycles Antilegionella Set point Minimum value of the Antilegionella set point Maximum value of the Antilegionella activation Day selection for the Antilegionella activation | 0.1 0 -50.0 -58 FS05 0 0 0 0 0 0 FS15 -50.0 -58 FS14 0 | 25.0 45 FS06 110.0 230 1 1 250 999 999 2 250 FS16 FS14 110.0 230 24.00 7 | °C °F °F °C °F °F °C °F °F °C °F °F °F °C °F | Dec int Dec int Dec int Dec int O dec/int Dec int Dec int |

| FS 20 | | 0.1 | 25.0 | °C | Doo |
|---|--|---|--|----------------|------------|
| . 5 25 | Temperature band for heaters deactivation during Antilegionella cycle | 0.1 | 25.0 45 | °F | Dec int |
| FS 21 | Tomporature differential to enable the freezeeding function | 0.1 | 25.0 | °C °F | Dec |
| FS 22 | Temperature differential to enable the freecooling function | 0 0.1 | 45 25.0 | °C | int Dec |
| F3 22 | Temperature differential for the free cooling regulation | 0 | 45 | °F | int |
| FS 23 | Set point for solar panel activation | FS25 | FS26 | °C/°F | dec/int |
| FS 24 | Differential value for solar panel deactivation | 0.1 0 | 25.0 45 | °C °F | Dec int |
| FS 25 | Billiotetiliai value toi solai parioi dedetivation | -50.0 | FS23 | °C | Dec |
| | Minimum value of the solar panel set point | -58 | | °F | int |
| FS 26 | Maximum value of the solar panel set point | FS23 | 110.0 230 | °C °F | Dec int |
| FS 27 | Delay time to activate the domestic hot water valve starting from pump activation | 0 | 250 | sec | |
| FS 28 | Delay time to deactivate the domestic hot water pump starting from valve deactivation | 0 | 250 | sec | |
| FS 29 | Maximum operating working time of the Antilegionella cycle | 0 | 250 | min | |
| FS 30 | Domestic hot water: security set point | -50.0 -58 | 110.0 230 | °C °F | |
| FS 31 | Domestic not water. Security Set point | 0.1 | 25.0 | °C | |
| | Domestic hot water: security differential | 0 | 45 | °F | |
| FS 32 | Domestic hot water: minimum interruption time | 0 | 250 | min | |
| FS 33 | Domestic hot water pump operation mode Free cooling water pump OFF time if chiller only Free cooling | 0 | 1 250 | min | |
| FS 34 | Free cooling water pump OFF time it chiller only Free cooling Free cooling water pump ON time if chiller only Free cooling | 0 | 250 250 | min | |
| FS 35 | Free cooling maximum time | 0 | 250 | sec min | |
| FS 36 FS 37 | Set point Free cooling | -50.0 | 110.0 | °C | Dec |
| F3 31 | Sor point 1100 documing | -58 | 230 | °F | int |
| | | 0.0 | 50.0 | bar | Dec |
| FS 38 | Proportional band Free coling | 0.1 | 725 25.0 | psi °C | int Dec |
| F3 30 | i i oponional sand i i oo oomig | 0 | 45 | °F | int |
| | | 0.1 1 | 14.0 203 | Bar Psi | Dec int |
| FS 39 | Minimum value Free cooling analog output | 0 | 100 | % | шк |
| FS 40 | Maximum value Free cooling analog output | 0 | 100 | % | |
| FS 41 | T1 probe selection for Free cooling | 0 | | | |
| | 0=disabled, 1=Pb1, 2=Pb2, etc. | U | 20 | | |
| FS 42 | T2 probe selection for Free cooling | 0 | 20 | | |
| | 0=disabled, 1=Pb1, 2=Pb2, etc. | U | | | |
| FS 43 | 0=disabled, 1=Pb1, 2=Pb2, etc. Outside temperature set point to force the maximum speed of condenser fan | -50.0 -58 | 110.0 230 | °C °F | |
| FS 43 FS 44 | 0=disabled, 1=Pb1, 2=Pb2, etc. Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan | -50.0 | 110.0 | | |
| | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling | -50.0 -58 0.1 | 110.0 230 25.0 | °F °C | |
| FS 44 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors | -50.0 -58 0.1 0 | 110.0 230 25.0 45 | °F °C °F | |
| FS 44 FS 45 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters | -50.0 -58 0.1 0 | 110.0 230 25.0 45 250 | °F °C °F | |
| FS 45 FS 46 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors Evaporator water pump enabled is Domestic hot water 0= enabled | -50.0 -58 0.1 0 0 | 110.0 230 25.0 45 250 | °F °C °F | |
| FS 44 FS 45 FS 46 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors Evaporator water pump enabled is Domestic hot water 0= enabled 1= disabled Probe selection to force exit from Domestic hot water 0= disabled 1= probe Pb1 2= probe Pb2 | -50.0 -58 0.1 0 0 | 110.0 230 25.0 45 250 3 | °F °C °F | |
| FS 44 FS 45 FS 46 FS 47 FS 48 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors Evaporator water pump enabled is Domestic hot water 0= enabled 1= disabled Probe selection to force exit from Domestic hot water 0= disabled 1= probe Pb1 2= probe Pb2 Start production Domestic hot water 0= when all compressors are requested | -50.0 -58 0.1 0 0 | 110.0 230 25.0 45 250 3 1 20 | °F °C °F | |
| FS 44 FS 45 FS 46 FS 47 FS 48 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors Evaporator water pump enabled is Domestic hot water 0= enabled 1= disabled Probe selection to force exit from Domestic hot water 0= disabled 1= probe Pb1 2= probe Pb2 Start production Domestic hot water 0= when all compressors are requested 1= when at least one compressor is requested Set point to force OFF the compressors during antilegionella cycle Compressors safety time in domestic hot water 0= safety time enabled | -50.0 -58 0.1 0 0 0 0 0 | 110.0 230 25.0 45 250 3 1 | °F °C °F min | |
| FS 44 FS 45 FS 46 FS 47 FS 48 FS 49 FS 50 | Outside temperature set point to force the maximum speed of condenser fan Outside temperature differential to force the maximum speed of condenser fan Delay time of condenser fan regulation during Free cooling Antilegionella cycle opreration mode 0= compressors and heaters 1= compressors are first inserted and then heaters 2= only heaters 3= only compressors Evaporator water pump enabled is Domestic hot water 0= enabled 1= disabled Probe selection to force exit from Domestic hot water 0= disabled 1= probe Pb1 2= probe Pb2 Start production Domestic hot water 0= when all compressors are requested 1= when at least one compressor is requested Set point to force OFF the compressors during antilegionella cycle Compressors safety time in domestic hot water | -50.0 -58 0.1 0 0 0 0 0 0 -50.0 -58 | 110.0 230 25.0 45 250 3 1 20 1 110.0 230 | °F °C °F min | |

| FS 54 | Probe selection for low domestic hot water temperature | | | | |
|--|---|---|--|---|--|
| | 0= disabled | | | | |
| | 1= Pb1 | 0 | 20 | | |
| | 2= Pb2 | | | | |
| | | | | | |
| FS 55 | Solar panel opration mode for domestic hot water | | | | |
| 1.000 | 0= disabled | | | | |
| | 1= integration to heat pump | 0 | 2 | | |
| | 2= substitution to heat pump | | | | |
| FS 56 | Solar panel opration mode for heating | | | | |
| 1 3 30 | 0= disabled | | _ | | |
| | 1= integration to heat pump | 0 | 2 | | |
| | 2= substitution to heat pump | | | | |
| FS 57 | Probe selection to calculate Dt of solar panel in domestic hot water | | | | |
| F3 3/ | 0= disabled | | | | |
| | 1= Pb1 | 0 | 20 | | |
| | 2= Pb2 | | | | |
| | | | | | |
| FC F0 | Probe selection to calculate Dt of solar panel in heating | | | | |
| FS 58 | 0= disabled | | | | |
| | 1= Pb1 | 0 | 20 | | |
| | 2= Pb2 | 0 | 20 | | |
| | 2= F02 | | | | |
| F0 F6 | Dt to enable solar panel in domestic hot water | 0.1 | 2F 0 | °C | Dec |
| FS 59 | Di to enable solar parier in domestic not water | 0.1 | 25.0 | °C °F | |
| | Dt to applie color panel in heating | 0 | 45 | | int |
| FS 60 | Dt to enable solar panel in heating | 0.1 | 25.0 | °C | Dec |
| | | 0 | 45 | °F | int |
| FS 61 | Maximum operation time of solar panel if set point not reached | 0 | 250 | min | |
| FS 62 | Probe selection to disable the Free cooling for low temperature | 0 | 20 | | |
| FS 63 | Set point to disable the Free cooling for low temperature | -50.0 | 110.0 | °C | |
| FS 63 | Oct point to disable the Free cooling for low temperature | -58 | 230 | °F | |
| F0.04 | Differential to disable the Free cooling for low temperature | 0.1 | 25.0 | °C | |
| FS 64 | Differential to disable the Free cooling for low temperature | 0.1 | 45 | °F | |
| | Delay time to enable compressor in free cooling | 1 | | - | |
| FS 65 | Delay time to enable compressor in free cooling | 0 | 250 | min | |
| FS 66 | Dfferential to enable free cooling analog output | 0.1 | 25.0 | °C | |
| | | 0 | 45 | °F | |
| | | | | | |
| Parameter | Description | min | max | M. u. | Resolution |
| Parameter AL 1 | • | min 0 | max 250 | M. u. Sec | Resolution |
| | Low pressure alarm delay from analog and digital input | | | | Resolution |
| AL 1 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low | 0 | 250 | | Resolution |
| AL 1 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. | | | Sec | Resolution |
| AL 1 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low | 0 | 250 | Sec 10 | Resolution |
| AL 1 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF | 0 | 250 250 | Sec 10 | Resolution |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF | 0 0 -50.0 | 250 250 110.0 | Sec 10 Sec | |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF | 0 0 -50.0 -58 | 250 250 110.0 230 | Sec 10 Sec °C °F | Dec int |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF | 0 0 -50.0 | 250 250 110.0 230 50.0 | Sec 10 Sec °C | Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input | -50.0 -58 0.0 0 | 250 250 110.0 230 50.0 725 | Sec 10 Sec °C °F bar psi | Dec int Dec int |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF | -50.0 -58 0.0 0 | 250 250 110.0 230 50.0 725 25.0 | Sec 10 Sec °C °F bar | Dec int Dec int Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input | -50.0 -58 0.0 0 | 250 250 110.0 230 50.0 725 25.0 45 | Sec 10 Sec °C °F bar psi °C °F | Dec int Dec int Dec int |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input | -50.0 -58 0.0 0 | 250 250 110.0 230 50.0 725 25.0 45 | Sec 10 Sec °C °F bar psi °C °F | Dec int Dec int Dec int |
| AL 1 AL 2 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: | -50.0 -58 0.0 0 0.1 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 | -50.0 -58 0.0 0 0.1 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 | -50.0 -58 0.0 0 0.1 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled | -50.0 -58 0.0 0 0.1 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 AL 5 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar psi | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 AL 5 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 | Sec 10 Sec °C °F bar psi °C °F bar psi | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi °C °F bar psi | Dec int Dec int Dec int Dec |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled | 0 0 -50.0 -58 0.0 0 0.1 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 | Sec 10 Sec °C °F bar psi °C °F bar psi | Dec int Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled | 0 0 -50.0 -58 0.0 0 0.1 1 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 | Sec 10 Sec °C °F bar psi °C °F bar psi Sec | Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 0 0 -58 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 | Sec 10 Sec °C °F bar psi °C °F bar psi Sec | Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled | 0 0 -50.0 -58 0.0 0 0.1 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 | Sec 10 Sec °C °F bar psi °C °F bar psi Sec | Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 0 -58 0.0 0 0.1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 | Sec 10 Sec °C °F bar psi Sec °C °F bar psi | Dec int Dec Int Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled | 0 0 -50.0 -58 0.0 0 0.1 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 | Sec 10 Sec °C °F bar psi °C °F bar psi Sec | Dec int Dec Int Dec int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input | 0 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 -58 0.0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 45 | Sec 10 Sec °C °F bar psi °C °F bar psi Sec | Dec int Dec Int Dec int Dec Int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 -58 0.0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 45 14.0 | Sec 10 Sec °C °F bar psi °C °F bar psi °C °F bar psi °C °F bar | Dec int Dec Int Dec int Dec int Dec Int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand − by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input High temperature/pressure alarm differential from analogue input | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 -58 0.0 0 0 -58.0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi Sec °C °F bar psi Sec | Dec int Dec Int Dec int Dec Int Dec int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 AL 10 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input Low oil pressure / level delay from digital input | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 -58 0.0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 45 14.0 | Sec 10 Sec °C °F bar psi °C °F bar psi °C °F bar psi °C °F bar | Dec int Dec Int Dec int Dec int Dec Int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand − by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input High temperature/pressure alarm differential from analogue input Low oil pressure / level delay from digital input Minimum time for low oil pressure / level from digital input activation in normal | 0 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 0 0 -58 0.0 0 0 0 0 1 1 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 110.0 230 50.0 725 25.0 45 14.0 203 250 | Sec 10 Sec °C °F bar psi Sec °C °F bar psi Sec | Dec int Dec Int Dec int Dec int Dec Int Dec Int |
| AL 1 AL 2 AL 3 AL 4 AL 5 AL 6 AL 7 AL 8 AL 9 AL 10 | Low pressure alarm delay from analog and digital input Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF Low pressure alarm setpoint from analogue input Low pressure alarm differential from analogue input Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 = 16 From automatic to manual reset if AL05= 115 Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled Low temperature/pressure alarm delay during defrost Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled High temperature/pressure alarm from analogue input Low oil pressure / level delay from digital input | 0 -50.0 -58 0.0 0 0.1 1 0 0 0 -50.0 -58 0.0 0 0 -58.0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 250 250 110.0 230 50.0 725 25.0 45 14.0 203 16 1 250 1 110.0 230 50.0 725 25.0 45 14.0 203 | Sec 10 Sec °C °F bar psi Sec °C °F bar psi Sec | Dec int Dec Int Dec int Dec int Dec Int Dec Int |

| AL 13 | Maximum number of low oil pressure/level events: Always manual reset if AL13= 0 | 0 | 16 | | |
|----------------|--|--------------|--------------|--|------------|
| | Always automatic reset if AL13 = 16 | | | | |
| AL 14 | From automatic to manual reset if AL13 = 115 Configuration | | | | |
| AL 14 | 0= Not enabled | | | | |
| | 1= Only for chiller | 0 | 3 | | |
| | 2= Only for heat pump | | | | |
| | 3= For both chiller and heat pump | | | | |
| AL 15 | "Flow switch / supply fan overload" alarm delay after pump/fun activation. | 0 | 250 | Sec | |
| AL 16 | Flow switch time activation before blocking evaporator water pump | 0 | 250 | | |
| AL 17 | "Flow switch / supply fan overload" activation time to generate the alarm | 0 | 250 | Sec | |
| AL 18 | "Flow switch / supply fan overload" de-activation time to reset the alarm | 0 | 250 250 | Sec | |
| AL 19 AL 20 | Compressor overload alarm delay after compressor start-up Maximum number of compressor overload alarm events | U | 250 | Sec | |
| AL 20 | Always manual reset if AL20 = 0 | | | | |
| | Always automatic reset if AL20 = 16 | 0 | 16 | | |
| | From automatic to manual reset if AL20 =115 | | | | |
| AL 21 | Maximum number of pump down alarm events per hour in stop condition. | | | | |
| | After this number the alarm is logged, displayed and signalled with alarm | | | | |
| | relay + buzzer. | 0 | 16 | | |
| | Manual reset if AL21 = 0 | | | | |
| | Automatic reset if AL21 =16 | | | | |
| AL 22 | From automatic to manual reset if AL21 =115 Maximum number of pump down alarm events per hour in start-up condition. | | | | |
| AL 44 | After this number the alarm is logged, displayed and signalled with alarm | | | | |
| | relay + buzzer. | _ | 4.5 | | |
| | Always manual reset if AL22 = 0 | 0 | 16 | | |
| | Always automatic reset if AL22 =16 | | | | |
| | From automatic to manual reset if AL21 =115 and parameter AL23 config. | | | | |
| AL 23 | Select if the pump down alarm must change from automatic to manual reset: | | | | |
| | 0= Always automatic reset | 0 | 1 | | |
| AL 24 | 1= Manual reset after AL21 alarm events Minimum antifreeze setpoint in chiller (from –30 °C to AL24) | 50.0 | | °C | Doo |
| AL 24 | Minimum antineeze setpoint in chiller (from –30 °C to AL24) | -50.0 -58 | AL26 | °F | Dec int |
| AL 25 | Maximum antifreeze setpoint in chiller (from AL24 to 70 °C) | | 110.0 | °C | Dec |
| 712 20 | maximum anamoozo oosponia in oninor (nom nzz rao 10 °0) | AL26 | 230 | °F | int |
| AL 26 | Setpoint temperature for low anti-freeze alarm, low ambient temperature | AL 24 | | °C/°F | |
| | (air/air), low temperature air outlet (air/air). From AL24 to AL25. | AL24 | AL25 | | Dec/int |
| AL 27 | Differential of alarm reset in Chiller mode for anti-freeze, low ambient air | 0.1 | 25.0 | °C | Dec |
| 41.00 | temperature or low outlet air temperature alarms. | 0 | 45 | °F | int |
| AL 28 | Alarm delay for anti-freeze, low ambient air temperature or low outlet air temperature. The temperature must be lower than AL26 for this time duration | 0 | 250 | Sec | |
| AL 29 | before having the alarm event. Maximum number of alarm events anti-freeze, low ambient air temperature or | | | | |
| AL 29 | low outlet air temperature before changing from automatic to manual alarm | | | | |
| | reset: | | | | |
| | Always manual reset if AL29 = 0 | 0 | 16 | | |
| | Always automatic reset if AL29 = 16 | | | | |
| | From automatic to manual if AL29 = 115 | | | | |
| AL 30 | Anti-freeze alarm configuration in chiller | | | | |
| | 0= to turn the compressors off when the anti-freeze control probe is lower | | | | |
| | than AL26 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are not activated. | 0 | 1 | | |
| | 1= to turn the compressors off when the anti-freeze control probe is lower | U | ' | | |
| | than AL26 (after the time delay), the display shows the alarm label. | | | | |
| | Buzzer and Alarm relay are activated. | | | | |
| AL 31 | Setpoint of the minimum limit in heat pump (va da – 30 °C a AL32) | -50.0 | AL33 | °C | Dec |
| | | -58 | | °F | int |
| AL 32 | Setpoint of the maximum limit in heat pump (va da AL31 a 70 °C) | AL33 | 110.0 230 | °C °F | Dec int |
| AL 33 | Anti-freeze alarm setpoint in heat pump | | | | |
| | Setpoint temperature for low anti-freeze alarm, low ambient temperature | AL31 | AL32 | °C/°F | Dec/int |
| | (air/air), low temperature air outlet (air/air). (from AL31 to AL32) | | | | |
| AL 34 | Alarm differential in heat pump. To reset the anti-freeze, low ambient | 0.1 | 25.0 | °C | Dec |
| AL OF | Temperature (air/air), low temperature air outlet (air/air) alarms. | 0 | 45 | °F | int |
| AL 35 | Anti-freeze alarm delay in HP for low outlet air temperature (air/air) | | | | |
| | Attention If during the Stand-by or remote off there is an anti-freeze alarm event, and | | | | |
| | the AL35 <>0, starting the heat pump mode, from keyboard or digital input. In | | | | |
| | this case the anti-freeze alarm is aborted and the compressor starts for the | 0 | 250 | Sec | |
| | AL35 time to heat the air or the water. | | | | |
| | After the AL35 time if the antifreeze probe value is still lower than AL33 | | | | |
| | setpoint, for maximum AL36 seconds, the unit is stopped and the anti-freeze | | | | |
| | alarm is generated again. | 1 | | | |

| AL 36 | Anti-freeze alarm delay for low air ambient temperature or low outlet air temperature in heat pump normal condition. The detected temperature must be lower than AL33 for the time AL36 before giving the alarm | 0 | 250 | Sec | | |
|--------------|--|--------------|------------|-------------|------------|-----------------|
| AL 37 | Maximum number of anti-freeze alarm events for low air ambient temperature or low outlet air temperature in heat pump. It sets the alarm reset condition: Always manual reset AL37 = 0 Always automatic reset AL37 = 16 From automatic to manual reset if AL37 = 115 | 0 | 16 | | | |
| AL 38 | Anti-freeze alarm configuration in heat pump 0= to turn the compressors off when the anti-freeze control probe is lower than AL33 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are not activated. 1= to turn the compressors off when the anti-freeze control probe is lower than AL33 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are activated. | 0 | 1 | | | |
| AL 39 | Compressor high discharge temperature setpoint | 0 32 | 150 302 | °C °F | D | ec / int int |
| AL 40 | Compressor high discharge temperature differential | 0.1 0 | 25.0 45 | °C °F | | Dec int |
| AL 41 | Number of compressor high discharge temperature events per hour to determine the alarm reset condition: Always manual reset if AL41 = 0 Always automatic reset if AL41 = 16 From automatic to manual if AL41 = 115 | 0 | 16 | | | |
| AL 42 | Maximum number of generic alarm events (each event stop the regulation) before turning the alarm from automatic to manual: Always manual AL42 = 0 Always automatic AL42 = 16 From manual to utomatic if AL42 value is between 1 and 15 | 0 | 16 | | | |
| AL 43 | Generic alarm delay time after the digital input activation | 0 | 250 | Sec | | |
| AL 44 | Generic alarm delay time after the digital input is not activate | 0 | 250 | 10 sec | 1 | 0 sec |
| AL 45 | Enable alarm relay with unit in off or stand – by: 0= Alarm output not enabled 1= Alarm output enabled | 0 | 1 | | | |
| AL 46 | Password value to reset the alarm log, the compressor overload alarm and antifreeze alarm | 0 | 999 | | | |
| AL 47 | Thermal alarm of the compressor 0= lock the compressor 1= lock the whole circuit | 0 | 1 | | | |
| AL 48 | Thermal alarm when the compressor is OFF 0 = Not enabled 1= Alarm enabled | 0 | 1 | | | |
| AL 49 | Oil alarm when the compressor is OFF 0 = Not enabled 1= Alarm enabled | 0 | 1 | | | |
| AL50 | Functioning generic alarm n° 2 0= only signal always automatic reset 1= the alarm block the unit reset depends on the value of parameter AL51 | 0 | 1 | | | |
| AL51 | Maximum number of generic alarm events before turning the alarm from automatic to manual: Always manual AL51 = 0 Always automatic AL51 =16 From manual to utomatic if AL51 value is between 1 and 15 | 0 | 16 | | | |
| AL52 | Generic alarm delay time after the digital input activation | 0 | 250 | | Sec | sec |
| AL53 | Generic alarm delay time after the digital input is not activate | 0 | 250 | | sec | sec |
| AL54 | Maximum number of high pressure / temperature alarm events before turning the alarm from automatic to manual: Always manual AL54 = 0 Always automatic AL54 = 16 From manual to utomatic if AL54 value is between 1 and 15 | 0 | 16 | | | |
| AL55 | "Flow switch water condenser alarm delay after pump activation. | 0 | 250 | | Sec | |
| AL56 | Maximum time flow switch alarm active befor to block the water pump | 0 | 250 | | Sec | |
| AL57 AL58 | Minimum "Flow switch water condenser active time duration. Minimum "Flow switch water condenser not active time duration. | 0 | 250 250 | | Sec Sec | |
| AL59 | Maximum number of high water temperature alarm events Always manual reset if AL59 = 0 Always automatic reset if AL59 =16 | 0 | 16 | | <u>sec</u> | |
| AL CO | From automatic to manual reset if AL59 = 115 | _ | 050 | | 200 | 10.000 |
| AL60 AL61 | High water temperature alarm delay time from ON compressor Set point higt water temperature | -50.0 | 250 110 | | sec °C | 10 sec Dec |
| ALUI | Sor point high water temperature | -50.0 -58 | 230 | | °F | int |
| AL62 | Differential higt water temperature | 0.1 | 25.0 | | °C | Dec |
| | , | 0 | 45 | | °F | int |

| AL63 | Analogue input configuration. Allows to select which probe value NTC/PTC | 0 | 20 | | |
|--------------|--|-------------------|-------------------|----------------------|-------------------|
| A1 04 | (Pb1Pb10) | _ | | | |
| AL64 | Low pressure alarm delay | 0 | 250 | sec | |
| AL65 AL66 | Domestic hot water flow switch alarm delay | 0 | 250 250 | Sec | |
| AL66 | San. water flow switch delay to stop pump Domestic hot water flow switch activation time | 0 | 250 | Sec Sec | |
| AL67 | San, water flow switch de-activation time | 0 | 250 | Sec | |
| AL69 | Solar panel flow switch alarm delay | 0 | 250 | Sec | |
| AL70 | Solar panel flow switch delay to stop pump | 0 | 250 | Sec | |
| AL70 AL71 | Solar panel flow switch activation time | 0 | 250 | Sec | |
| AL72 | Solar panel flow switch de-activation time | 0 | 250 | Sec | |
| AL73 | Max. number per hour domestic hot water heaters overload alarm | U | 200 | 000 | |
| ALIS | Always manual if AL73 = 0 Always automatic if AL73 =16 If 16>AL73>0: automatic if number of alarm < AL73 manual if number of alarm = AL73 | 0 | 16 | | |
| AL74 | Password request to reset manual antifreeze alarm 0= password requested 1= password not requested | 0 | 1 | | |
| AL75 | Max. number per hour domestic hot water pump overload Always manual if AL75 = 0 Always automatic if AL75 =16 If 16>AL75>0: automatic if number of alarm < AL75 manual if number of alarm = AL75 | 0 | 16 | | |
| AL76 | Compressor oil level alarm only signalling 0= automatic / manual reset oil alarm (see AL13) and compressor switch off 1= oil alarm signal only (compressor stays ON) | 0 | 1 | | |
| AL77 | Compressor overload alarm operation mode 0= always manual reset 1= always automatic reset | 0 | 1 | | |
| AL78 | Dt temperature to generate compressor/circuit differential oil alarm | 0.1 1 | 14.0 203 | bar psi | Dec int |
| AL79 | Differential to reset compressor/circuit differential oil alarm | 0.1 1 | 14.0 203 | bar psi | Dec int |
| AL80 | Max. number per hour compressor/circuit differential oil alarm Always manual if AL80 = 0 Always automatic if AL80 =16 If 16>AL80>0: automatic if number of alarm < AL80 | 0 | 16 | poi | |
| AL81 | manual if number of alarm = AL80 Compressor/circuit differential oil alarm operation mode 0= disabled 1= enabled for pistons compressors 2= enabled for screw compressors | 0 | 2 | | |
| AL82 | By pass time of the FC flow switch alarm starting from water pump activation | 0 | 250 | Sec | |
| AL83 | FC flow switch time activation before blocking FC water pump | 0 | 250 | Sec | |
| AL84 | FC flow switch activation time to generate the alarm and block the compressor | 0 | 250 | Sec | |
| AL85 | FC flow switch de-activation time to reset the alarm | 0 | 250 | Sec | |
| AL86 | Flow switch alarm reset mode 0= Always manual 1= automatic reset after 1 minute 2= automatic reset after 2 minutes 250= automatic reset after 250 minutes | 0 | 250 | min | |
| AL87 | Evaporator/domestic hot water flow switch by-pass time during Out1 / Out2 commutation | 0 | 250 | Sec | |
| | Defrost alarm | | | | |
| AL88 | Number of defrost alarm per hour to generate the manual reset alarm | 0 | 250 | <u> </u> | |
| | Condenser antifreeze alarm | | | | |
| AL89 | Minimum value of the condenser antifreeze alarm set point in chiller | -50.0 -58 | AL91 | °F | Dec int |
| AL90 | Maximum value of the condenser antifreeze alarm set point in chiller | AL91 | 110 230 | °C °F | Dec int |
| AL91 | Condenser antifreeze alarm set point in chiller | AL89 | AL90 | °C °F | Dec int |
| AL92 | | 0.1 | 25.0 | °C | Dec |
| | Condenser antifreeze alarm differential in chiller | 0 | 45 | °F | int |
| AL93 AL94 | Condenser antifreeze alarm differential in chiller Minimum value of the condenser antifreeze alarm set point in heat pump | 0 -50.0 -58 | 45 AL95 110 | °F °C °F °C | Dec int Dec |

| AL95 | Condenser antifreeze alarm set point in heat pump | AL93 | AL94 | °C °F | Dec int | | | |
|------------------------|---|------|------|----------|------------|--|--|--|
| AL96 | | 0.1 | 25.0 | °C | Dec | | | |
| | Condenser antifreeze alarm differential in heat pump | 0 | 45 | °F | int | | | |
| | Alarm menu protected by password | | | | | | | |
| AL97 | Enable the access with password to the alarm menu 0= password not requested 1= password requested | 0 | 1 | | | | | |
| AL98 | Number of resetted manual alarm to enter in alarm menu with password | 0 | 250 | | | | | |
| Condenser fan overload | | | | | | | | |
| AL 99 | Overload alarm by-pass time starting from condenser fan activation | 0 | 250 | sec | | | | |

52. BLACK-OUT


After the black-out is restored:

- 1. The instrument resores the same operating mode lost after the supply failure.
- 2. If active, the defrost is aborted.
- 3. All the timers and time parameters are reloaded.
- 4. The manual alarm is not reset.

53. WIRING CONNECTIONS

53.1 HARDWARE RESOURCES FOR IC206CX MODEL

- 6 digital outputs (relays):
 - MAX current on the relay contacts relè 5(2)A 250V
 - MAX common current 10A 250V
- 11 digital inputs: (free of voltage)
- analogue inputs:
 - 4 NTC / PTC probes
 - 2 NTC / PTC / pressure transducer 4÷20 mA / pressure transducer ratio-metric 0÷5.0 Volt
- 4 modulating outputs:
 - 2 configurable 0 ÷ 10 Volt
 - 2 configurable 0 ÷ 10.0 Volt or PWM (for modulating condenser fan)
- 1 output to connect a remote keyboard (max 2 remote keyboards)
- 1 LAN to connect an i-o expansion module (ICX207D)
- 1 TTL output for "hot key 64" or for XJ485CX (interface module for monitoring system)

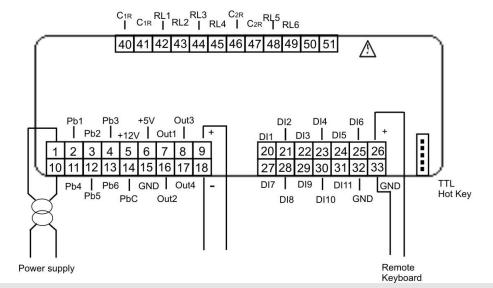


53.2 HARDWARE RESOURCES FOR 208CX MODELS

• 8 digital outputs (relays):

MAX current on the relay contacts relè 5(2)A 250V


MAX common current 10A 250V

- 11 digital inputs: (free of voltage)
- analogue inputs:
 - 4 NTC / PTC probes
 - 2 NTC / PTC / pressure transducer 4÷20 mA / pressure transducer ratio-metric 0÷5.0 Volt
- 4 modulating outputs:
 - 2 configurable 0 ÷ 10 Volt
 - 2 configurable 0 ÷ 10.0 Volt or PWM (for modulating condenser fan)
- 1 output to connect a remote keyboard (max 2 remote keyboards)
- 1 LAN to connect an i-o expansion module (ICX207D)
- 1 TTL output for "hot key 64" or for XJ485CX (interface module for monitoring system)

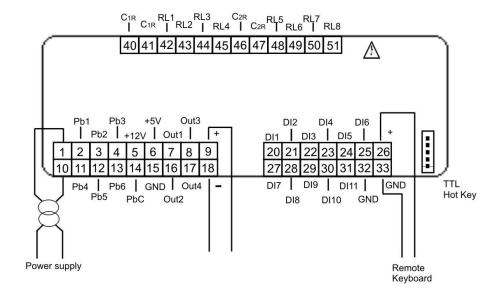


53.3 ANALOG INPUTS NTC - PTC PROBES

PbC = common terminal Pb1...Pb6 = probe inputs

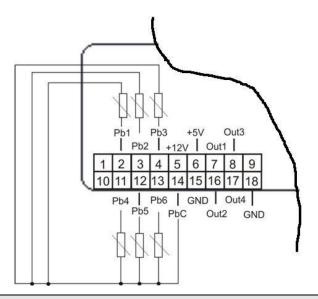


53.4 DIGITAL INPUTS

GND = common terminal **ID1...ID11** = digital inputs

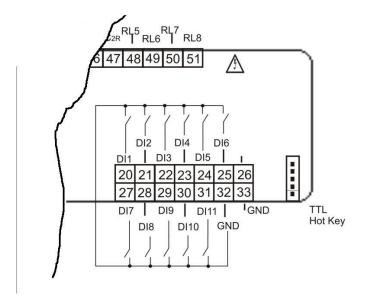


53.5 ANALOG INPUT FOR PRESSURE TRANSDUCER PP30 (4 ÷ 20MA SIGNAL)

12V = power supply for pressure transducers Pb3 and Pb4 = pressure transducer inputs

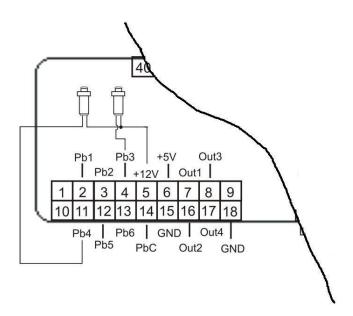

53.6 ANALOG INPUT FOR PRESSURE RATIOMETRIC TRANSDUCER PPR30 (0 \div 5V SIGNAL)

+5V = power supply for pressure transducers **GND** = ground for pressure transducers **Pb3 and Pb4** = pressure transducer inputs

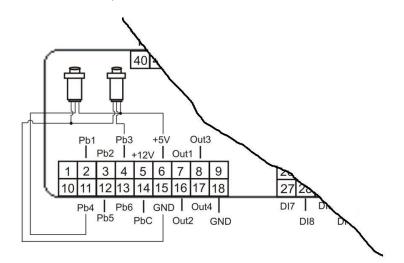


54. PWM OUTPUT FOR CONDENSING FAN SPEED CONTROL

OUT3 and OUT4 = signals for the modulation of the condenser fan **GND** = ground for pressure transducers


The compatible modules are the following: XV05PK mono-phase 500 Watt (2A) XV10PK mono-phase 1000 Watt (4A)

XV22PK mono-phase 2200 Watt (9A)

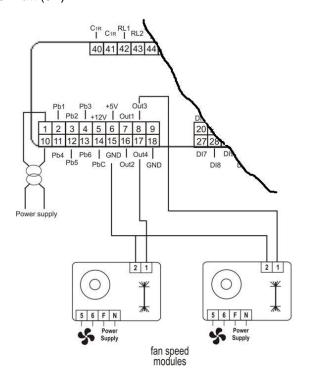


54.1 PROPORTIONAL OUTPUT FOR FAN CONDENSING CONTROL OR FOR COMPRESSOR INVERTER CONTROLLED OR FOR AUXILIARY OUTPUTS

OUT1...OUT4 = signals for the modulation of the condenser fan **GND** = ground for pressure transducers

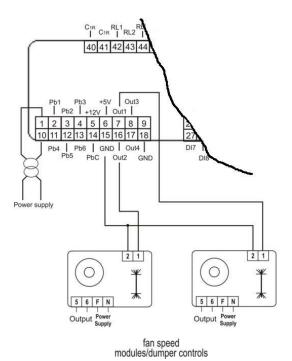


54.2 PROPORTIONAL OUTPUT 0..10V TO CONTROL DUMPER MOTORS

OUT1...OUT4 = signals for the modulation of the dumper motor **GND** = ground

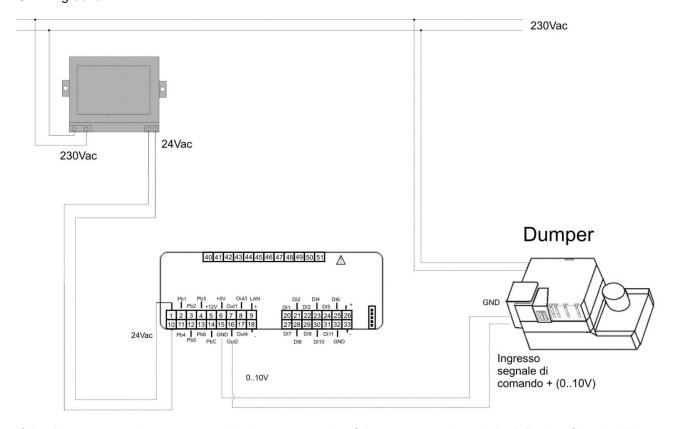


If the dumper motor has a common line between a pole of the power supply and the "-" pole of the 0..10V signal, it is necessary to use two transformers for the power supply of the controller Ichill and the power supply of the dumper motor.

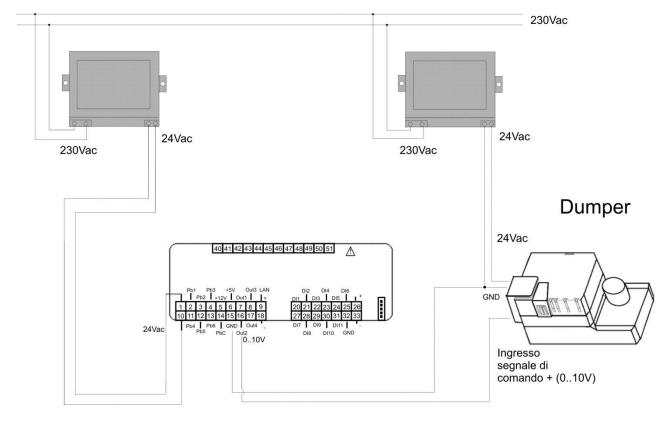


54.3 PROPORTIONAL OUTPUTS CONFIGURED FOR AUX RELAY CONTROL

OUT1...OUT4 = signals for relays **GND** = ground

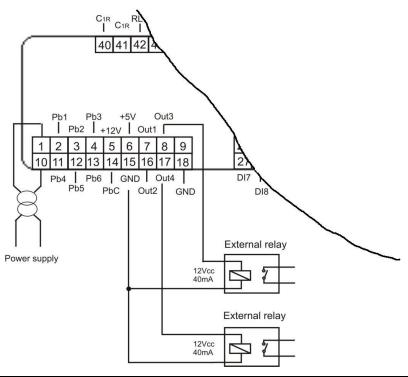


54.4 HOT KEY 64 CONNECTION

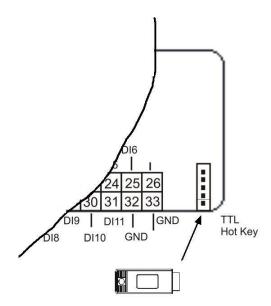

54.5 XJ485CX CONNECTION

The XJ485CX interface is a signal converter (from TTL to RS485). The RS485 uses two terminals (+) and (-) that must be connected respecting the polarity. Use the CAB/RS02 to connect the XJ485 interface to the TTL connector.

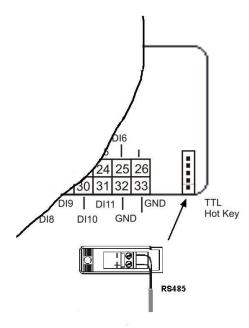


55. REMOTE KEYBOARS CONNECTION (VI620CX EVO OR V21820)


It is possible to connect to the instrument up to two remote terminals VICX620 EVO, available with or without temperature sensor on board, or a keyboard V2I820, with LCD display and no probe on board; the use of keyboards VICX620 EVOexclude the possibility of using the keyboard Visograph and vice versa. Parameters CF54 and CF55 allow to enable the keyboards VICX620 EVO; the parameter CF84 allows to enable the V2I820 keyboard.

If the remote terminal VICX620 is provided with probe board, the temperature adjustment can be performed with the probe of the terminal.

The connection of remote terminals must be done using a shielded and twisted cable (eg Belden 8772, sections 1 mm2) except in cases where the distance between the keyboard and the controller is limited (a few meters) and wiring cables remains far from noise sources (for example power cables); the overall maximum distance of the connection (both in case of connection to one or two terminals) is 100 meters. In case of lack of communication between the device and the keyboard (wrong connection, wrong parameters configuration), the display shows the message "noL" (no link).

When using two keyboards VICX620 you must configure the dip switch on the rear of the same, giving the first keypad address 1 and 2 to the second keypad.

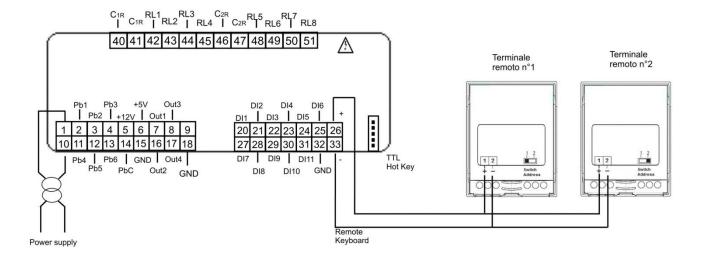

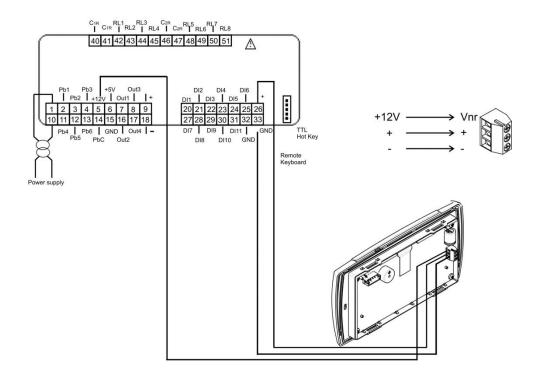

56. I/O EXPANSION CONNECTION

Through the I/O expansion is possible to increase the number of probes, digital inputs, relay and analog outputs.

The I/O expansion does not regulate independently but is only an actuator; the configuration of the inputs and outputs must be made through EI parameters in the IC200CX EVO map.

The connection diagrams of the I/O expansion are shown in the manual of the expansion.

The connection to the Ichill is done via LAN.

To configure the expansion is necessary to:

- enable expansion presence via parameter CF78 "Presence expansion card I / O"
- configure the address of communication with the iCHILL with parameter EI01
- configure expansion ICX207D the communication address via dip-switch, which must match the address set in parameter EI01 of the Ichill
- configure the inputs and outputs using the parameters El02...El43 of the Ichill
- · connect the iCHILL and expansion according to the diagram showed below


In case of lack or loss of LAN communication, adjustment dell'Ichill is immediately blocked.

The maximum length of the LAN connection is 30 mt.

The address of LAN communication with the controller iCHILL EVO series must be set via dip-switch.



| | | 1 | 2 | 3 | 4 | Ι, , | |
|------|----|-----|-----|-----|-----|-----------|----------|
| Adr. | 0 | OFF | OFF | OFF | OFF | \bigvee | Not used |
| Adr. | 1 | ON | OFF | OFF | OFF | | |
| Adr. | 2 | OFF | ON | OFF | OFF | | |
| Adr. | 3 | ON | ON | OFF | OFF | | |
| Adr. | 4 | OFF | OFF | ON | OFF | | |
| Adr. | 5 | ON | OFF | ON | OFF | | |
| Adr. | 6 | OFF | ON | ON | OFF | | |
| Adr. | 7 | ON | ON | ON | OFF | | |
| Adr. | 8 | OFF | OFF | OFF | ON | | |
| Adr. | 9 | ON | OFF | OFF | ON | | |
| Adr. | 10 | OFF | ON | OFF | ON | | |
| Adr. | 11 | ON | ON | OFF | ON | | |
| Adr. | 12 | OFF | OFF | ON | ON | | |
| Adr. | 13 | ON | OFF | ON | ON | | |
| Adr. | 14 | OFF | ON | ON | ON | | |
| Adr. | 15 | ON | ON | ON | ON | | |

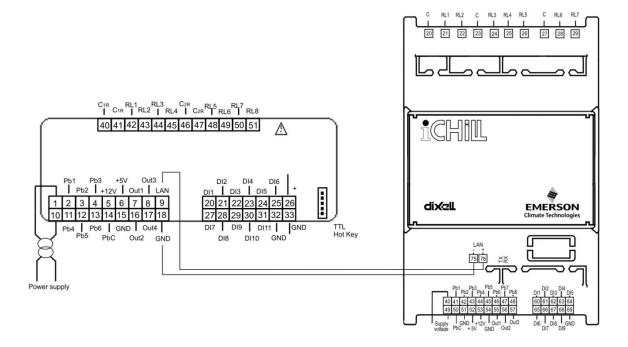

57. IEV ELECTRONIC EXPANSION VALVE CONNECTION

The Ichill 200CX EVO can be connected to the IEV electronic expansion valve driver.

The driver IEV regulates superheating autonomously; the connection to the controller Ichill is needed to synchronize the operation of the chiller or heat pump with the valve operation.

The configuration parameters, the setting of superheat control must be performed in the driver IEV.

The probe of the evaporation temperature has to be connected to the driver while the evaporation pressure probe can be connected to the controller or the driver Ichill IEV.

The connection to the Ichill is done via LAN.


To configure the driver IEV is necessary:

- enable in the Ichill the driver connection, via parameters CF79 "Presence expansion valve circuit 1" and CF80 "Presence expansion valve circuit 2"
- configure in the Ichill the communication address with the valve driver, via parameter CF81


- configure in the driver valve the address for communication with the Ichill with parameter Ec47 (must match the address set in parameter CF81 of the Ichill)
- set in the Ichill if the evaporation pressure probe is connected to the Ichill or to the IEV driver (parameter CF82)
- set in the IEV driver if the evaporation pressure probe is connected to the Ichill or to the IEV driver (parameter Ec2)
- · connect the Ichill and expansion according to the diagram below

In case of lack of LAN communication, the adjustment dell'Ichill is immediately blocked. The maximum length of the LAN connection is 30 mt.

Connection with separate transformer.

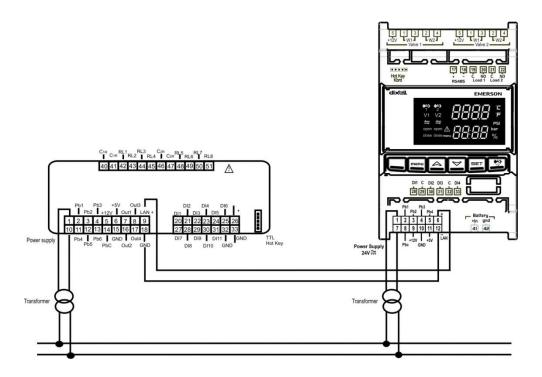

Connection with the same transformer (the power supply of the Ichill and expansion I / O must be 24 Vac/dc).

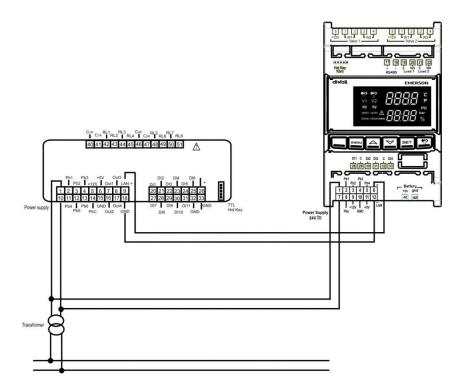

58. I/O EXPANSION AND IEV ELECTRONIC EXPANSION VALVE CONNECTION


In caso di connessione sia all'espansione I/O che al driver espansione elettronica IEV, seguire le indicazioni del paragrafo 52 e paragrafo 53 ed accertarsi di configurare correttamente gli indirizzi di comunicazione (l'indirizzo di comunicazione tra Ichill e espansione I/O e tra Ichill e driver valvola IEV devono essere differenti).

La lunghezza massima della connessione LAN è di 30 mt.


Connessione con trasformatore unico (la tensione di alimentazione dei dispositivi devono essere equivalenti).

In case of Ichill connection to both, I/O expansion and IEV electronic expansion driver, follow the instructions in paragraph 52 and paragraph 53 and be sure to properly configure communication address (the communication address between the Ichill and I / O expansion and between Ichill and IEV must be different). The maximum length of the LAN connection is 30 mt.

Connection with the same transformer (the power supply voltage of the devices must be 24Vac/dc).

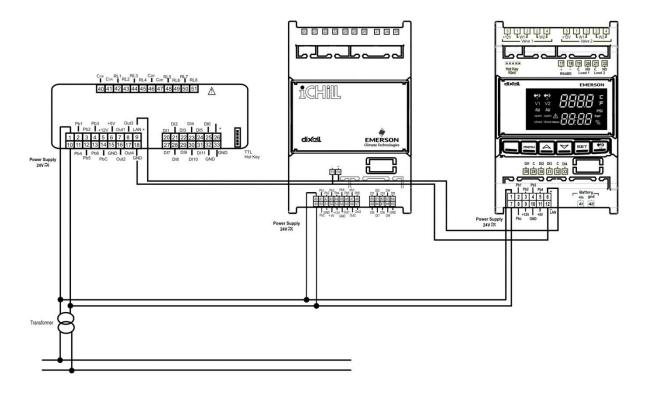

Connection with separated trasformer.

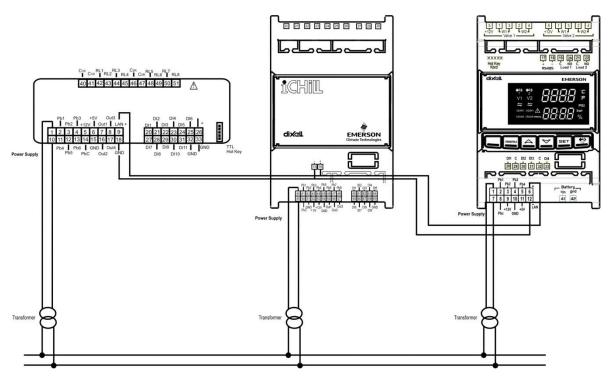


59. INSTALLING AND MOUNTING

59.1 ICHILL PANEL CUT- OUT

The instrument must be mounted on vertical panel, with panel cut-out 71x29mm, and fixed using the special bracket supplied.


Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. Ensure ventilation around the instrument.

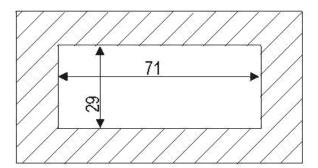


59.2 VI620CX PANEL CUT-OUT

The remote terminals are designer for panel mounting (panel cut-out 72x56 mm) and screwed with two screws.


For IP65 use gasket RGW-V (optional).

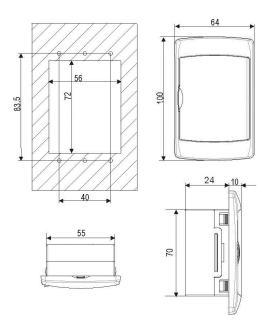

WALL MOUNTING: use the vertical V-KIT (black, white and grey) as described in the following scheme:

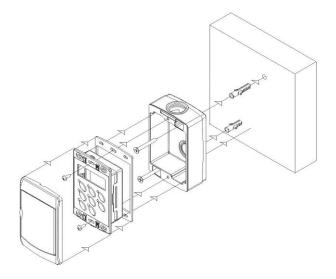

59.3 V2I820 PANEL CUT-OUT

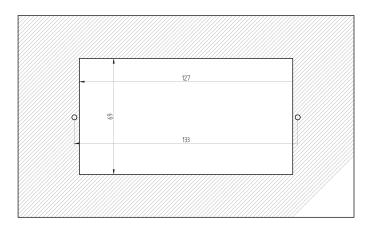

60. ELECTRICAL CONNECTIONS

The instrument is provided with:

- •2 removable terminal blocks MOLEX MICROFIT 14 and 18 ways for power supply voltage / digital and analogue inputs and modulating outputs
- •1 removable terminal blocks AMP 12 ways for the relay outputs
- •5 ways connector for TTL RS485 interface outputs

Wiring cables:

CWCXA15-KIT IC206CX 1.5mt
CWCXA30-KIT IC206CX 3.0mt
CWCXB15-KIT IC208CX 1.5mt
CWCXB30-KIT IC208CX 3.0mt

Wire size:

- signal cable AWG 24
- power supply cable AWG 22
- relay output AWG 17

General notes:


• Check the connecitons and the line voltage before turning on the power supply.


- Keep low voltage cables, such as analogue/digital inputs/outputs and probes, away from power cables and terminals.
- Respect the maximum load current of each relay output, in case of power loads use filtered contactors.

61. ACCESSORIES

61.1 MONOPHASE FAN CONTROL: 230VAC AND CUT PHASE CONTROL

| Models | XV05PK | XV10PK | XV22PK |
|--------|--------|--------|--------|
| Power | 500W | 1000W | 2200W |
| Ampere | 2A | 4A | 9.5A |

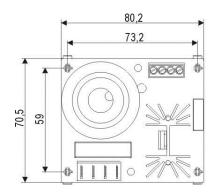

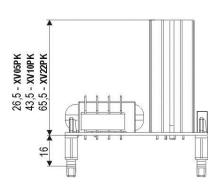

| Power supply | | | | | | |
|---------------------|------------------------------|-----------------------|--------|--|--|--|
| 230Vac | | Input | | | | |
| 0 - 230Vac | | output | | | | |
| -10 - 65°C | | Operating temperature | | | | |
| Naylon supports | | · - | | | | |
| D | 15mm | | | | | |
| Height | | | | | | |
| Model | XV05PK | XV10PK | XW22PK | | | |
| Y | 25mm | 42mm | 64mm | | | |
| Connections | | | • | | | |
| A 1(+), 2(-) | | PWM input control | | | | |
| B 3(+), 4(-) | PWM output repetition signal | | | | | |
| F | Phase | | | | | |
| N | Neutral | | | | | |
| 5 - 6 | Fan output | | | | | |

Terminals 3 and 4 allows to connect another board in parallel to control two separate fans with the same input control.

Terminals 1 / 2 / 3 / 4 are for screw for a 2.5mm wire

Terminals 5 / 6 / F / N are 6,3mm faston

61.2 WIRING KIT

CWCXA15-KIT e CWCXA30-KIT: wiring kit for IC206CX (lenght of 1,5mt or 3mt) CWCXB15-KIT e CWCXB30-KIT: wiring kit for IC208CX (lenght of 1,5mt o 3mt)



61.3 TRANSFORMER

The TF10 trasnformer models: 230/12 Vac , 230 /24 Vac, 110 / 12 Vac, 24 / 12 Vac



61.4 XJ485CX

TTL/RS485 converter to connect the Ichill to a monitoring system



61.5 RT314 KIT

Relay module (DIN rail mounting)



61.6 HOT KEY:

Parameters copying key



62. TECHNICAL DATA

Housing: self extinguishing ABS **Case:** frontal 32x74 mm; depth 60mm

Mounting: panel mounting in a 29x71mm panel cut-out

Frontal protection: IP65

Display:

Top Display 4 digits with d.p. Bottom Display 4 digits with d.p.

Power supply:

12Vac -10% ÷ +15% 50/60 Hz or

24 Vac/dc ±10% 50/60 Hz **Power consumption:** 10VA max.

Analog Inputs:

4 configurable (NTC/PTC/digital input)

2 configurable (NTC/PTC/4÷20mA/0÷5Volt/digital input) **Digital inputs:** 11 (free voltage, don't supply voltage)

Relay outputs:

IC206CX: 6 SPDT 5(2) A, 250Vac **IC208CX**: 8 SPDT 5(2) A, 250Vac

Max. current on common line: 10A **Data storing:** on the non-volatile memory (EEPROM).

Operating temperature: -10÷55 °C Storage temperature: -30÷85 °C

Relative humidity: 20÷85% (no condensing)

Measuring range: - 50÷110 °C (- 58 ÷ 230 °F) NTC / -50.0÷150 °C (-58÷302 °F) PTC or 0÷ 50 bar (0÷725

psi)

Resolution: 0,1 °C or 1 °F

Dixell°



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com